

DIY WWC

PASSENGER CAB

TIMBER

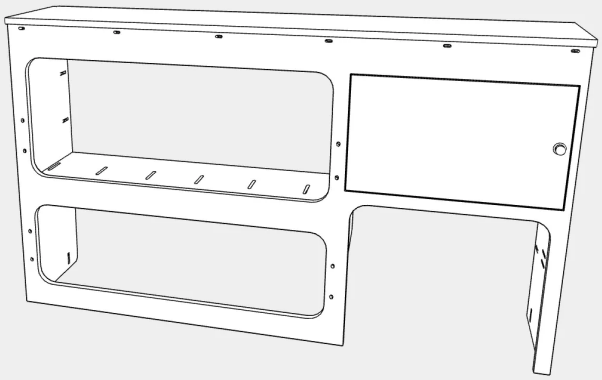




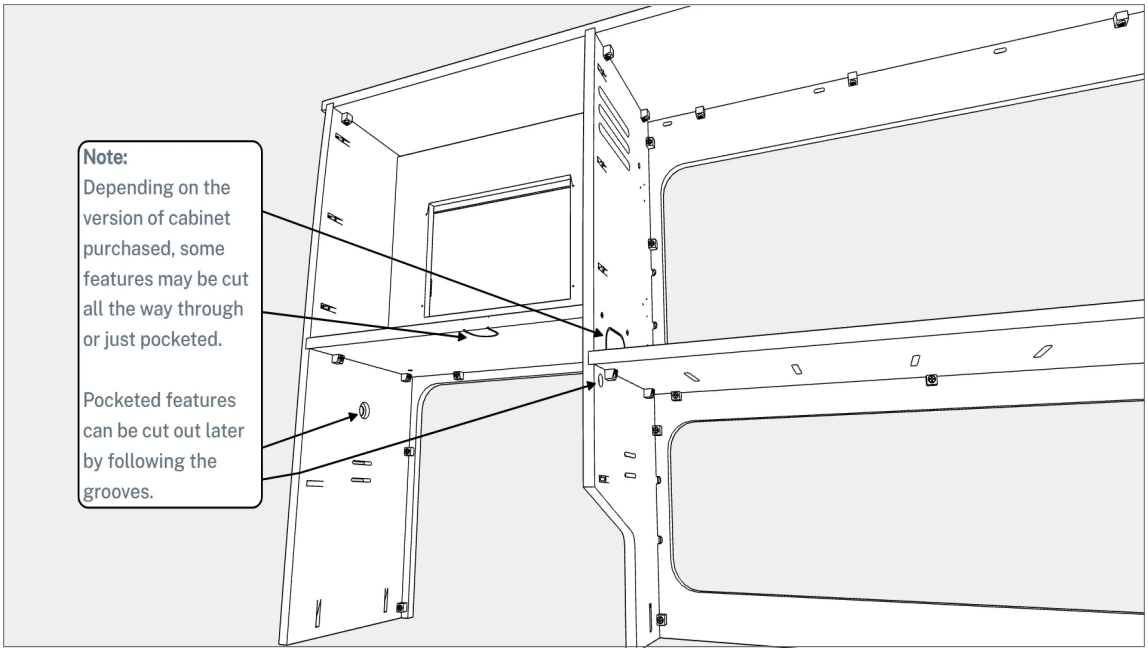

Note:
Depending on the version of cabinet purchased, some features may be cut all the way through or just pocketed.

Pocketed features can be cut out later by following the grooves.

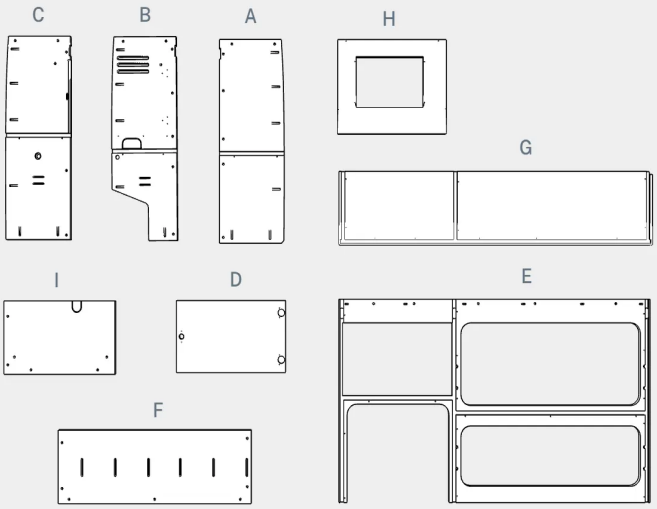

1


x42
OUT108




x42
FAS279



x1
HAR056



x2
HAR039



x2
HAR470



x7
FAS161



x14
FAS199



x5
FAS017



x4
FAS030




x12
FAS331



2


Before assembling:
sand all holes, channels, edges, and faces of wood panels to remove imperfections and achieve a smooth finish. This will help the pieces fit together cleanly. The more time spent sanding, the better the end result will be.

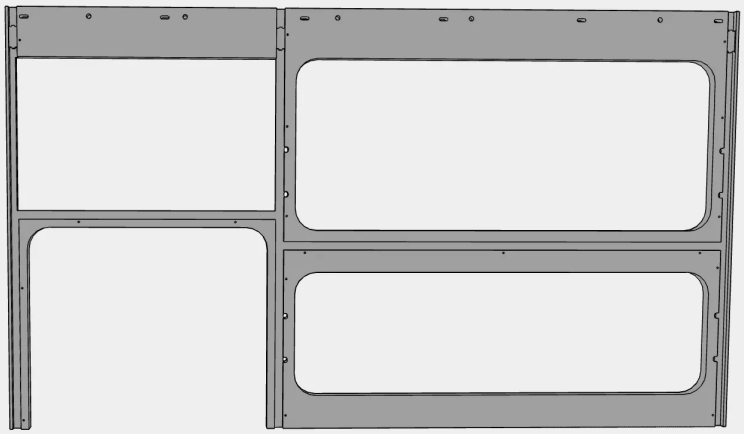

3




x4

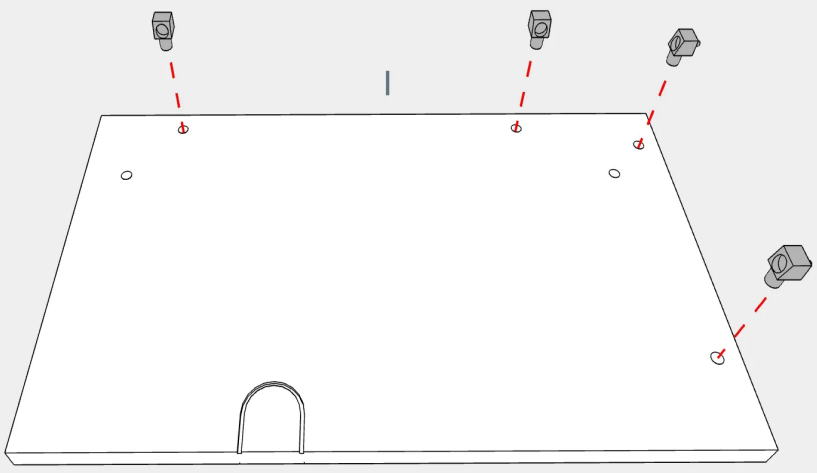

4




x7

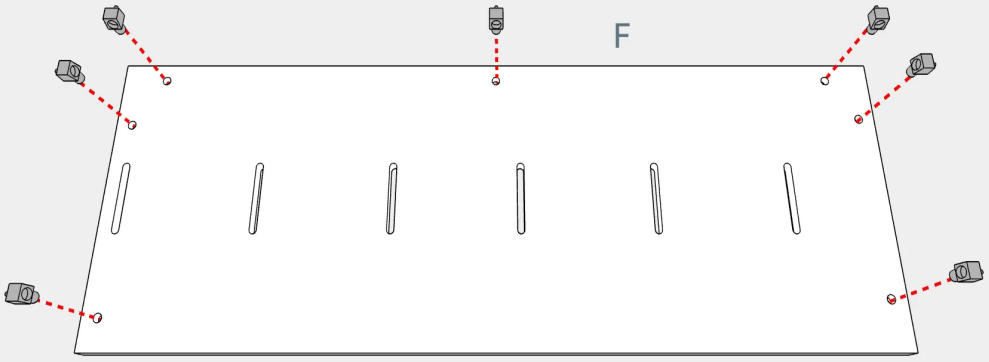


5




x5

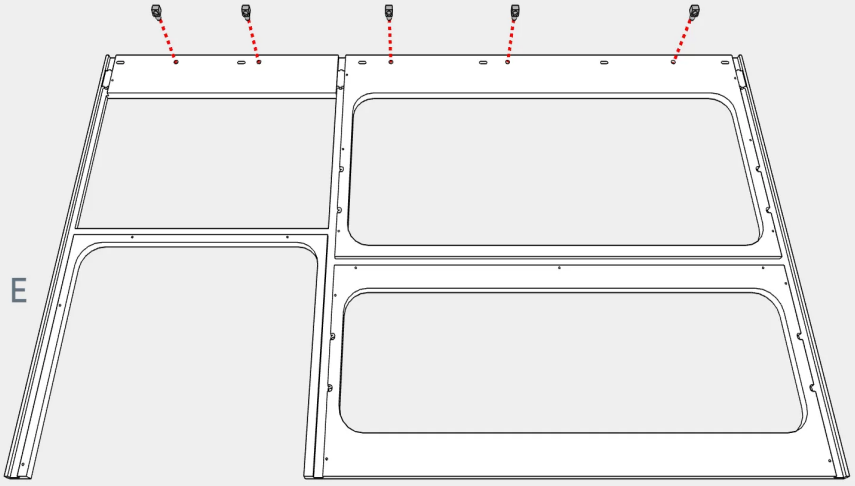

6

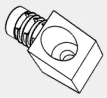


x19

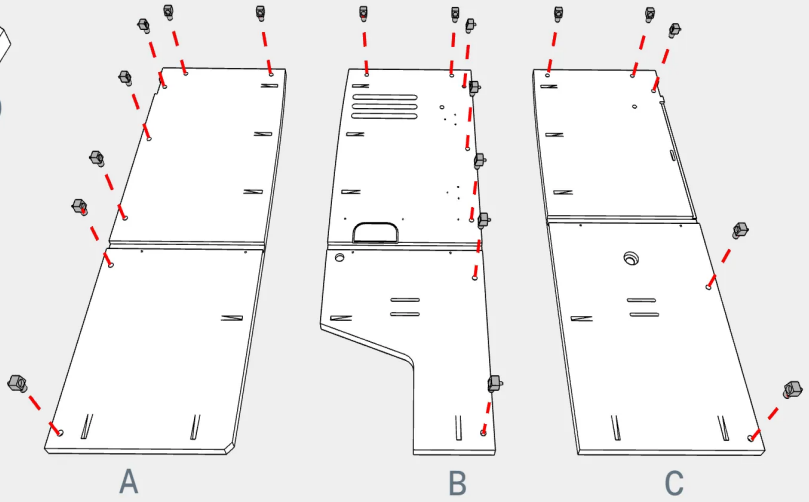


7

Note: We recommend dry-fitting wood panels before gluing to check the fit. Apply wood glue to channels where the wood panels joint, just before attaching.


Repeat for all wood joint pieces as you progress through your assembly.

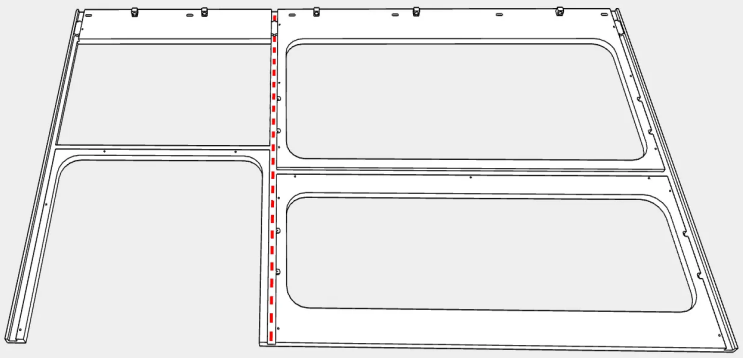


8

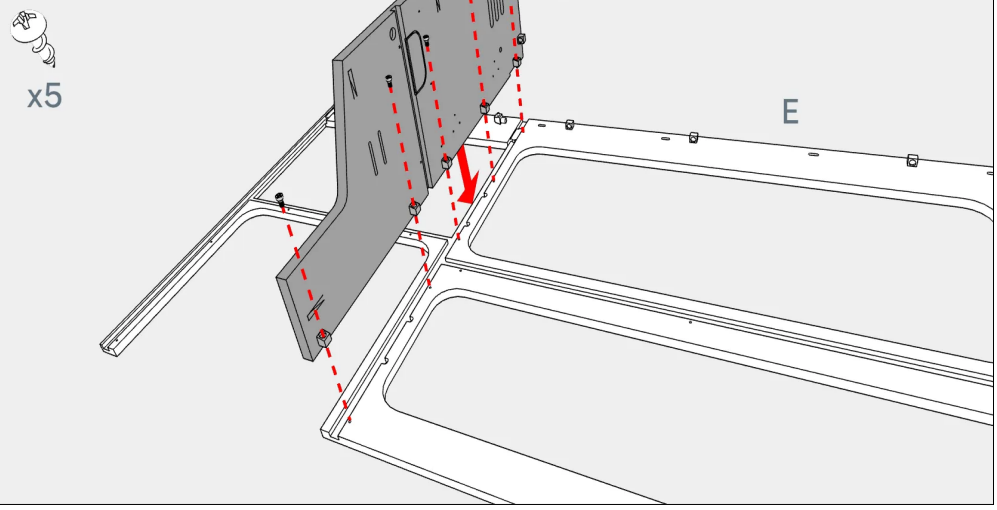


9

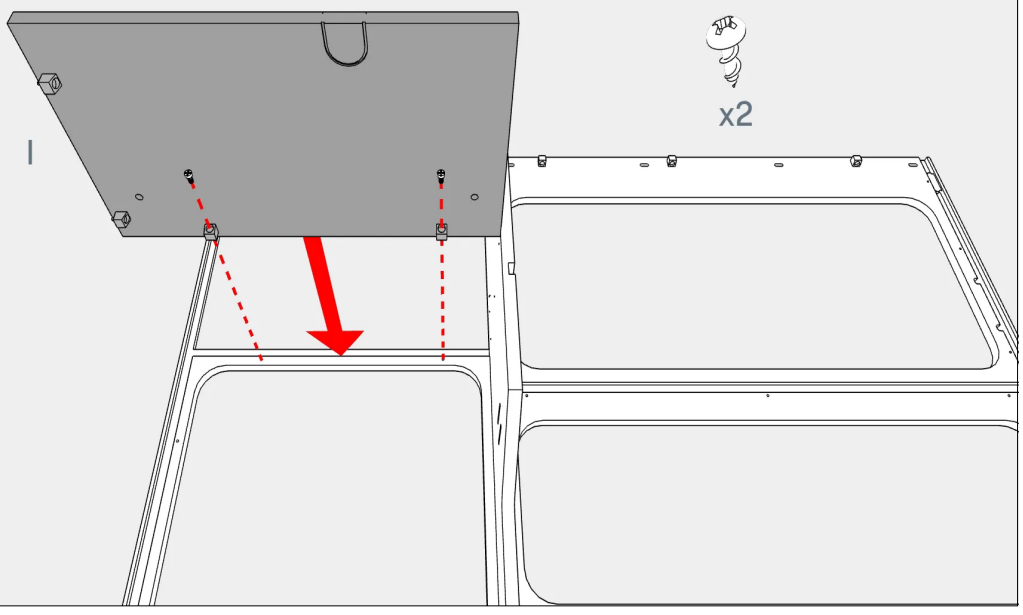


10

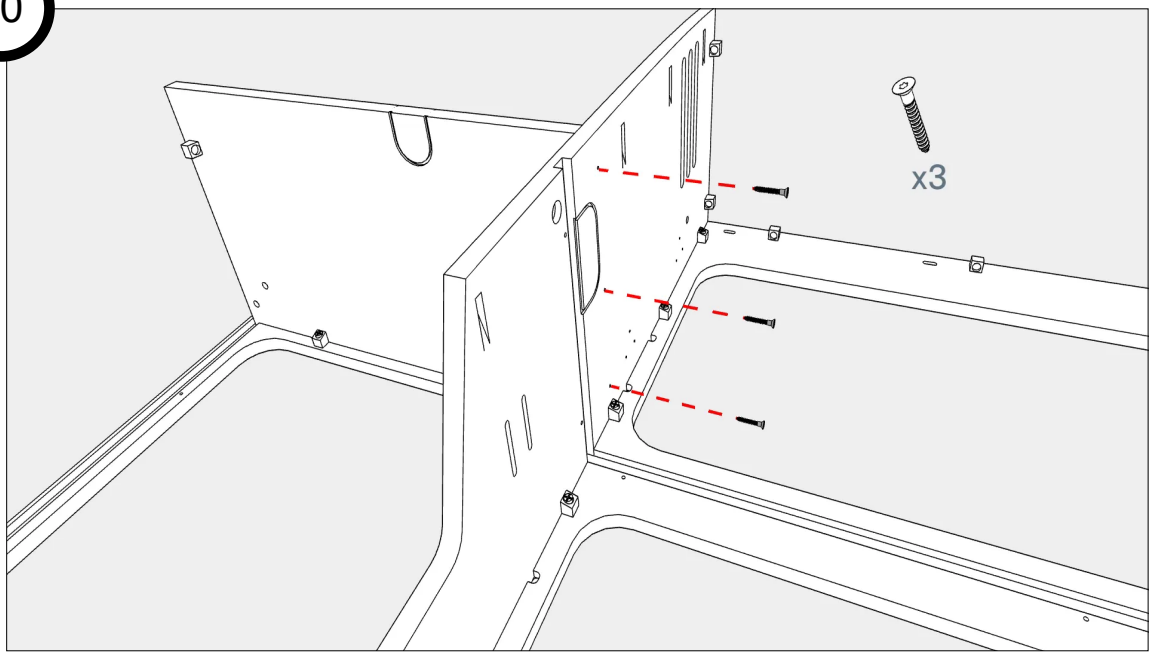


11

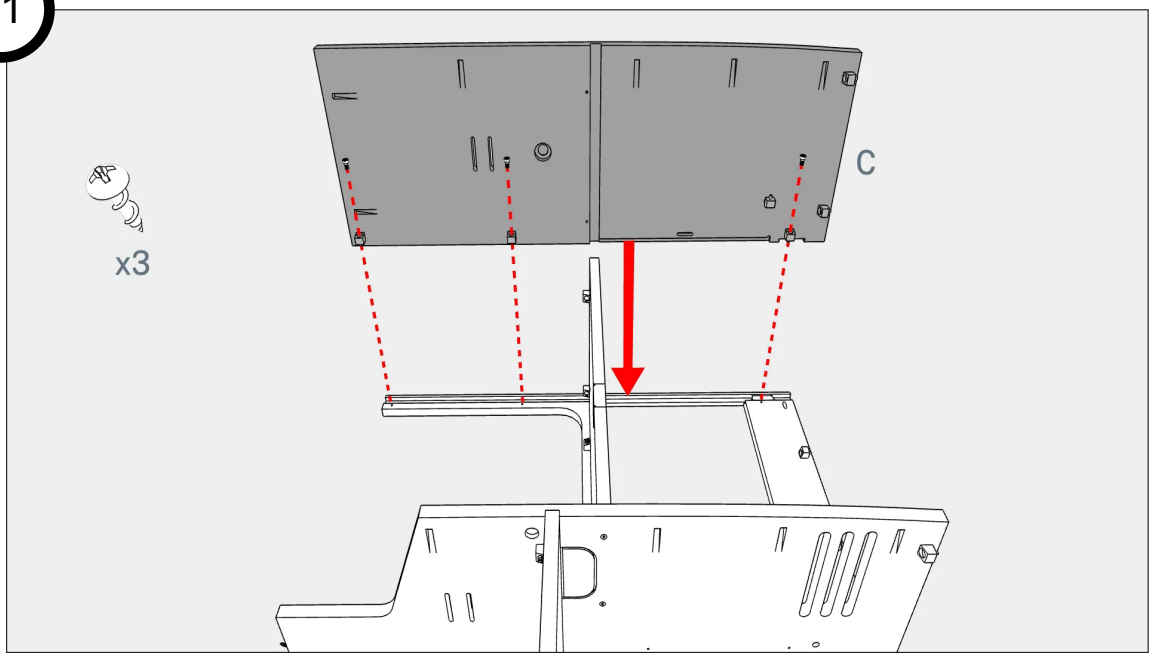


12

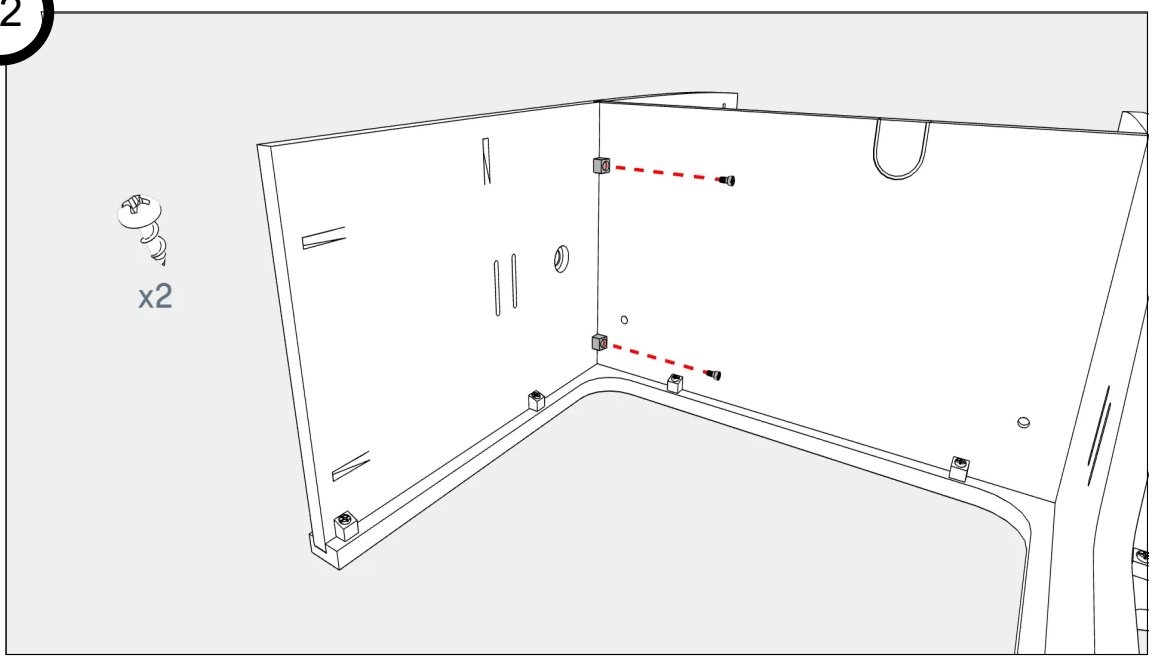


13

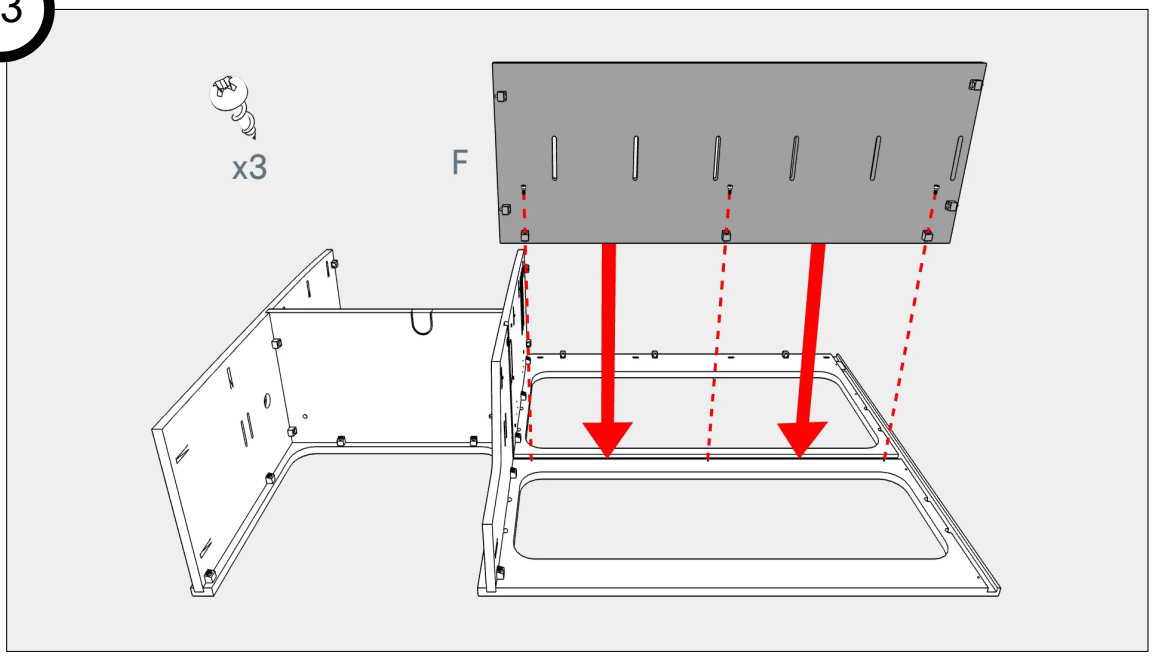


14

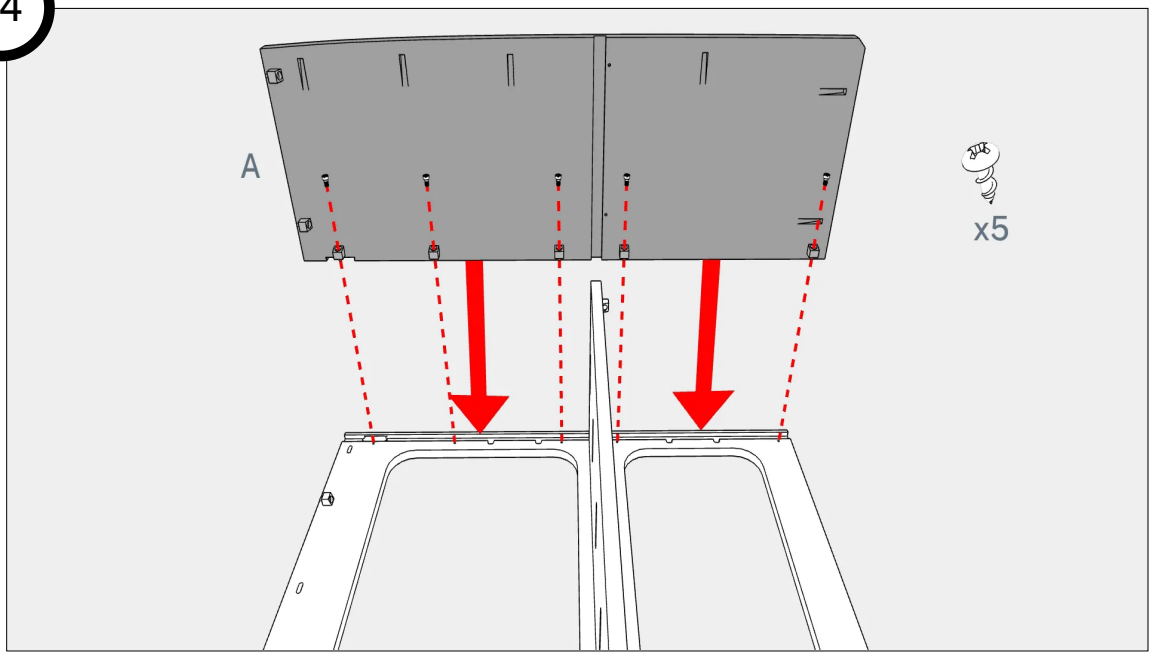


15

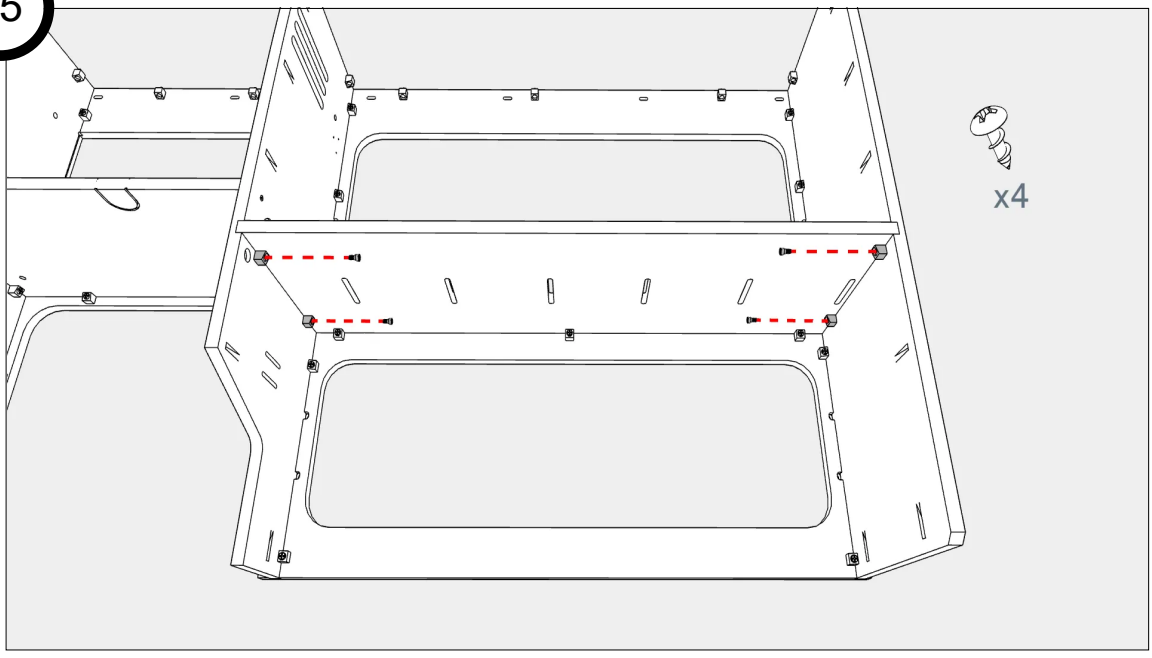


16

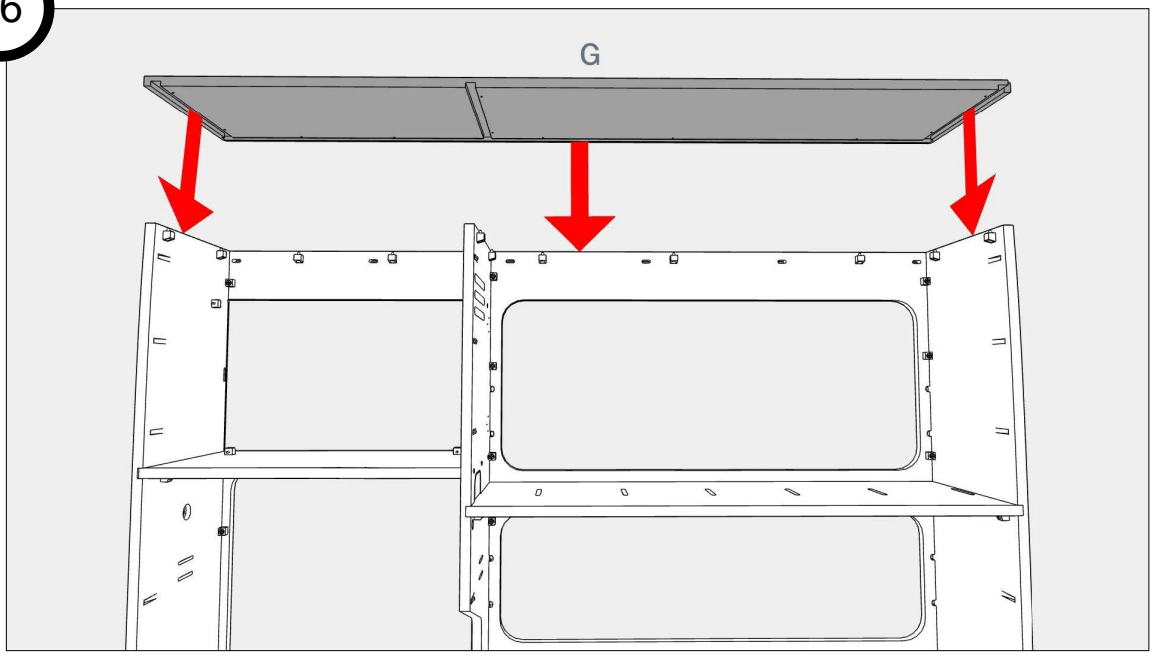

17

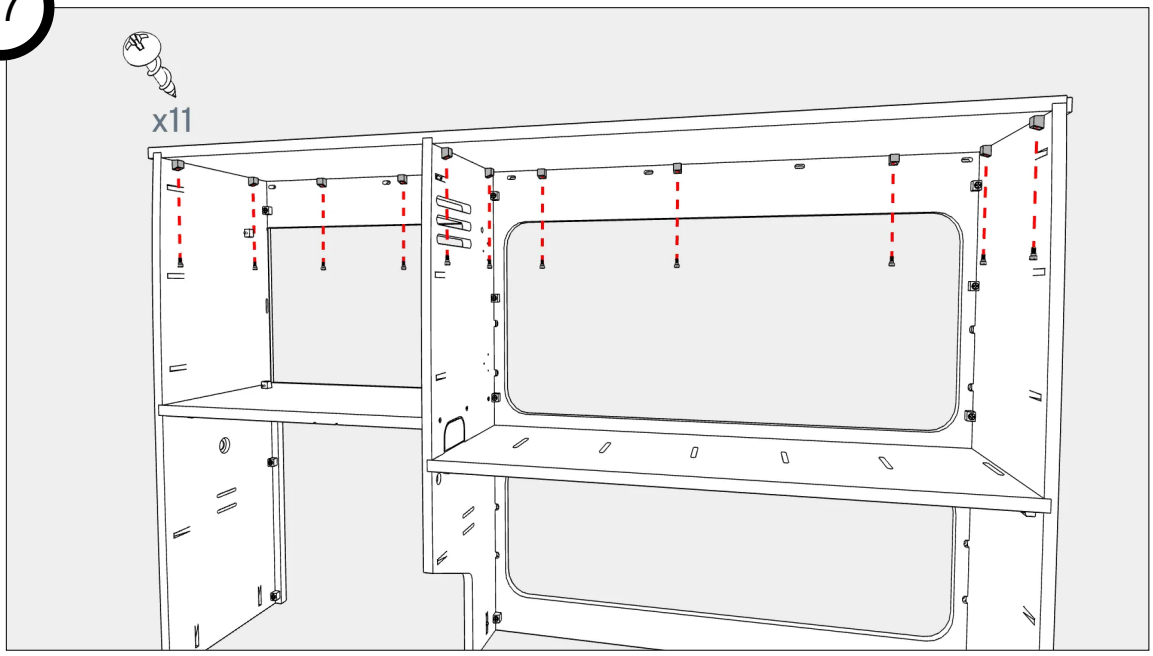


18

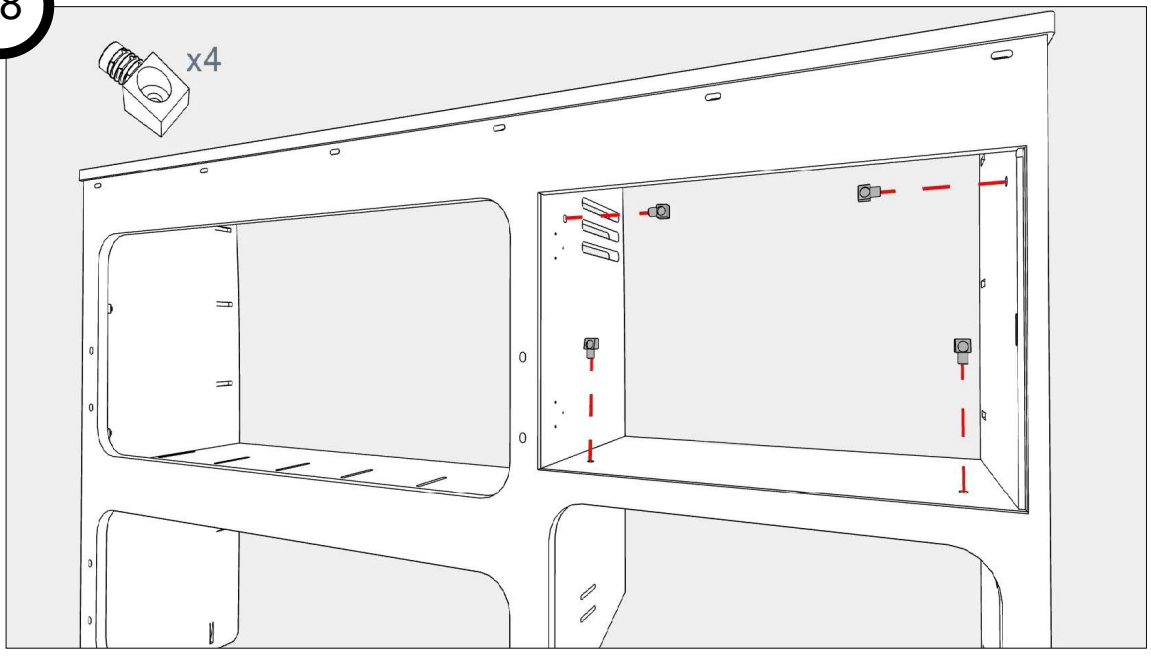


19


NOTE: For customers who bought just the bed system by itself, part H is completely optional. If you just wish to use this area for storage we'd recommend not installing part H. If you're building one of our full ship kits, panel H will be required for electrical installation

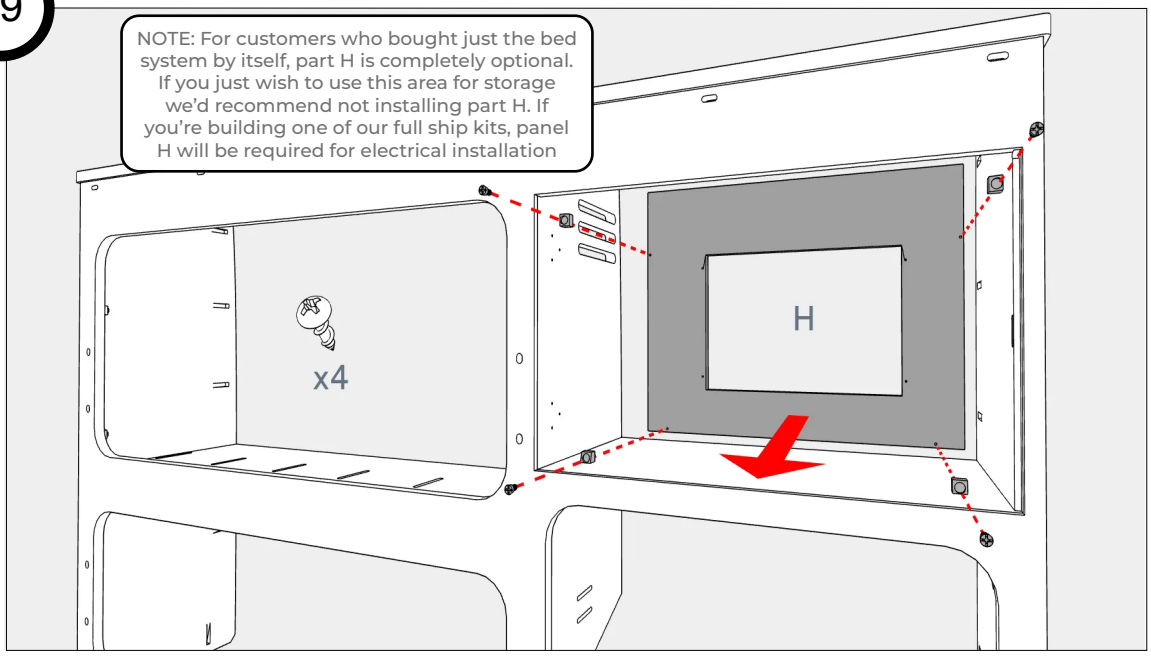

20

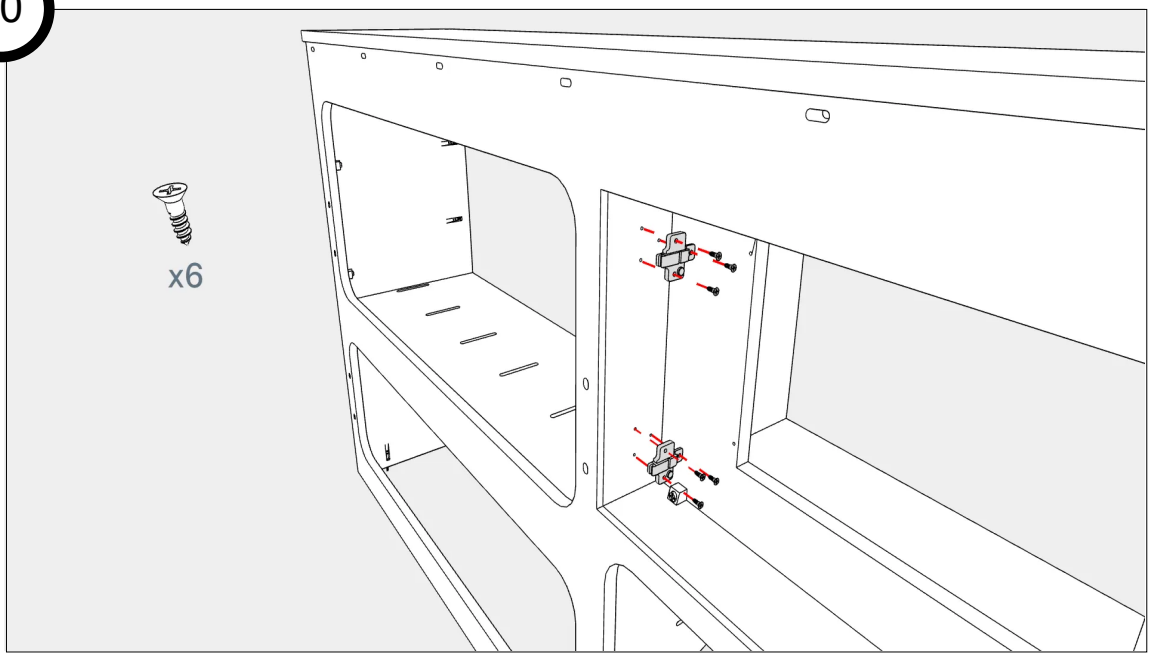


21

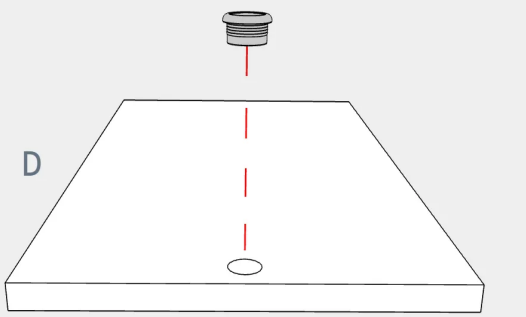


Note: Trim rings will be tight to ensure proper fit.
Please use a rubber mallet to prevent damage.


22

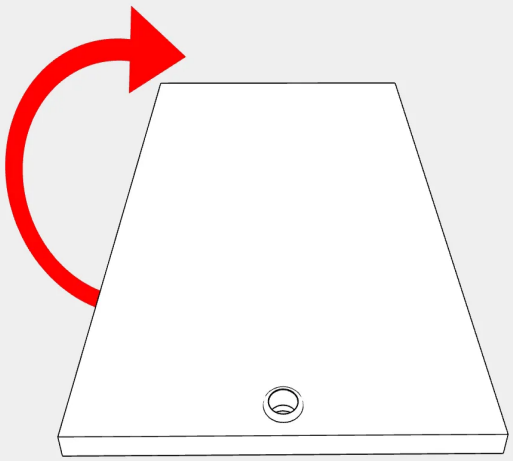


23

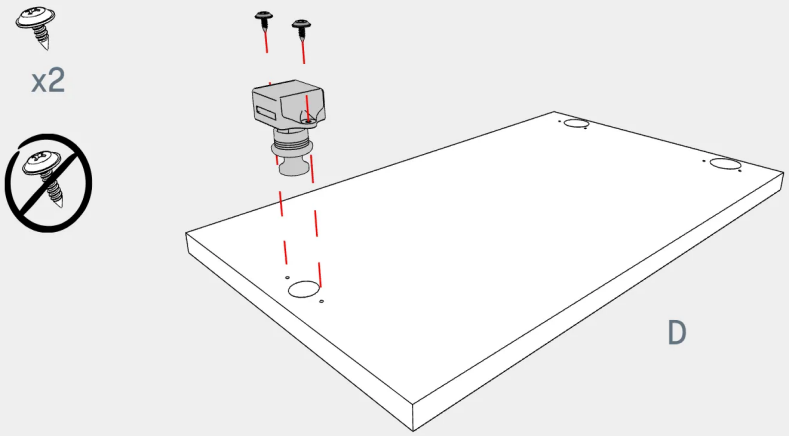



24

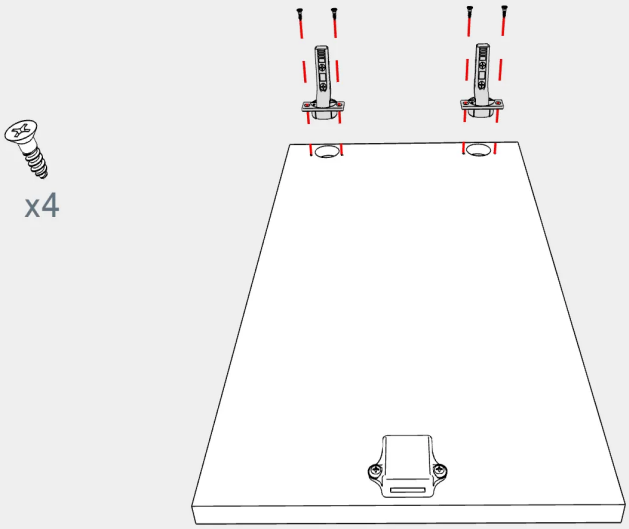


25

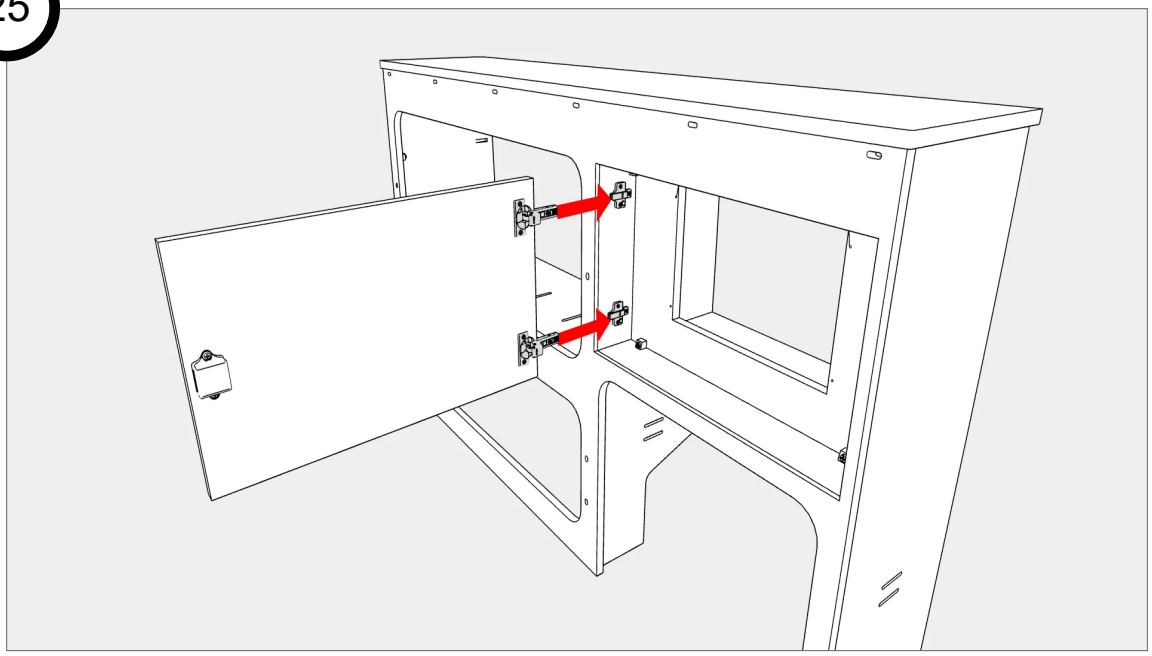


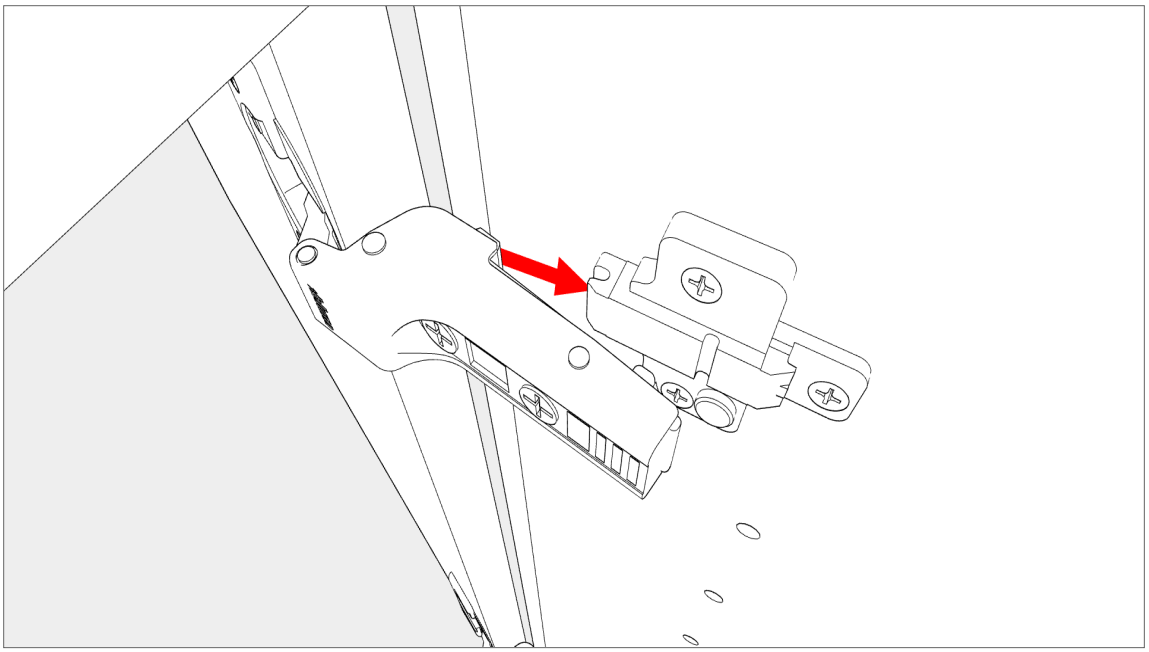

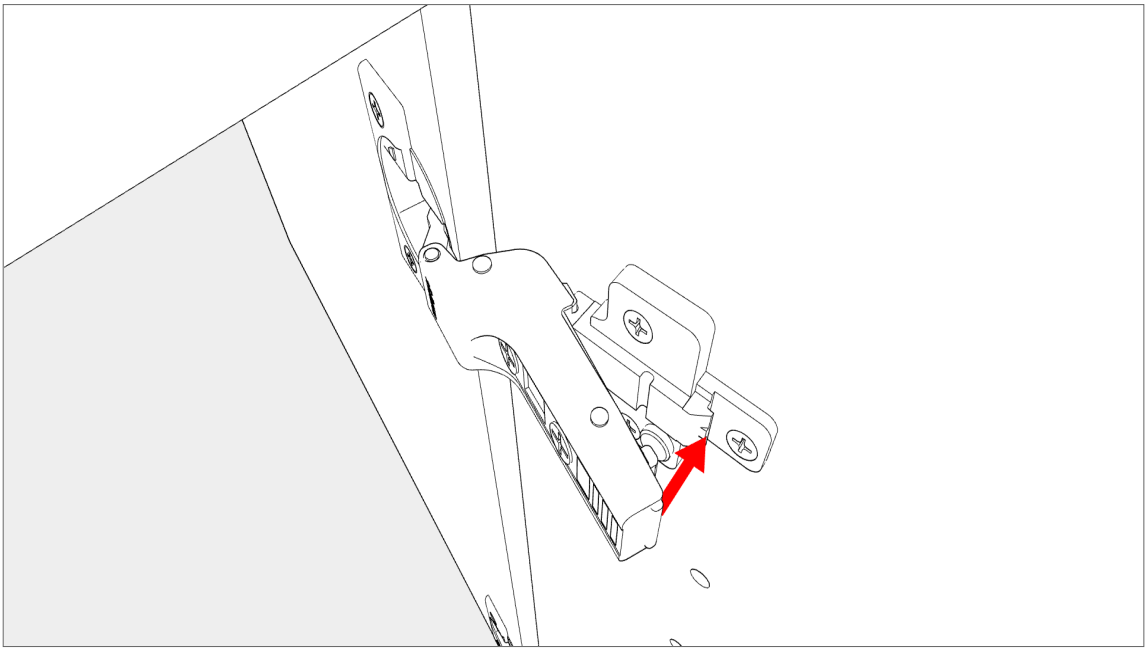

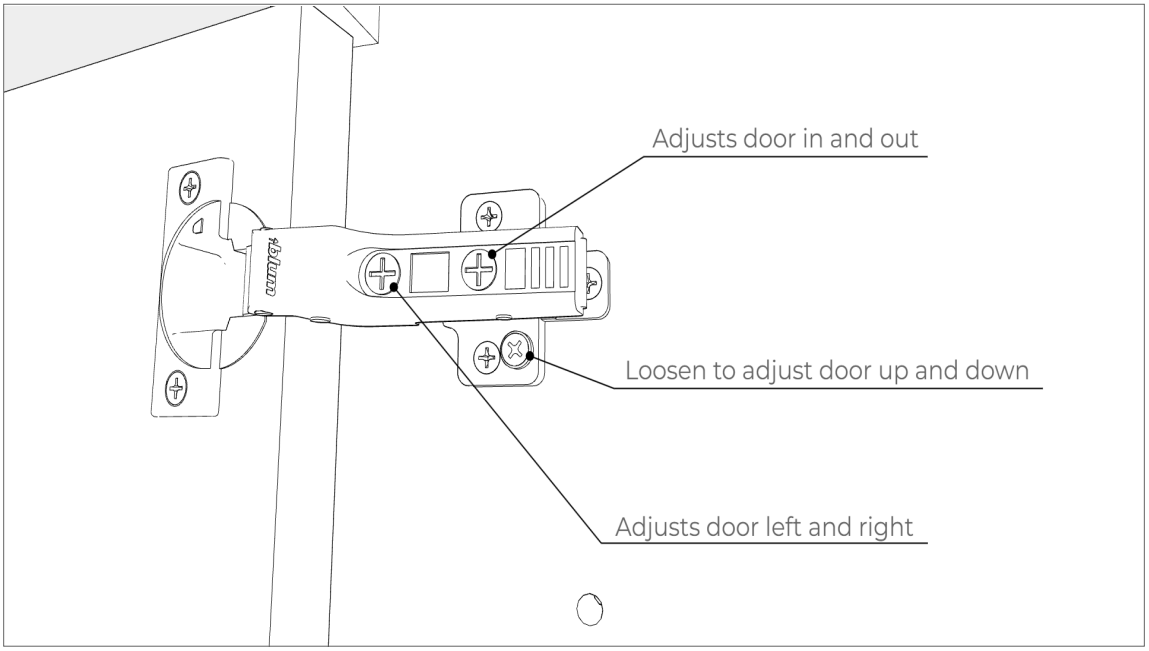

Adjusts door in and out
Loosen to adjust door up and down
Adjusts door left and right


26

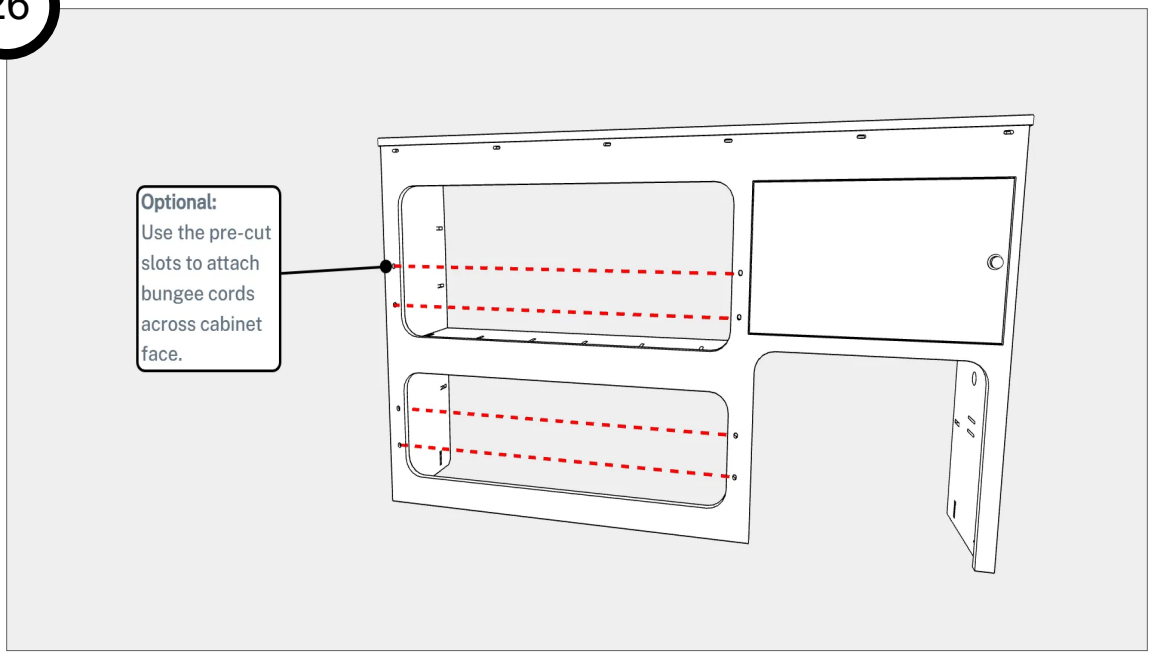

Optional:
Use the pre-cut slots to attach bungee cords across cabinet face.


DIY WWC
DRIVER CAB


TIMBER

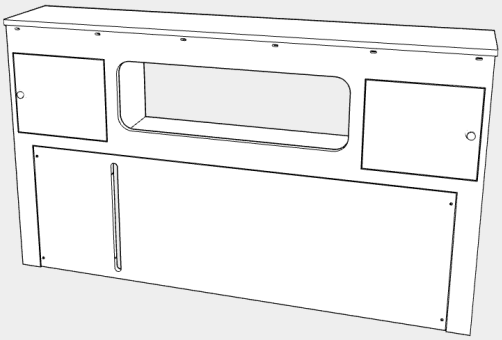

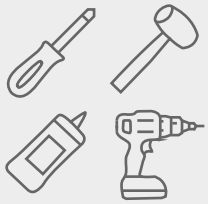

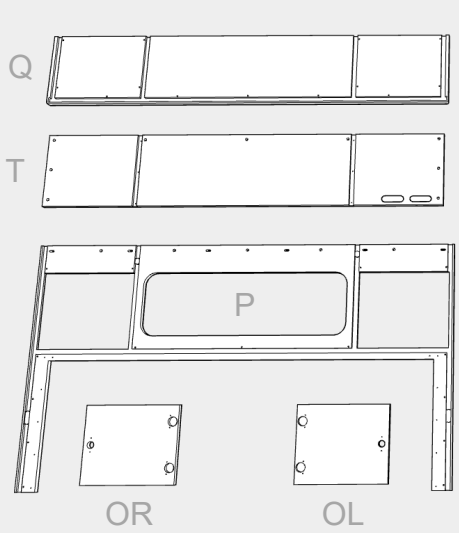

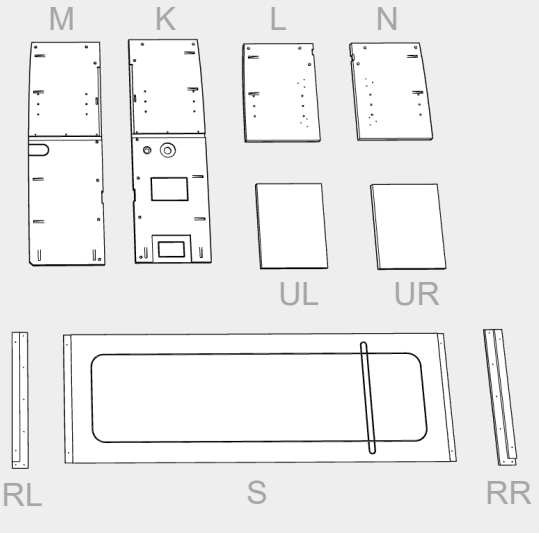





x36
OUT108 FAS279




x10
HAR010

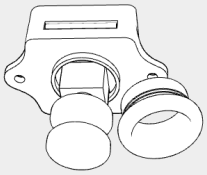

x2
HAR056

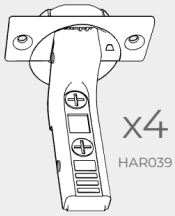

x4
HAR039



x4
HAR470



x10
FAS199



x6
FAS161




x6
FAS030



x24
FAS033




x22
FAS331

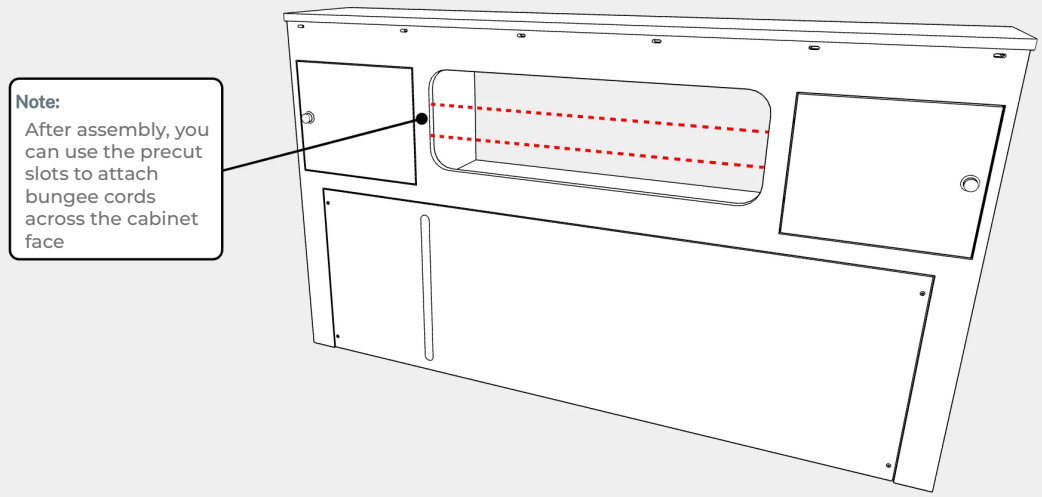


1

Before assembling:
sand all holes, channels, edges and faces of wood panels to remove imperfections and achieve a smooth finish. This will help the pieces fit together cleanly. The more time spent sanding, the better the end result will be.

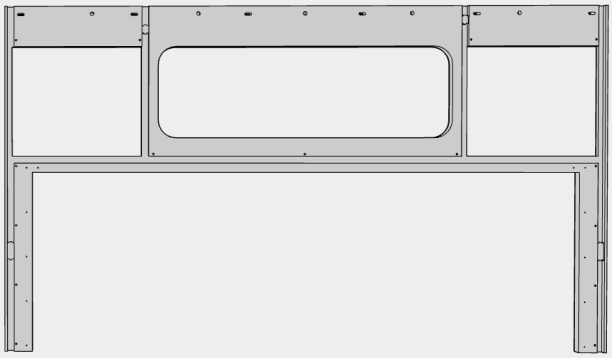


2

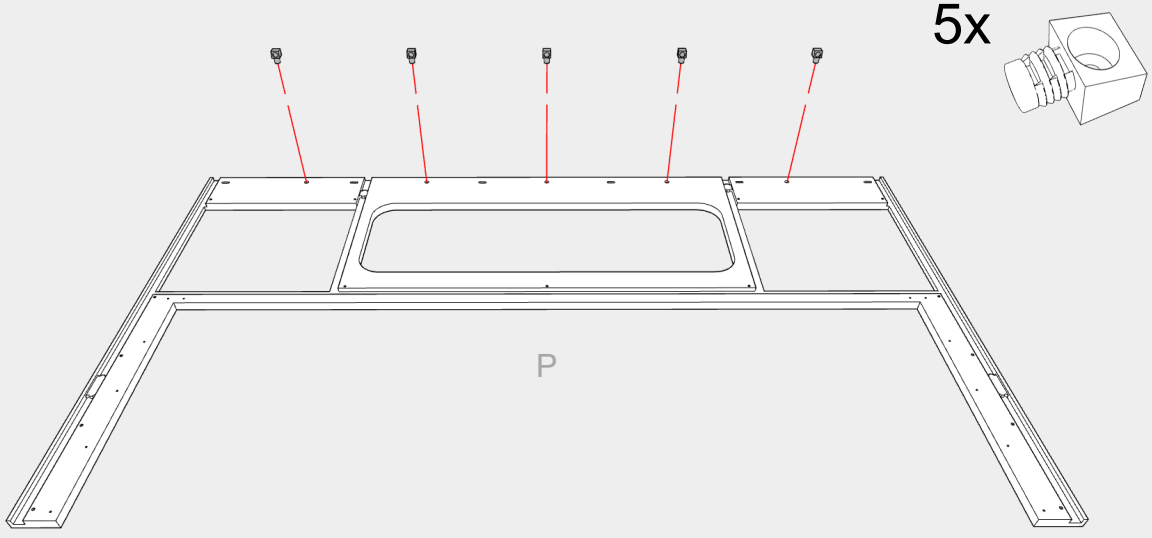

3

14x

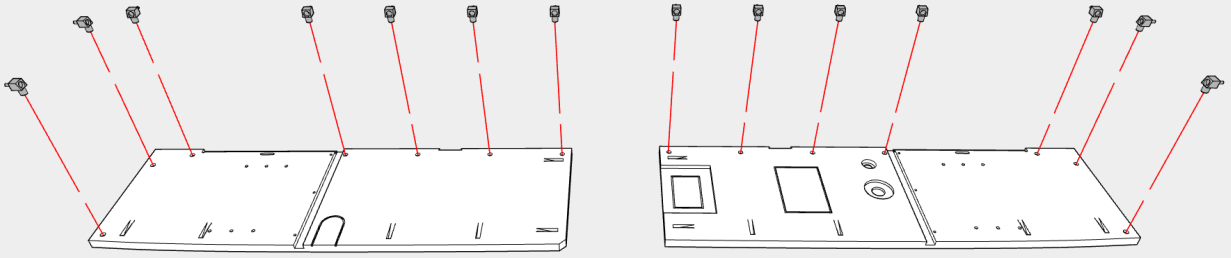


M

K

4

15x

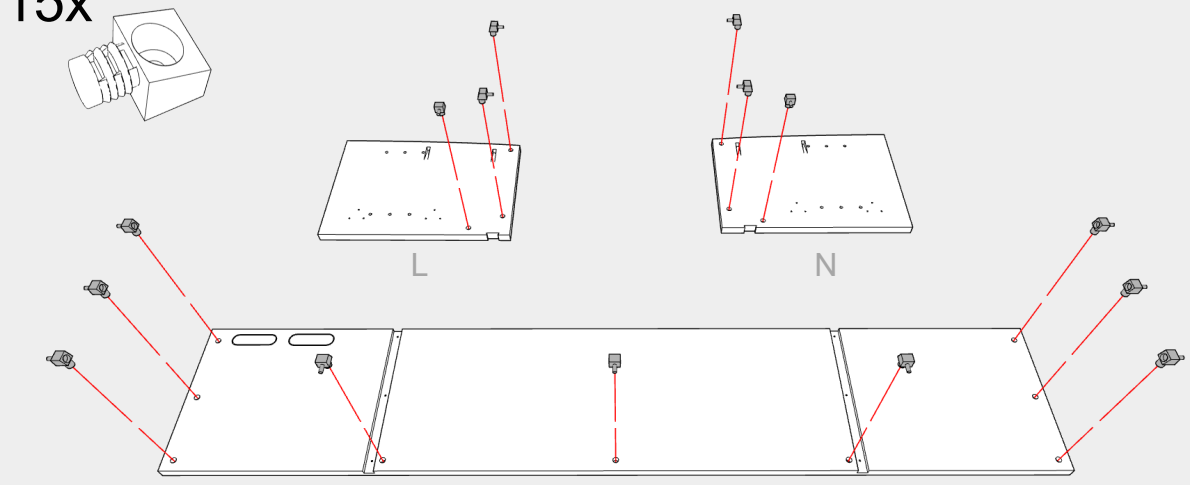


L

N


T

5

Note: We recommend dry-fitting wood panels before gluing to check the fit. Apply wood glue to channels where wood panels joint just before attaching. Repeat this for all wood joint pieces as you progress through your assembly.

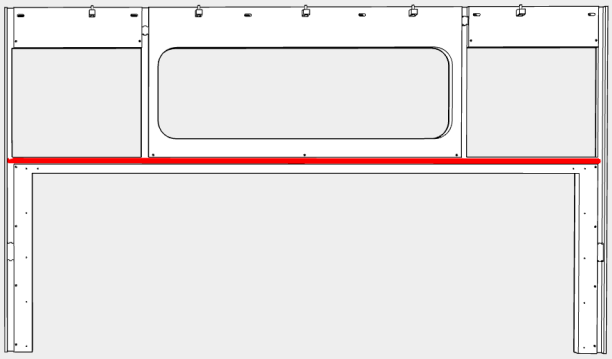


6

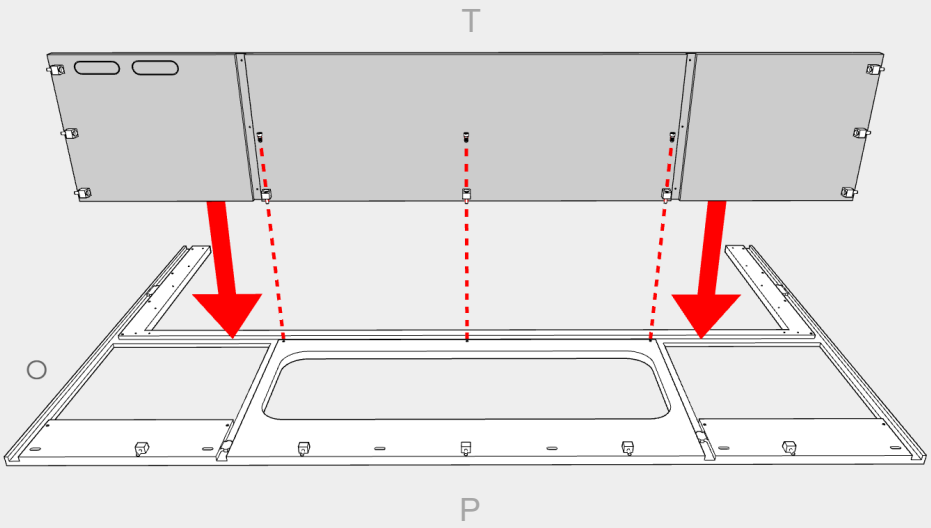


x3

7

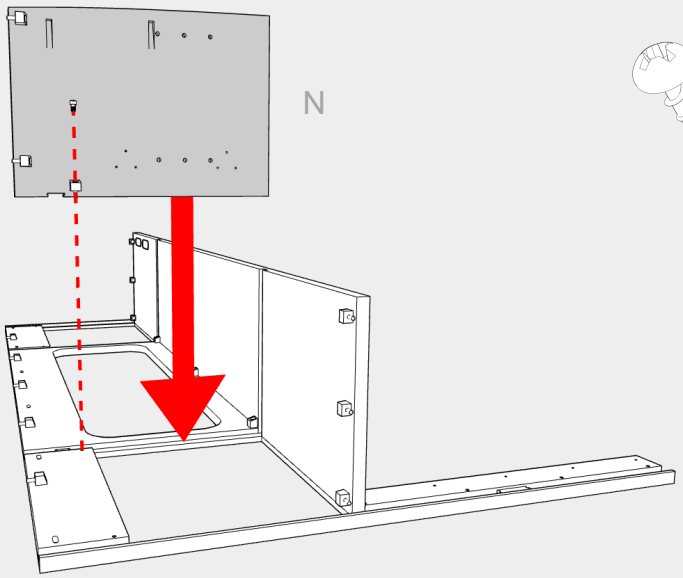


x1

8

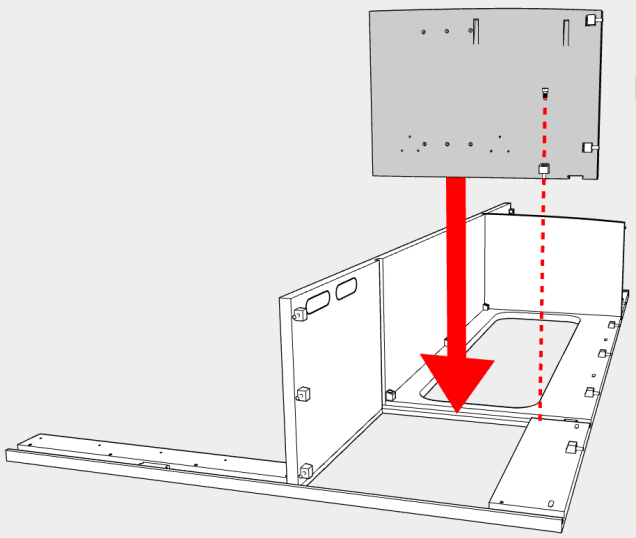


x1


9

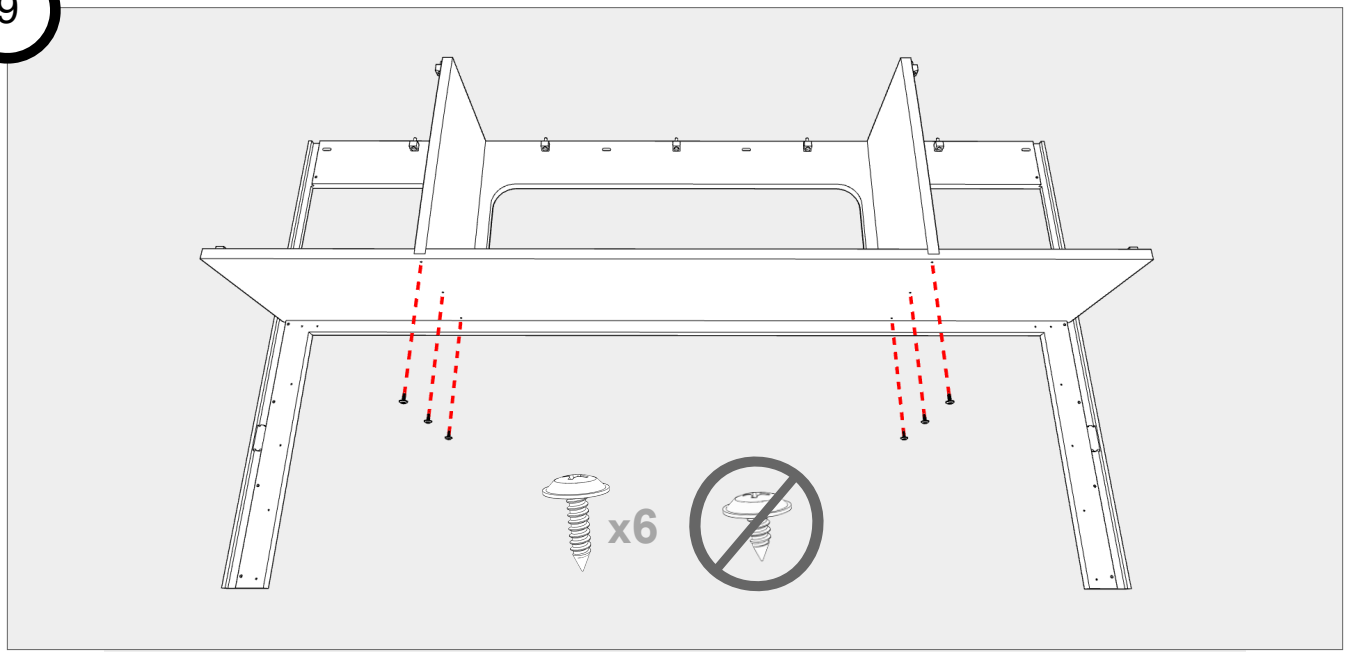


10

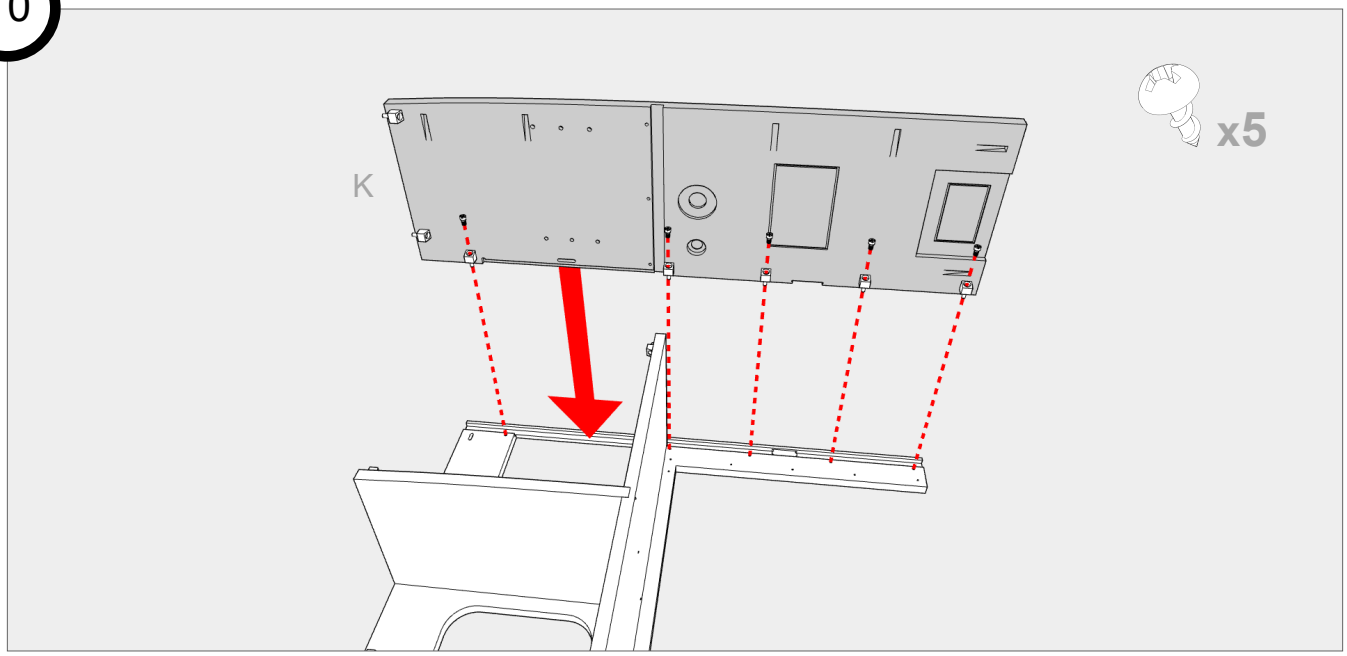


11

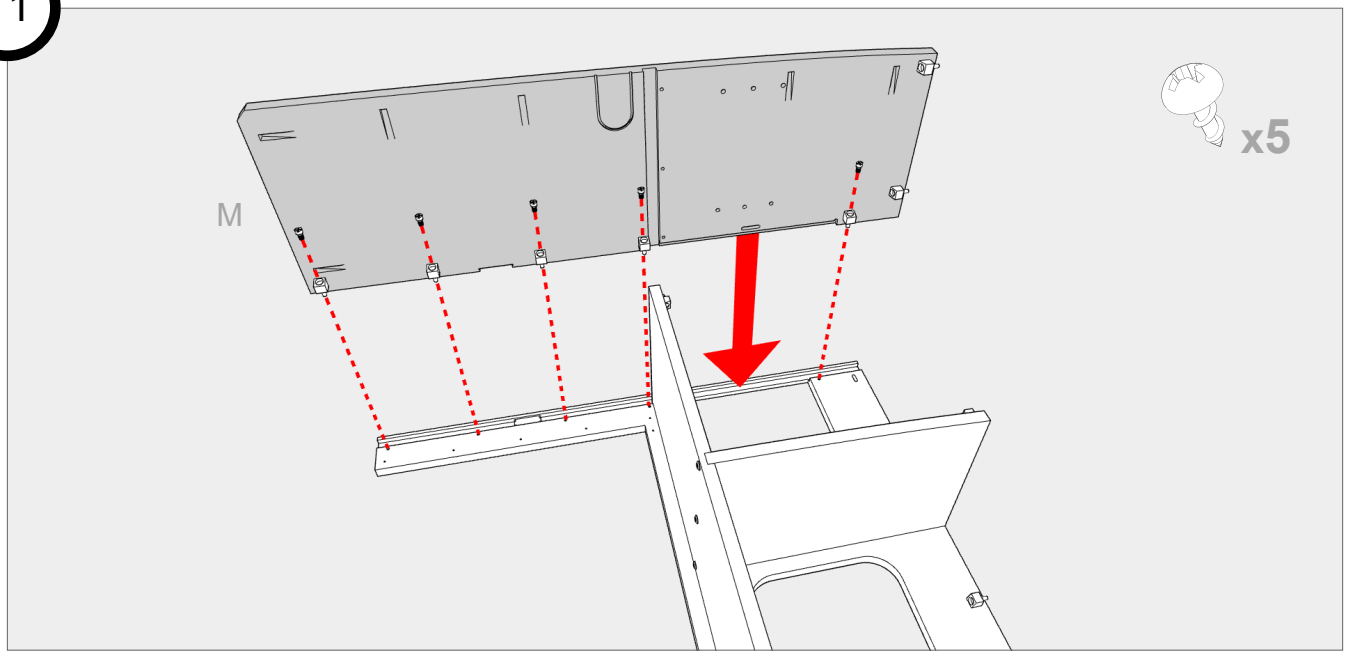


12

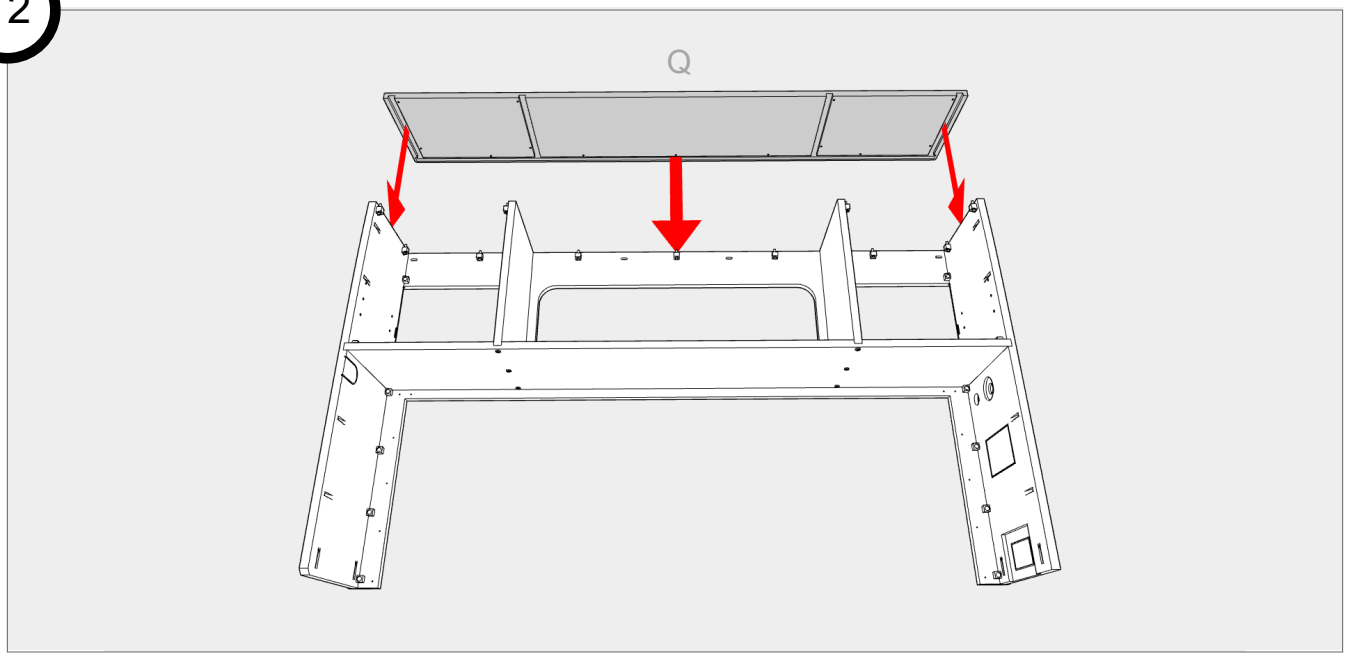


13

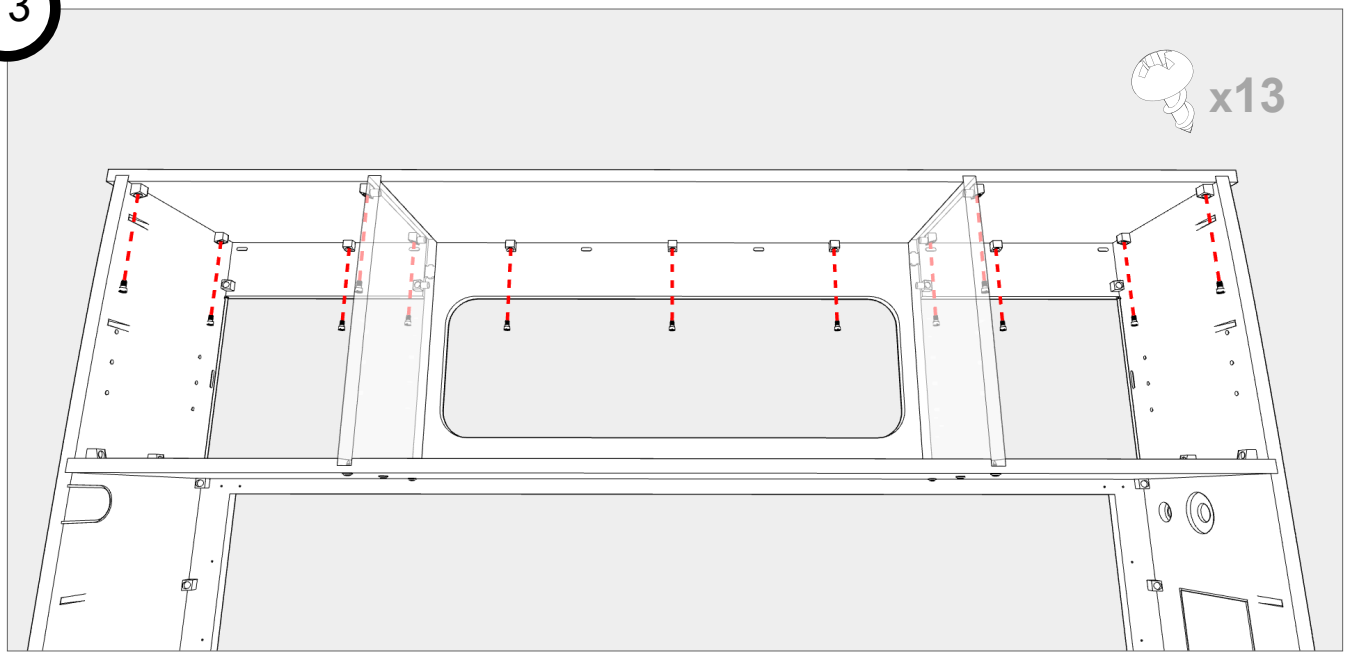


14

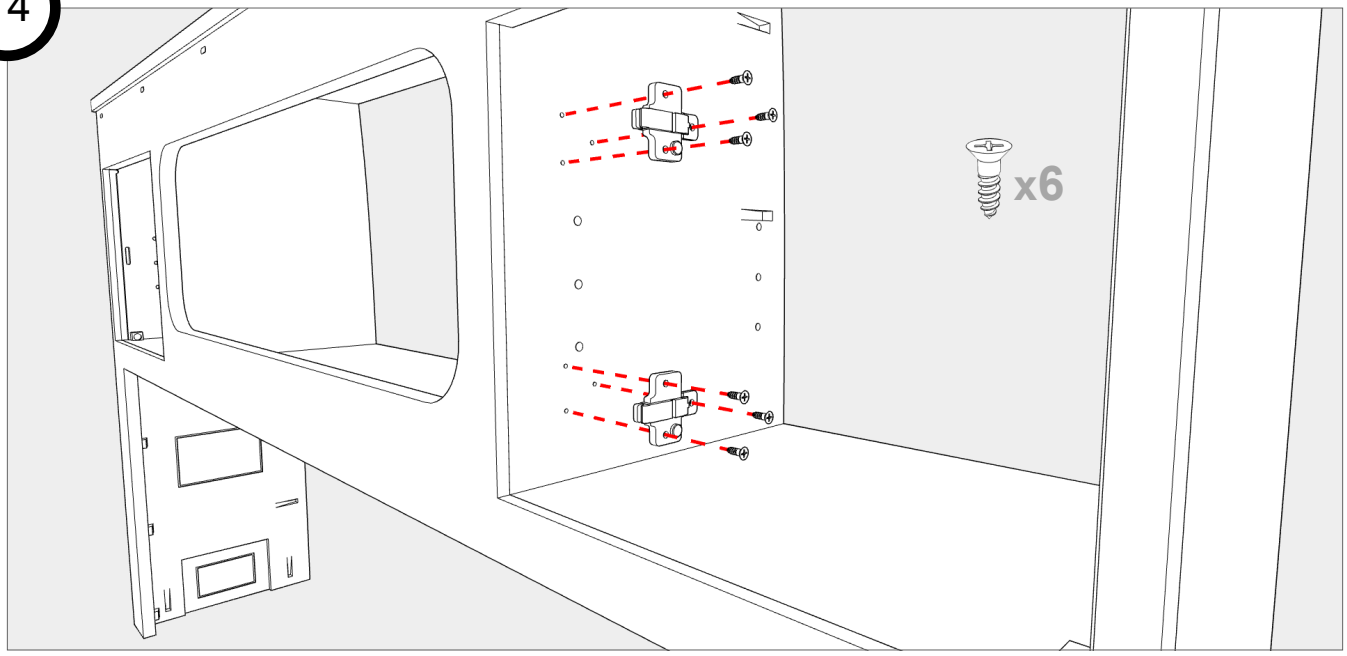


15

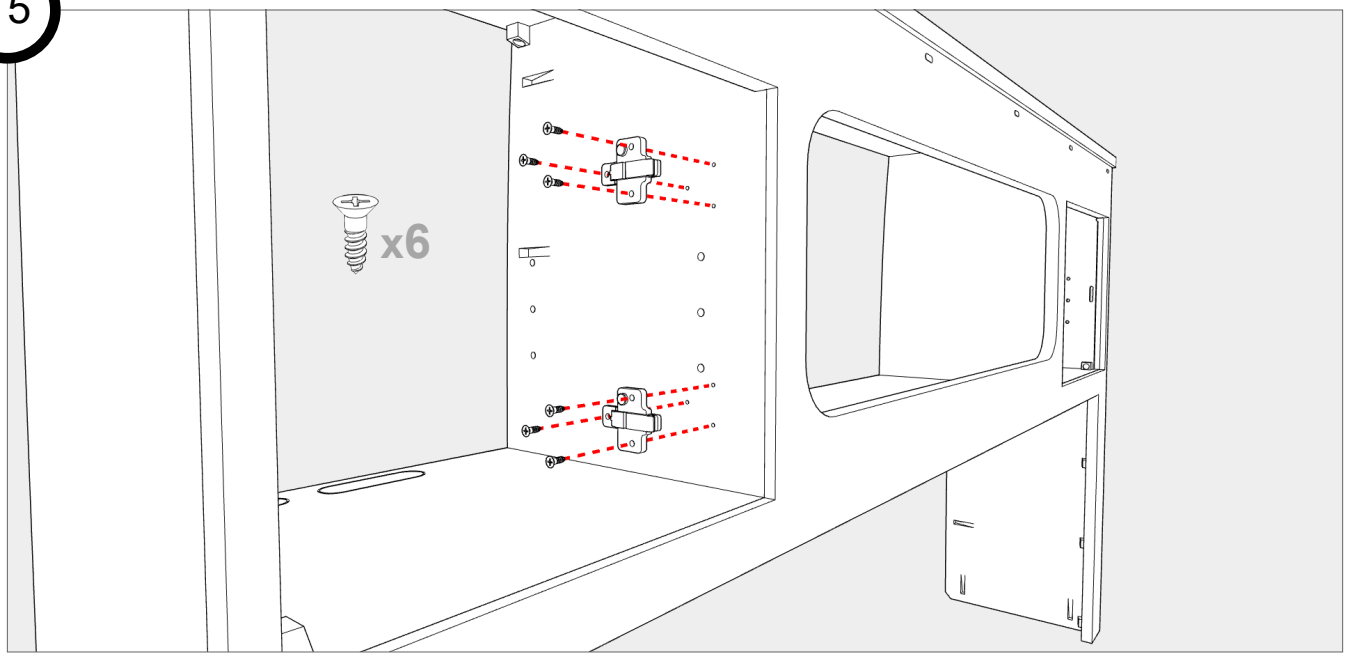


16

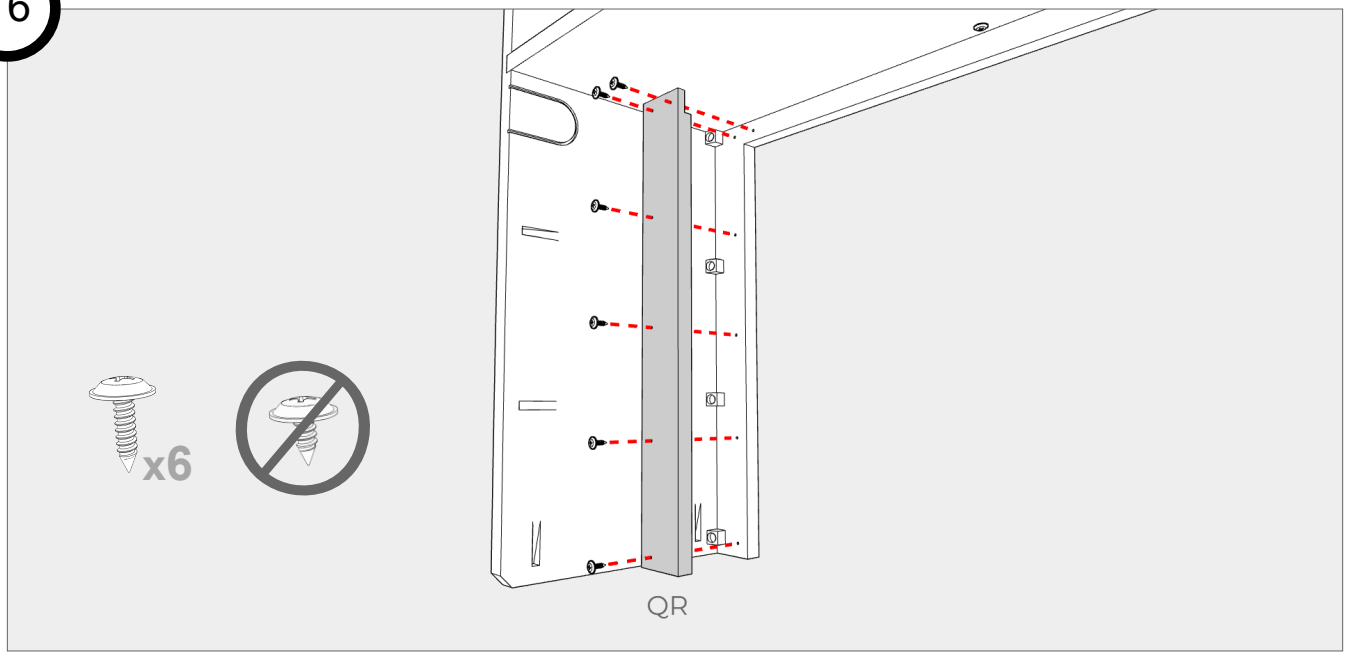


17

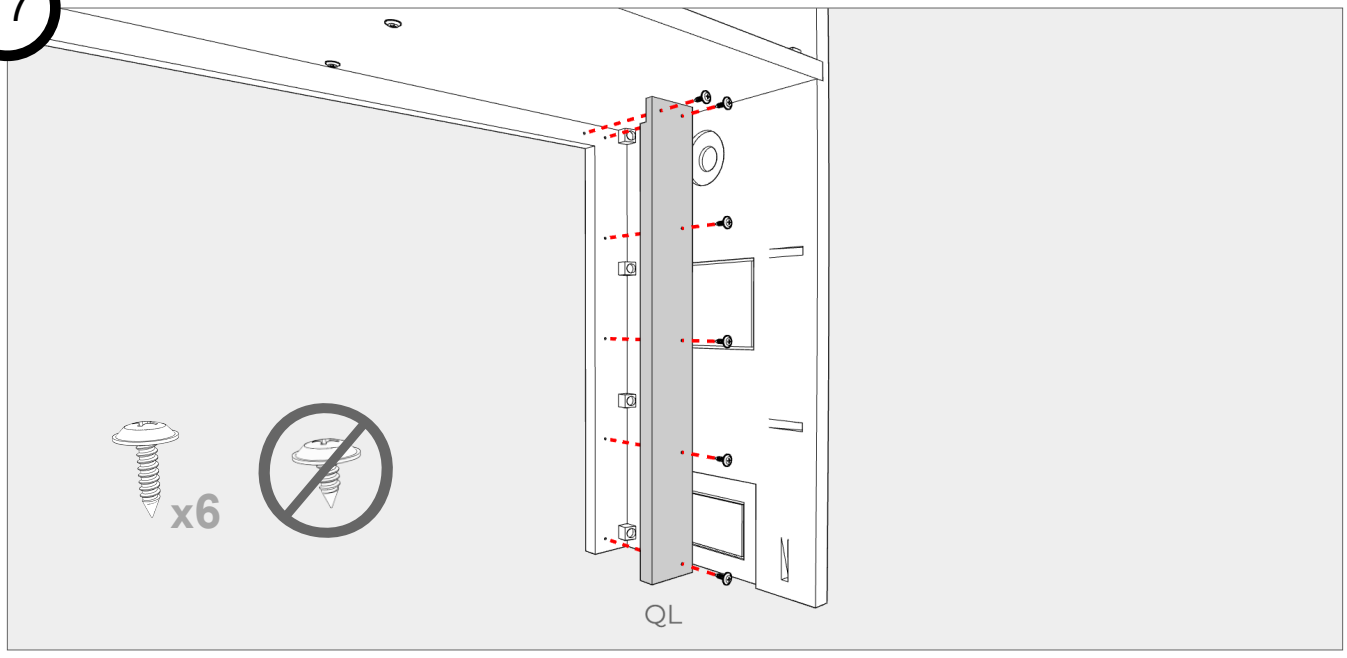


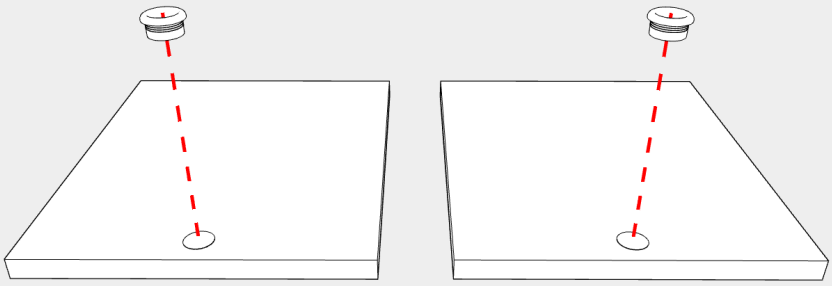


Note: trim rings will be tight to ensure a proper fit.
Use a rubber mallet to avoid damage.

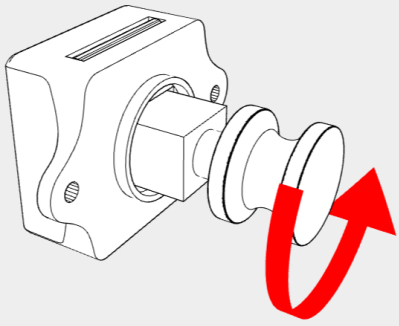


Set aside for later, you can add or subtract washers after assembly for best alignment.

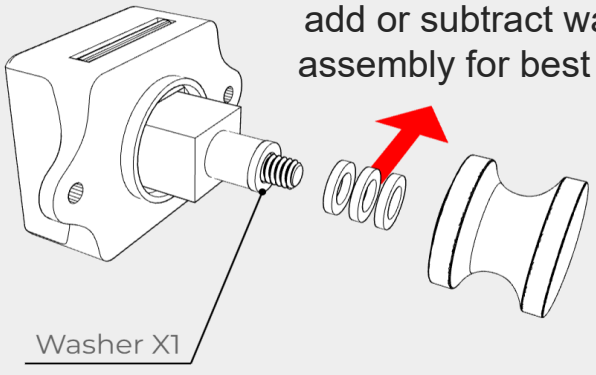


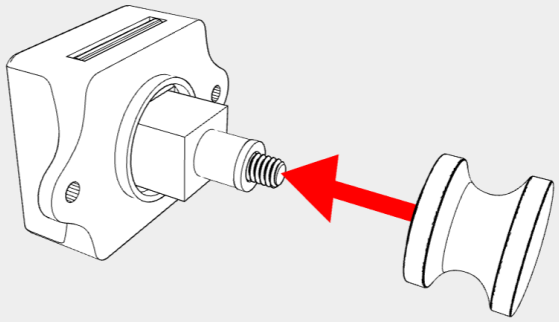


19

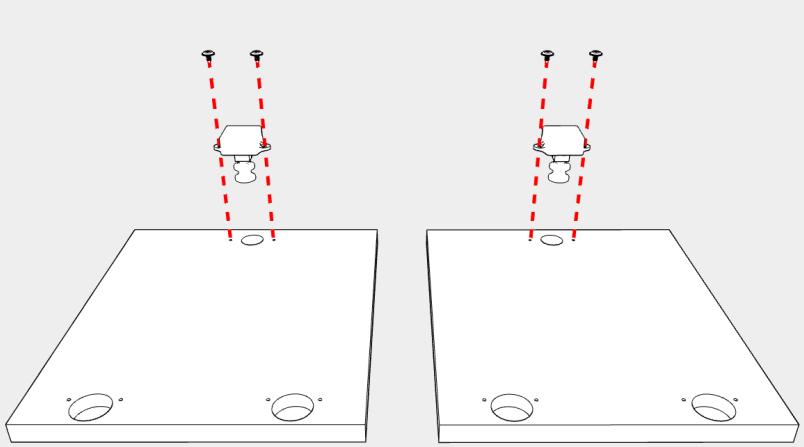

20

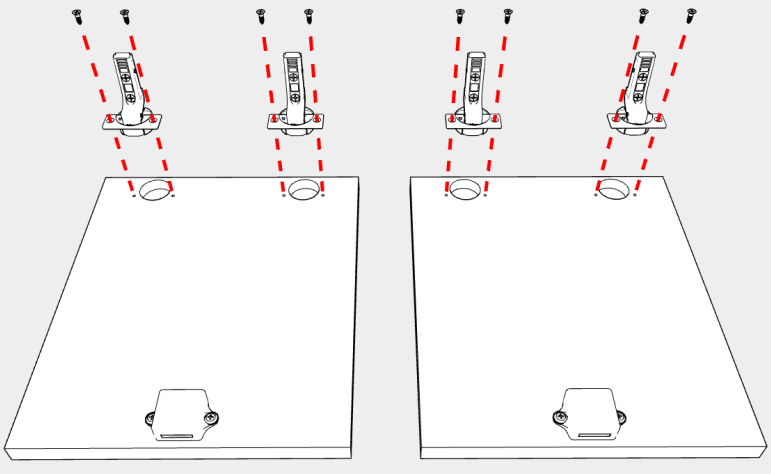


21

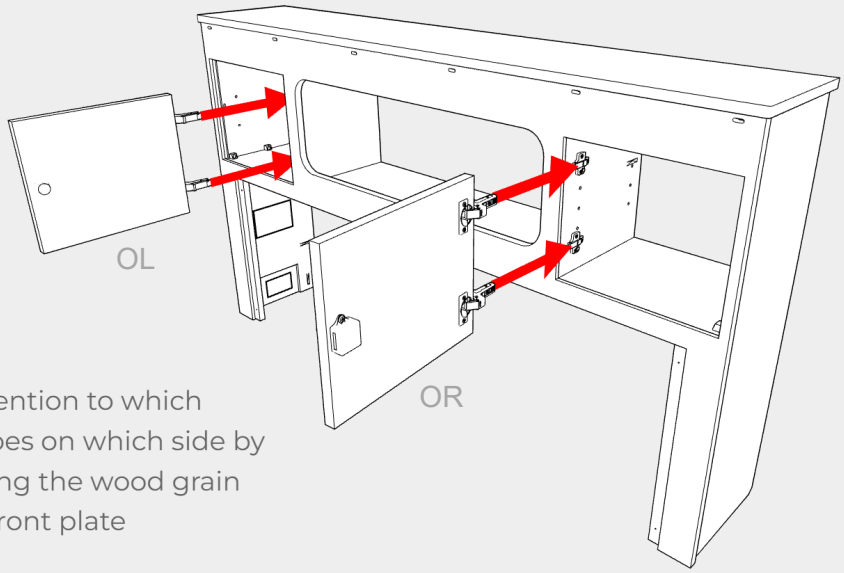


Note:
Pay attention to which door goes on which side by matching the wood grain to the front plate

22

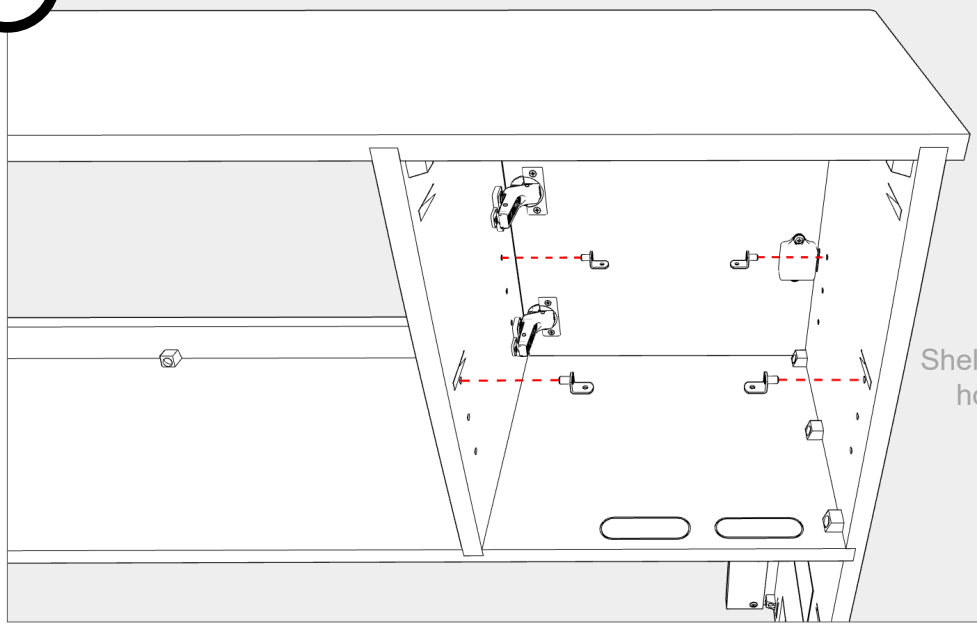


Shelf height is variable, choose holes for desired location.

23

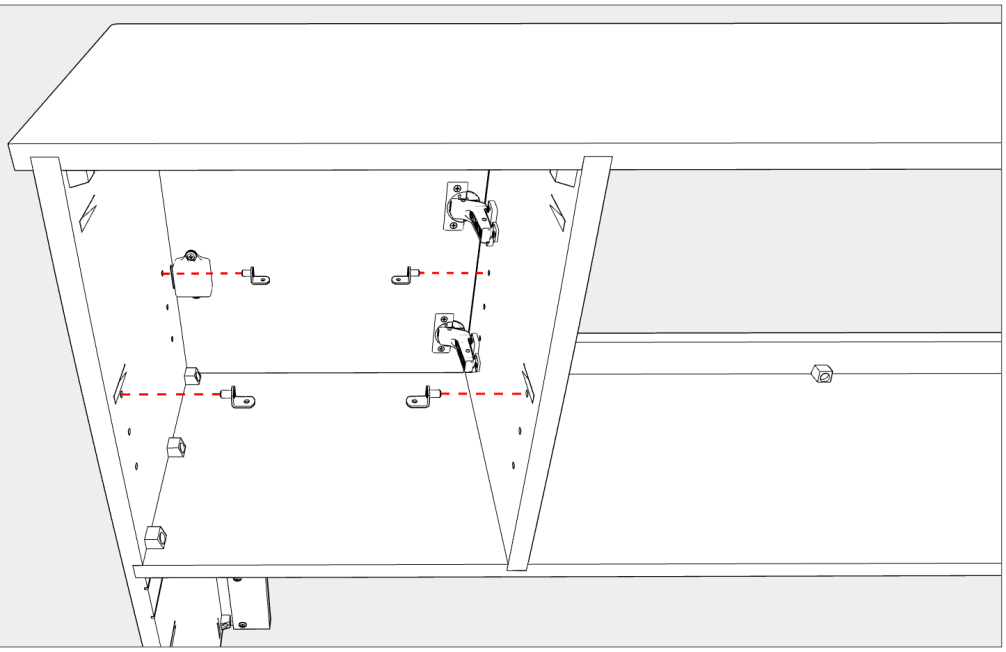


24

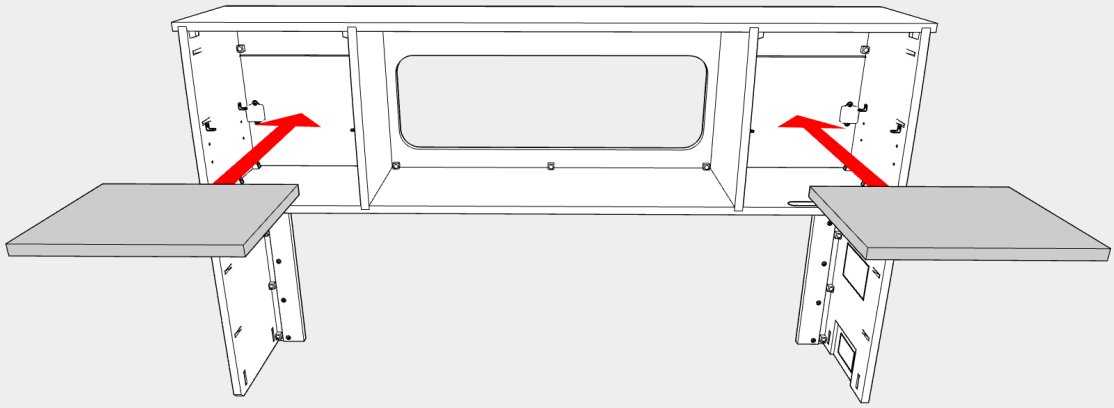


25

Tank Cover can be modified for your desired look, cut along guide to turn into a wheel well storage cubby

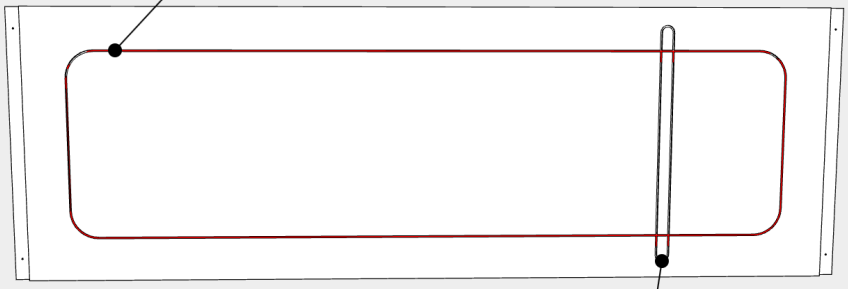

Or if you want to use this space for a water tank, you can cut along this guide to add a handle for easy removal of the cover

26

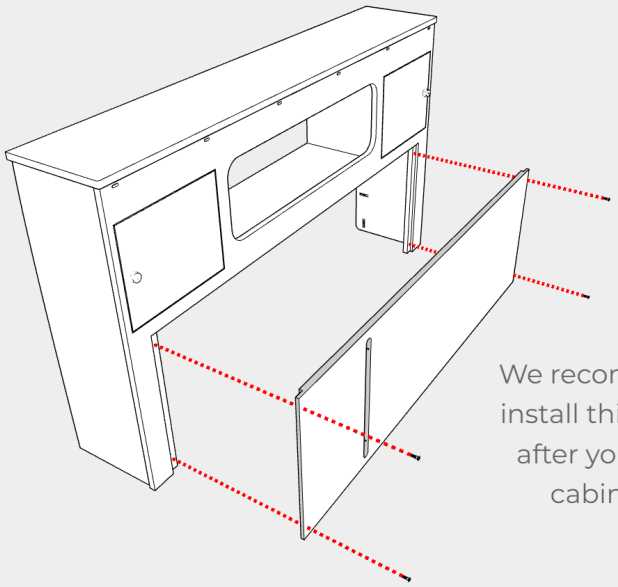




x4


We recommend waiting to install this cover plate until after you've screwed the cabinet to your van


DIY WWC

BI-SLIDE BED


TIMBER

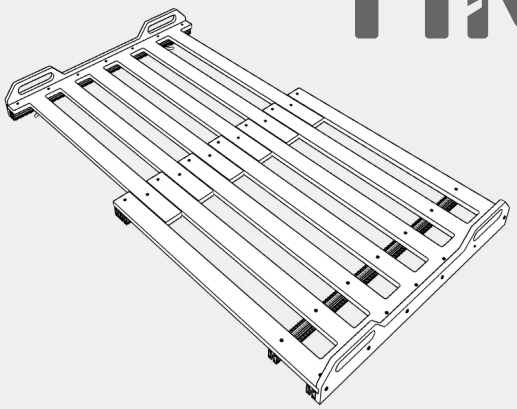

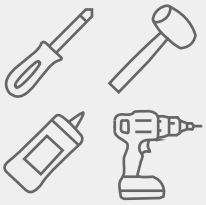


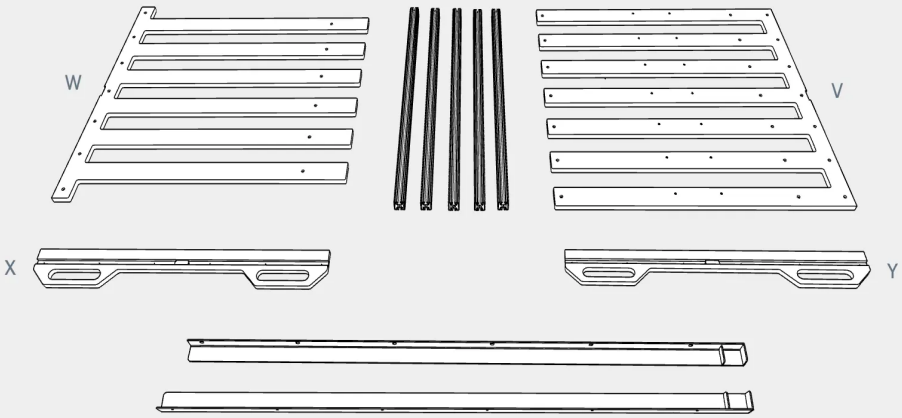

x4
HAR076



x4
0MF014



x36
HAR508



x36
FAS139



x36
FAS364



x14
FAS025



x14
FAS068




x14
FAS272




x14
FAS043




1

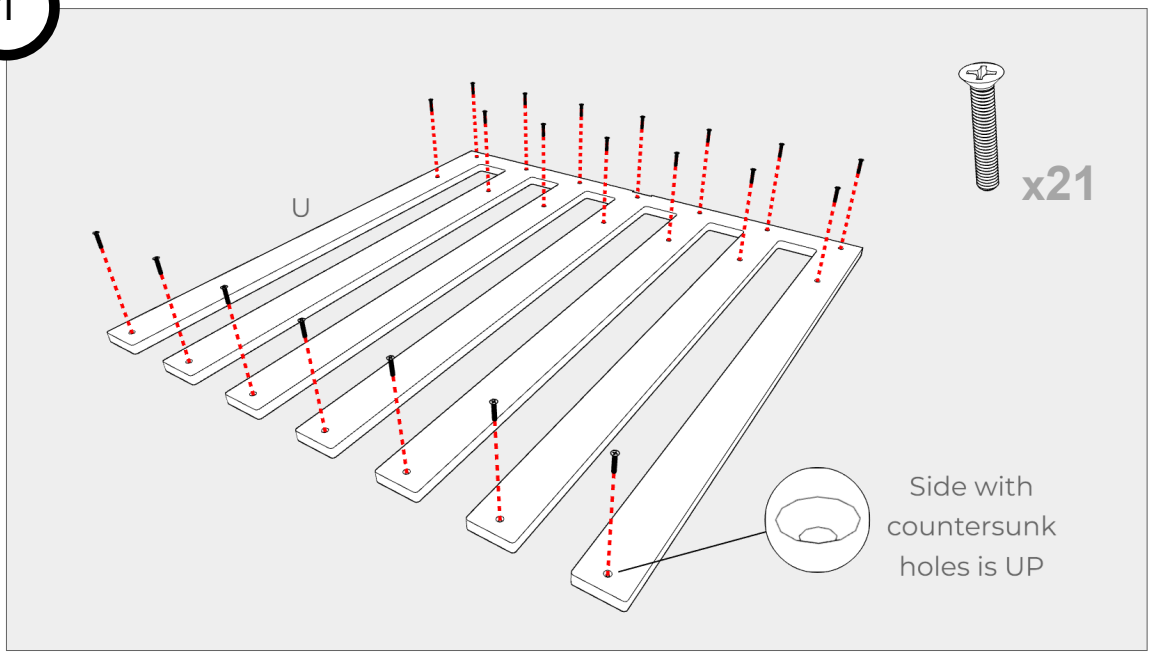
U
x21
Side with
countersunk
holes is UP


2

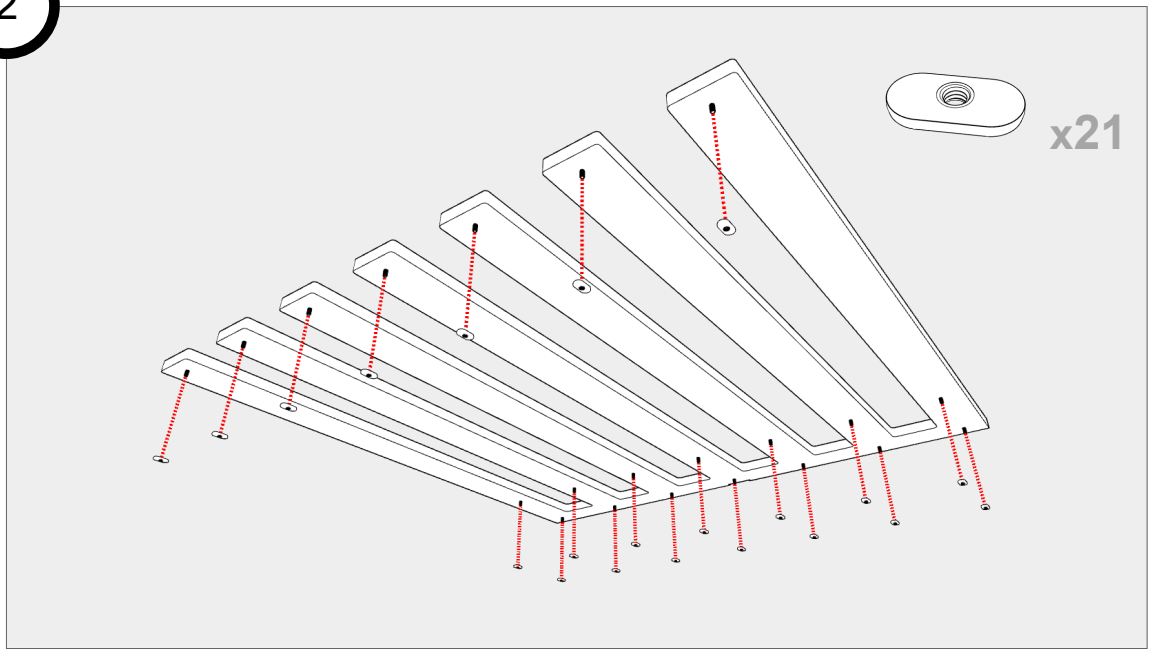
x21


3

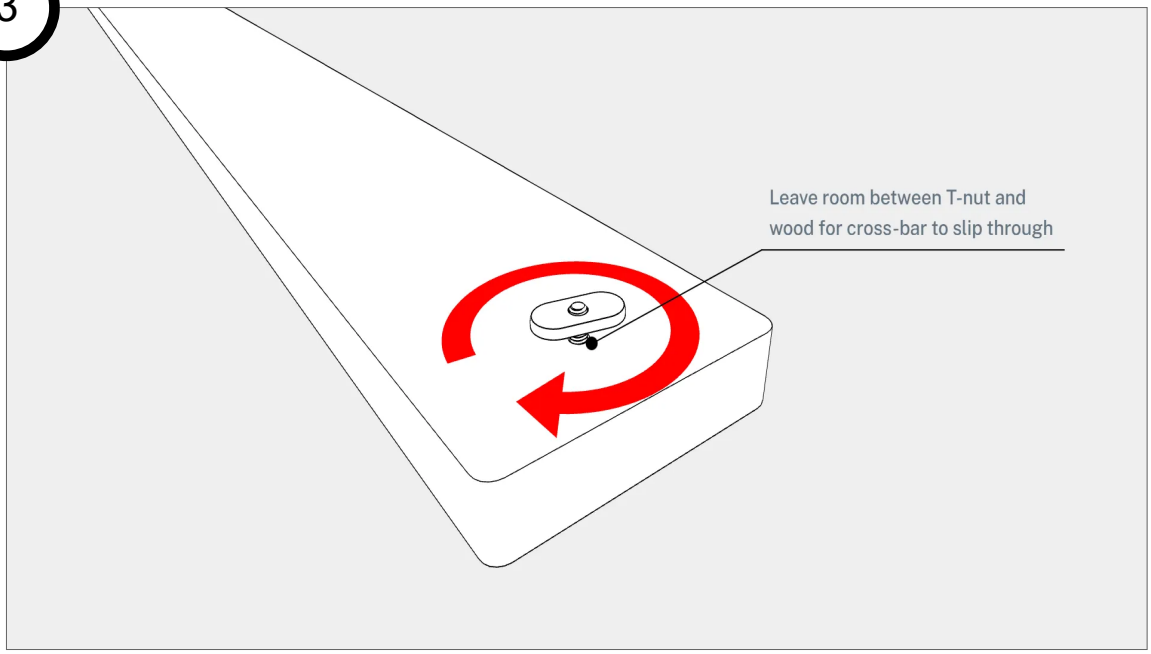
Leave room between T-nut and
wood for cross-bar to slip through


4

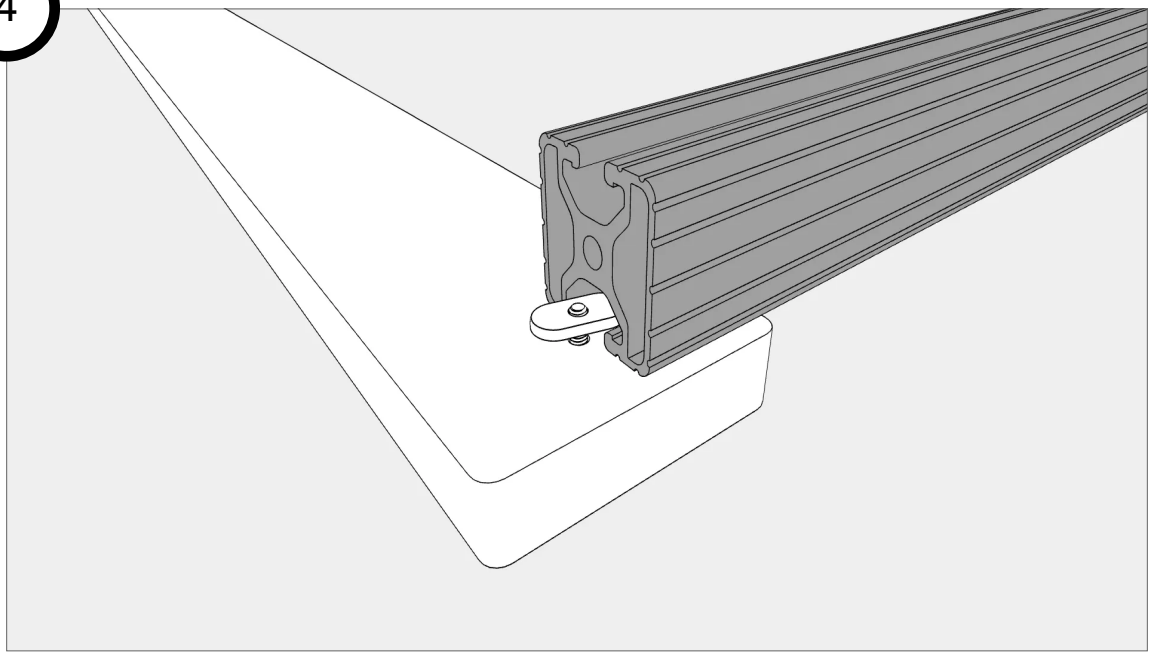


5

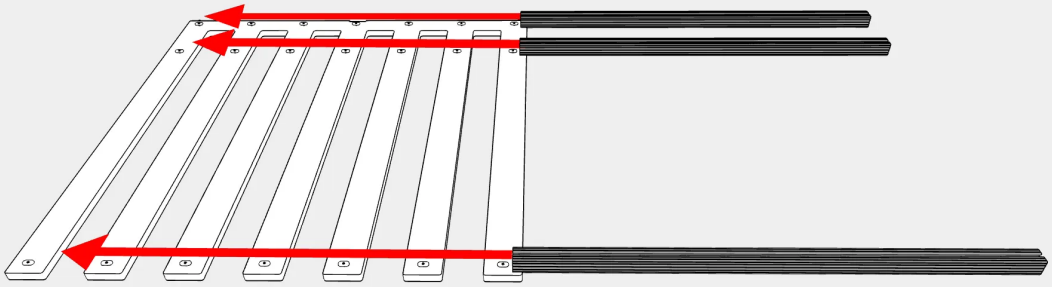

6

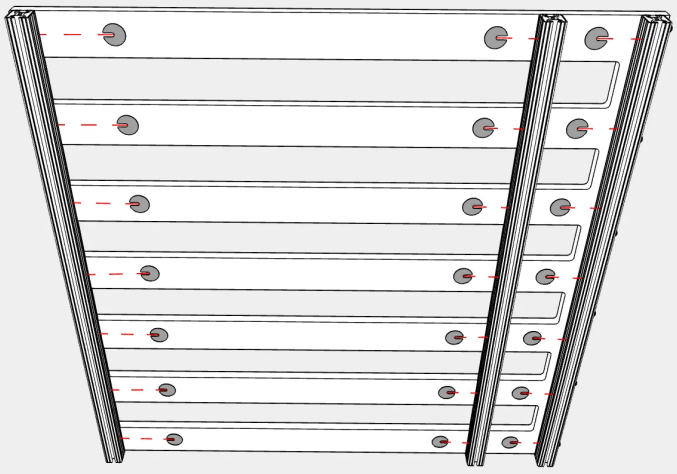


7

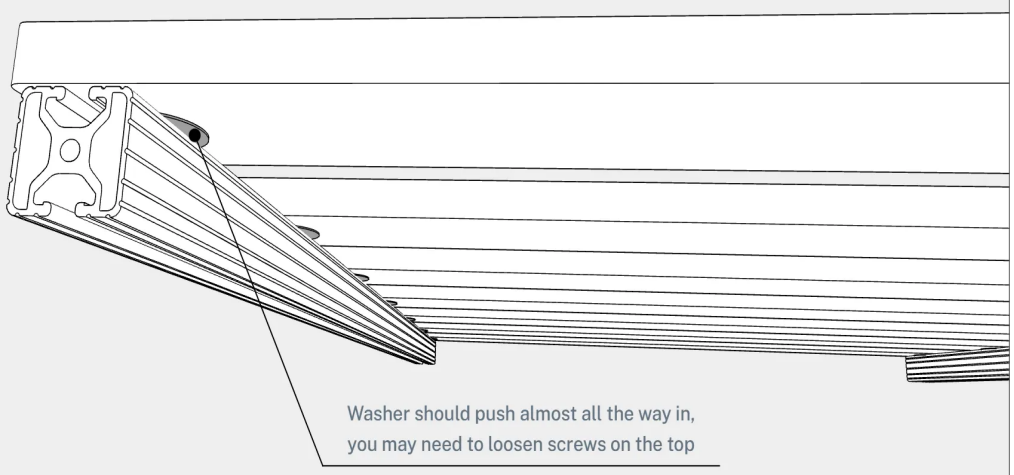
Washer should push almost all the way in,
you may need to loosen screws on the top


8


ALL


9

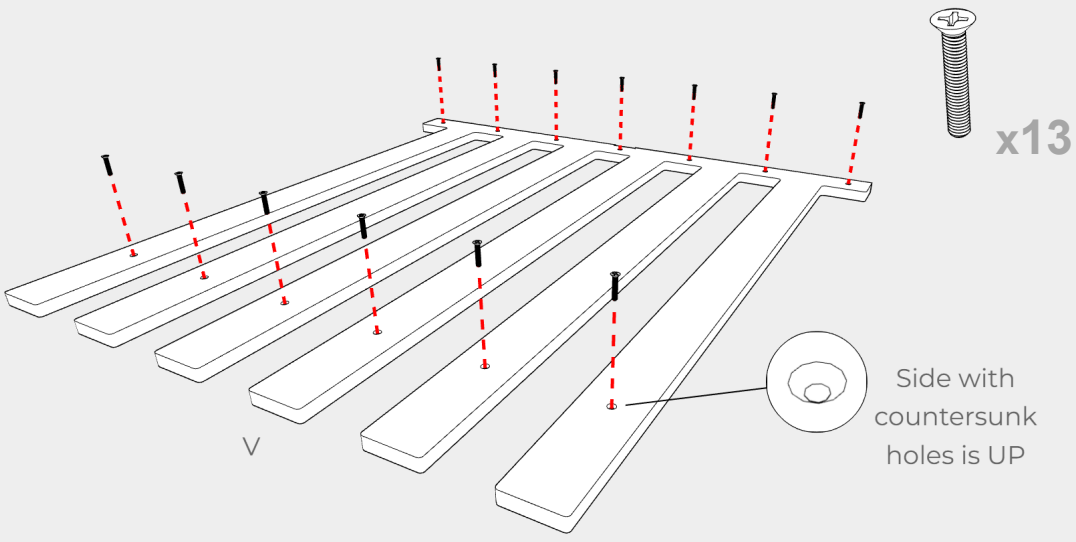
x13
V
Side with
countersunk
holes is UP


10

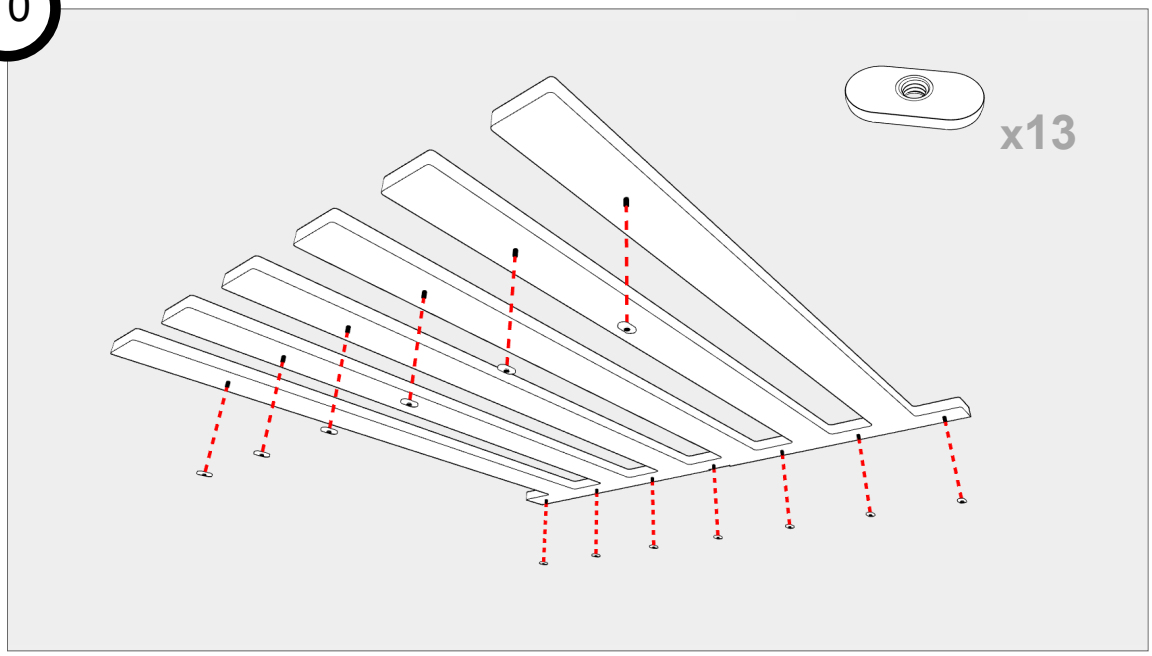


11

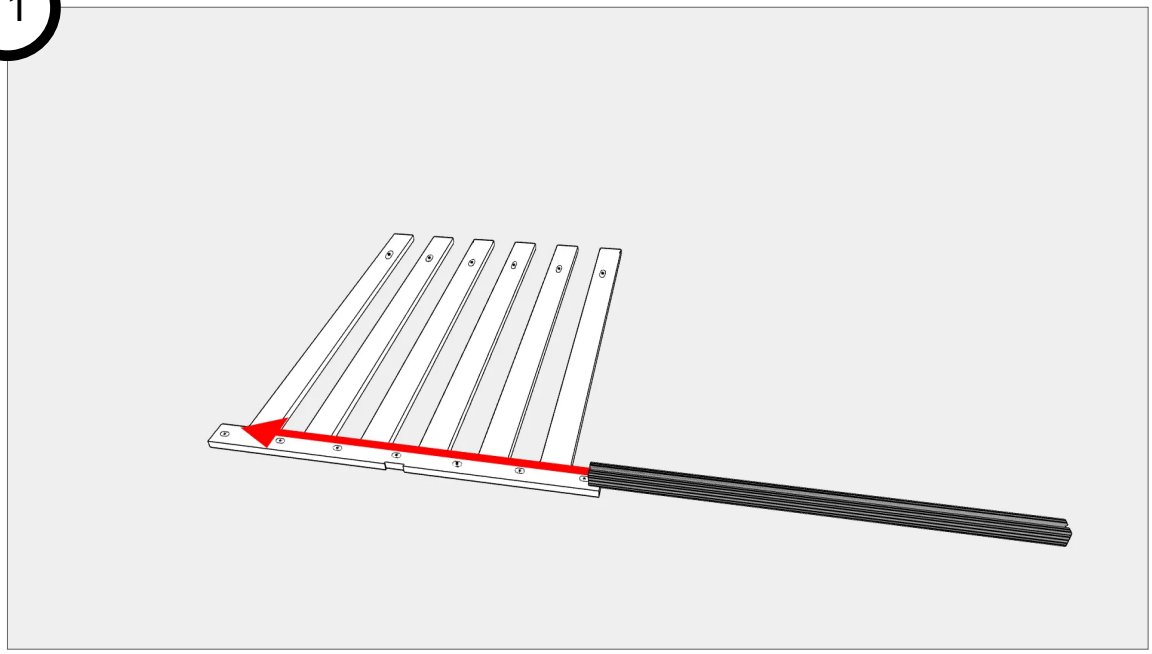


12

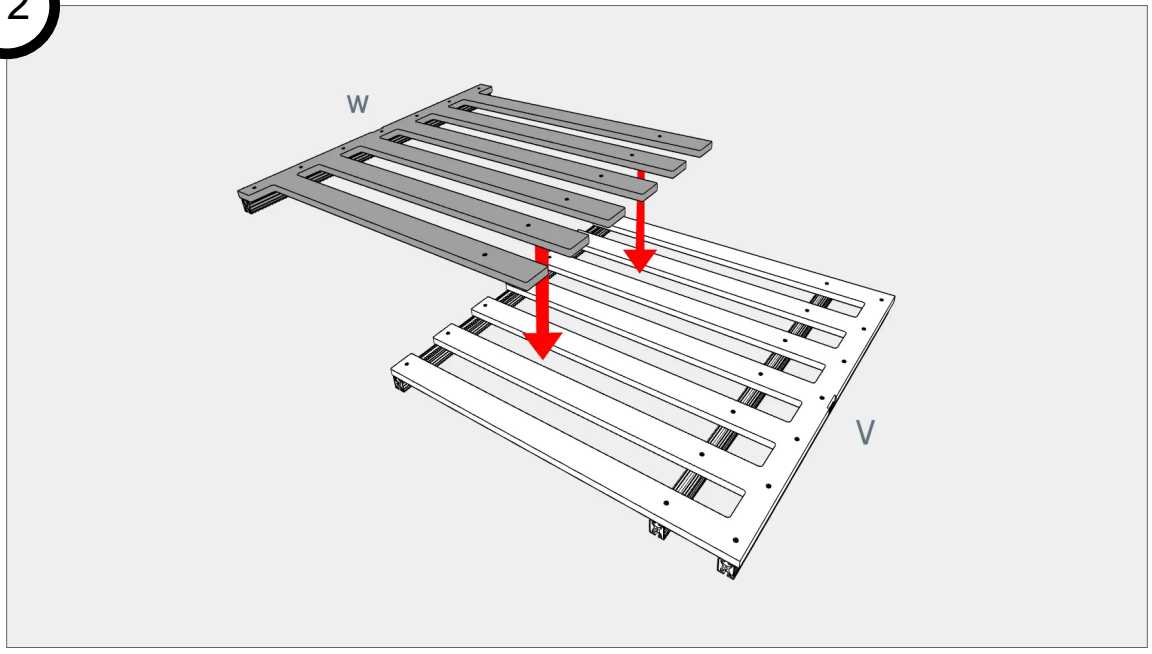


13

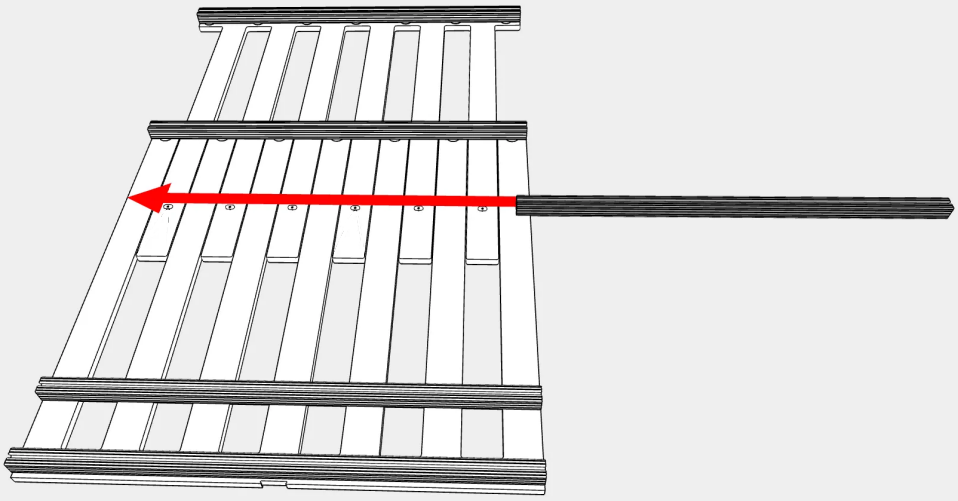


14

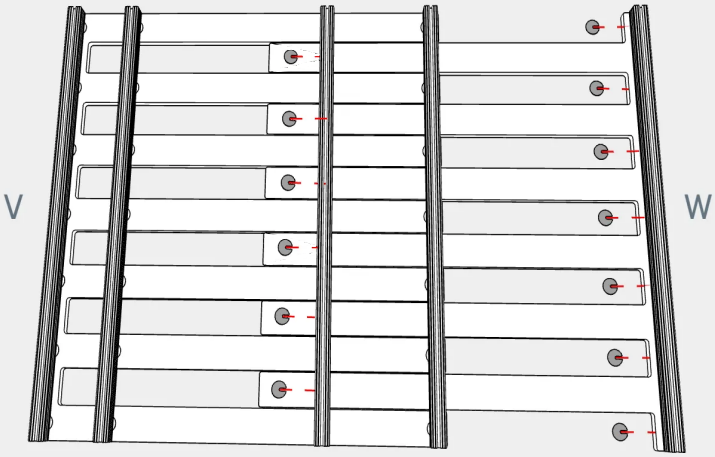

15

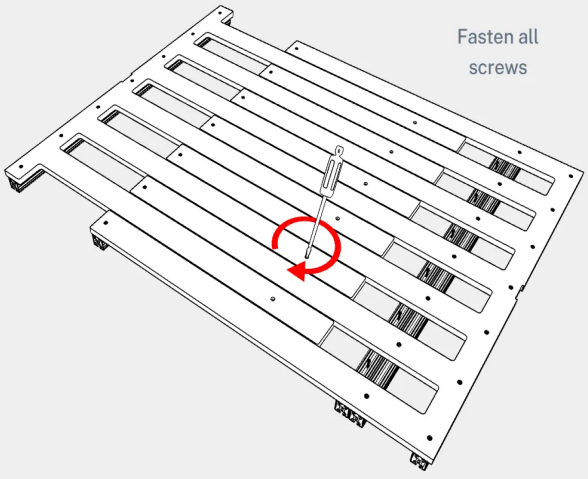


16

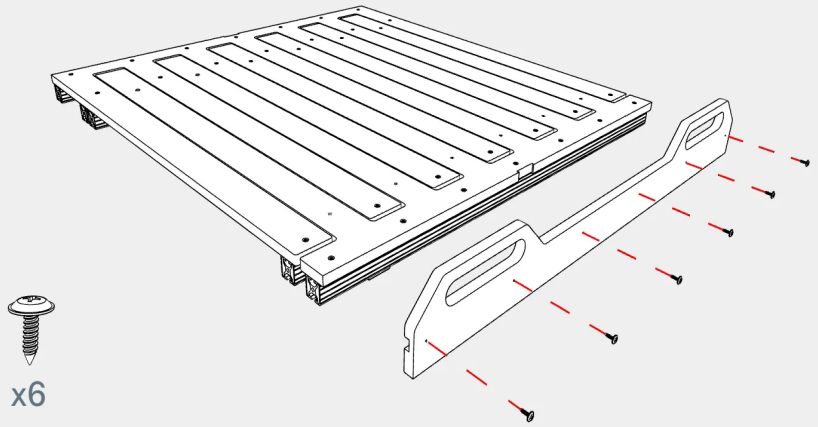


x6

17

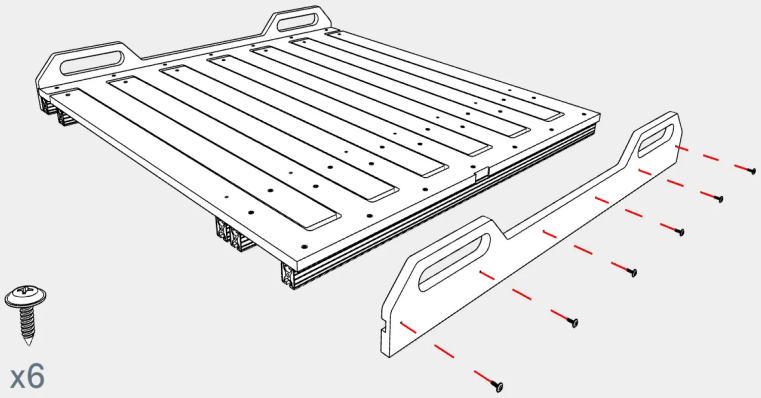


x6

18

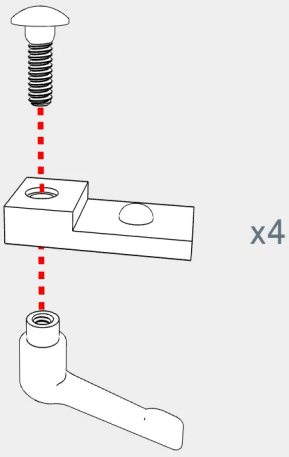


x4


19

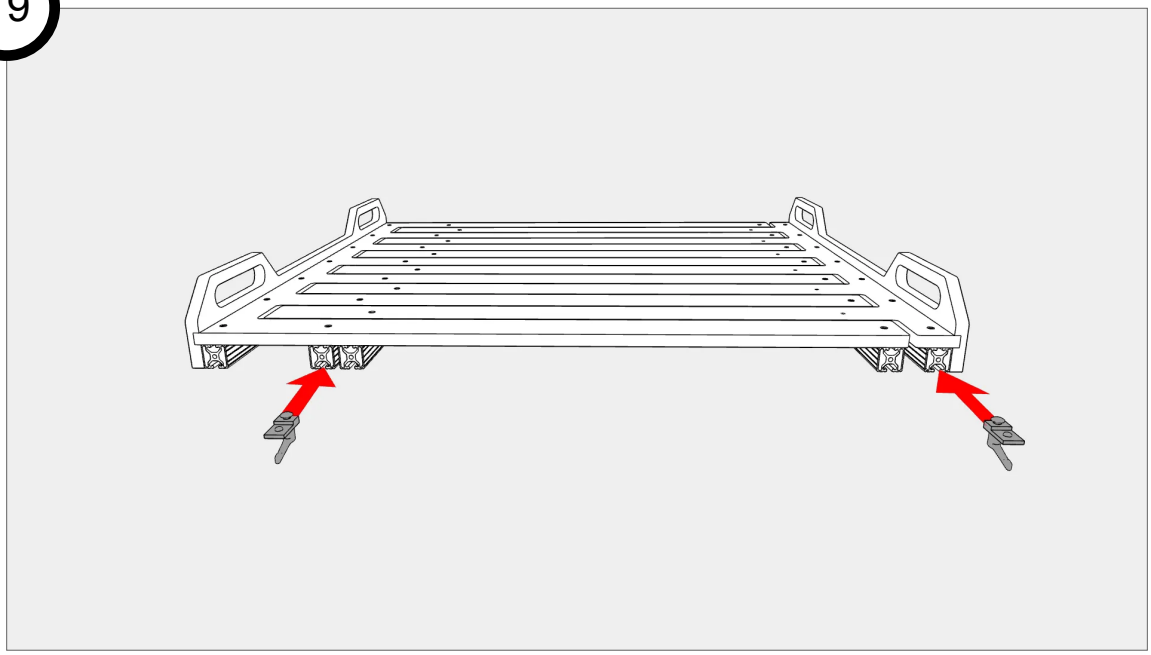

20

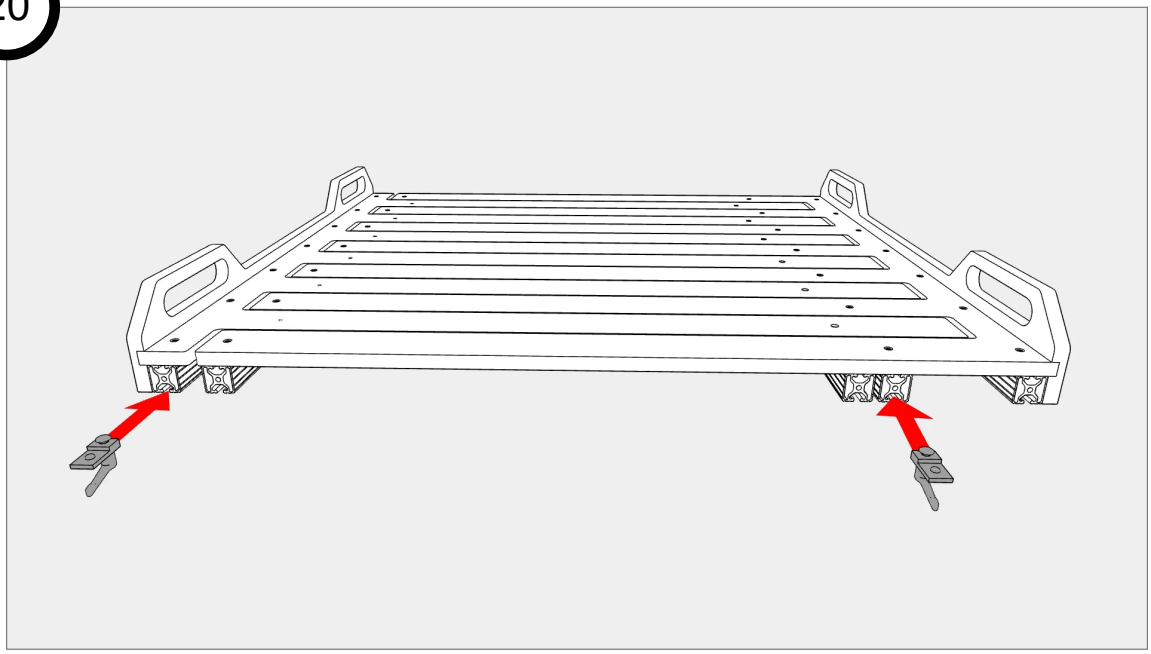

21

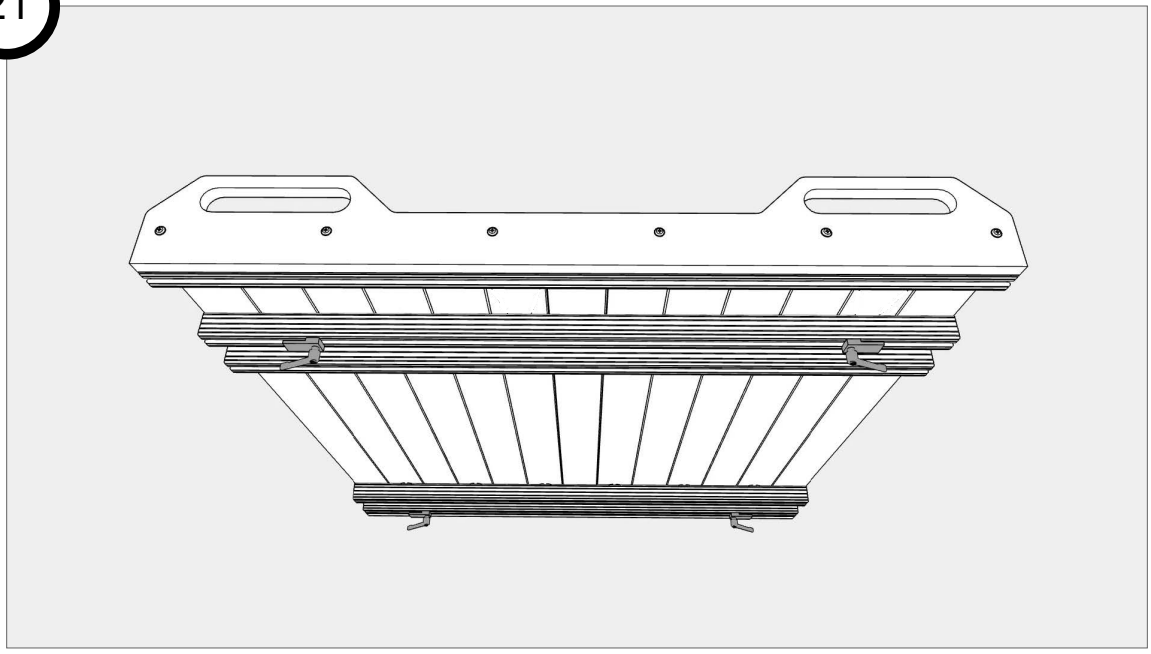

22




x6



x6



x6

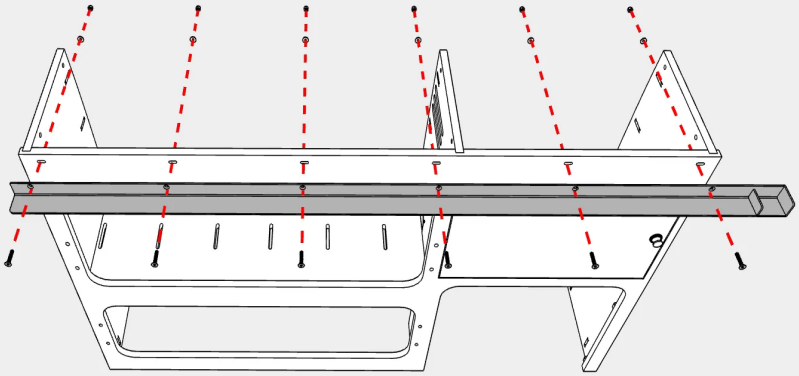

*Top of cabinet hidden for clarity

23




x6



x6




x6

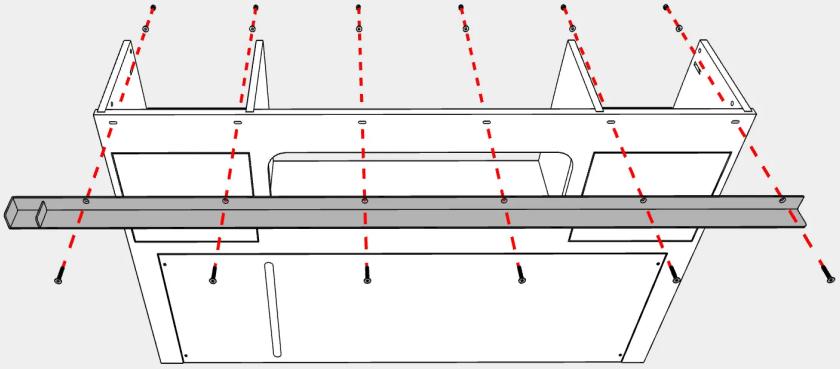

*Top of cabinet hidden for clarity


24

Driver Side

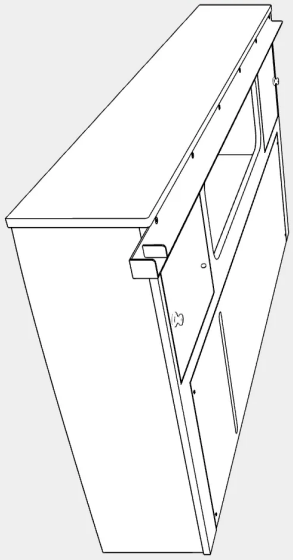


Install wheel well cabinets in van before proceeding (See installation steps at the end of this PDF)

Passenger Side

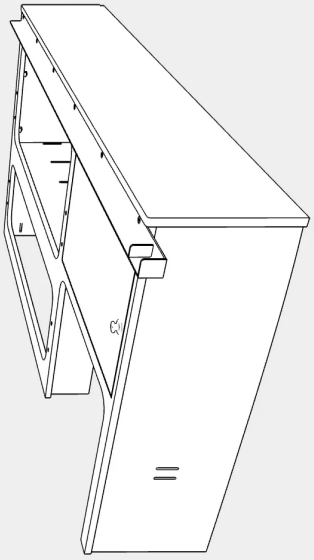


25

Note bed orientation upon insertion onto rails

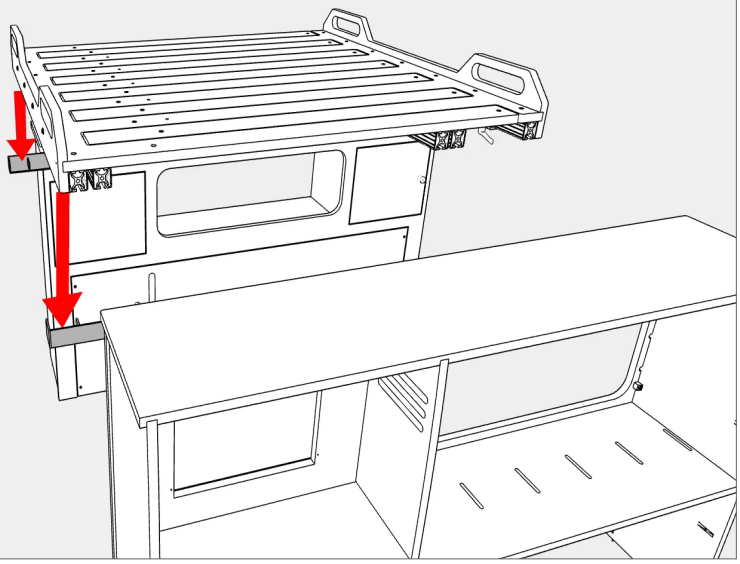


26

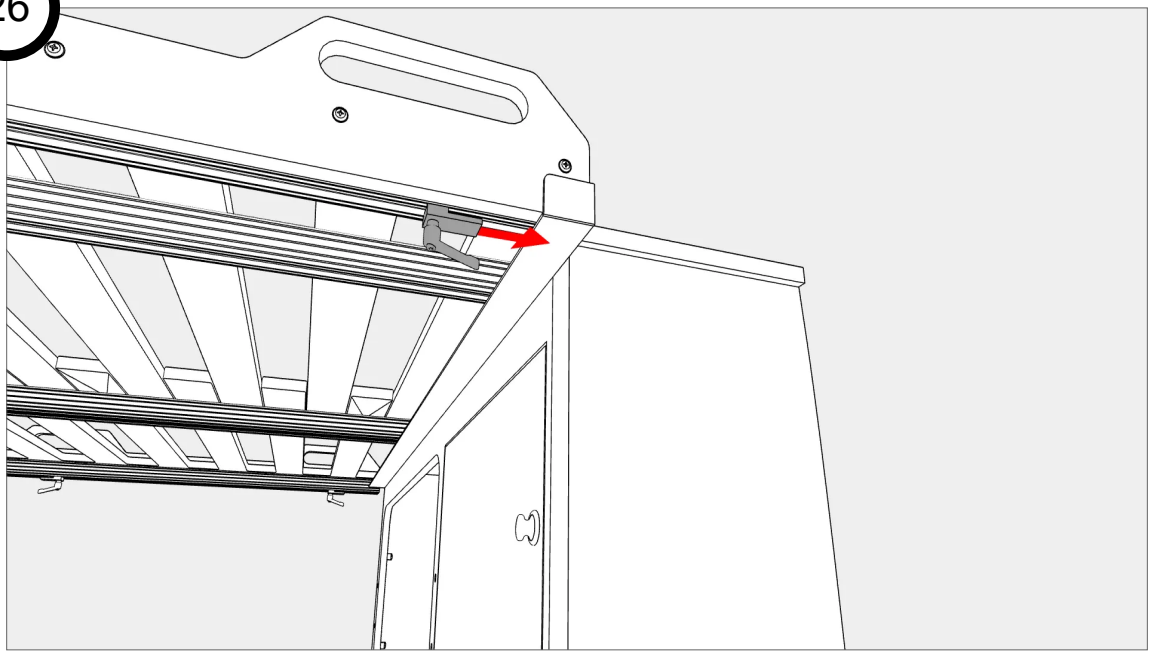


27


Tighten all locking handles to secure while driving

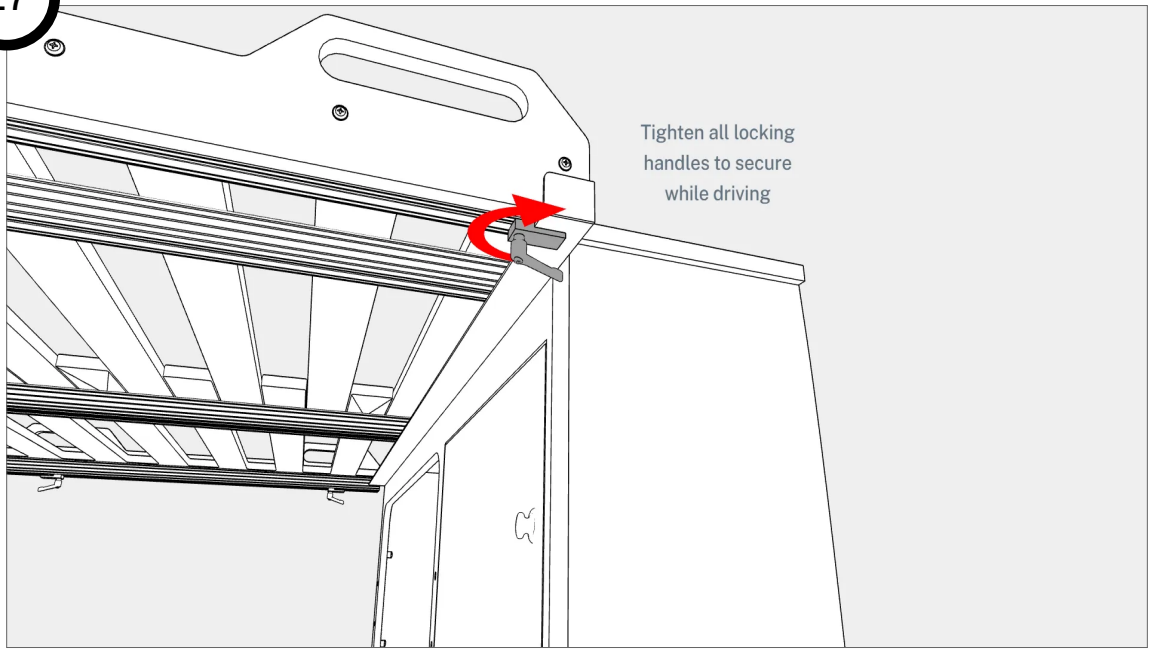


28

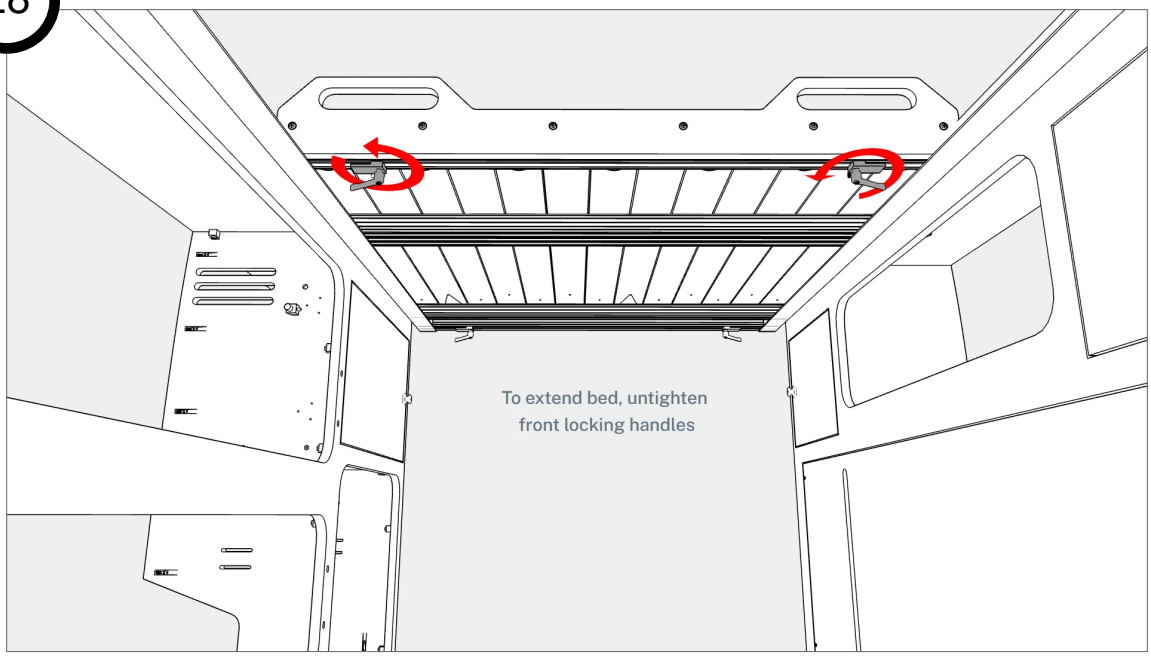


29

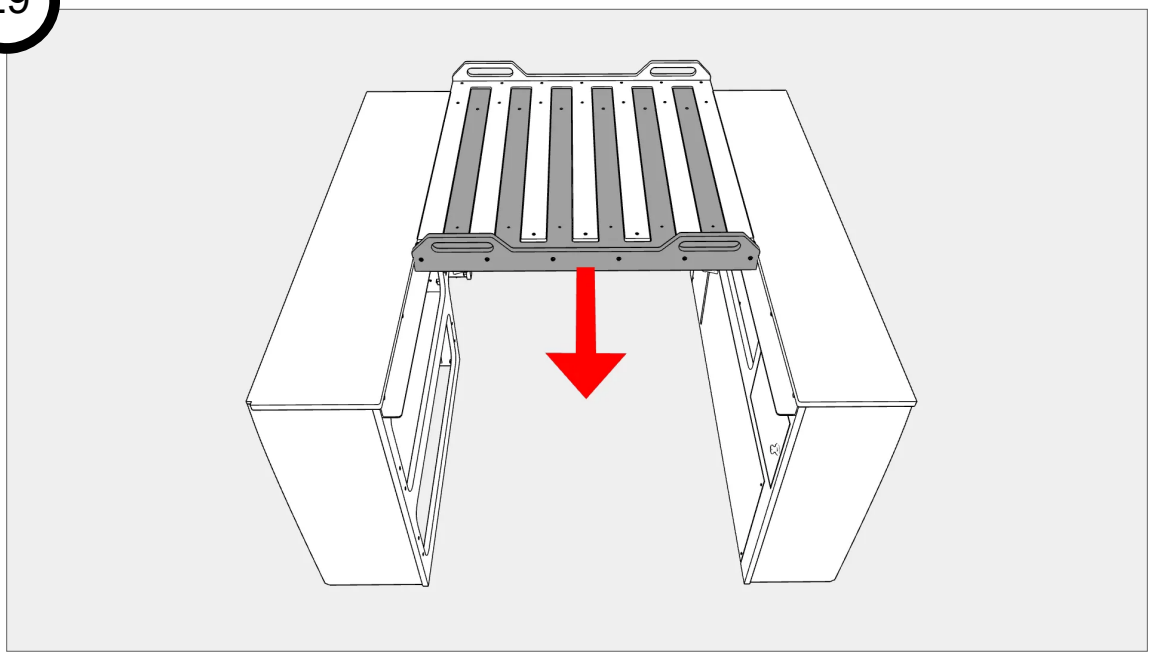


30

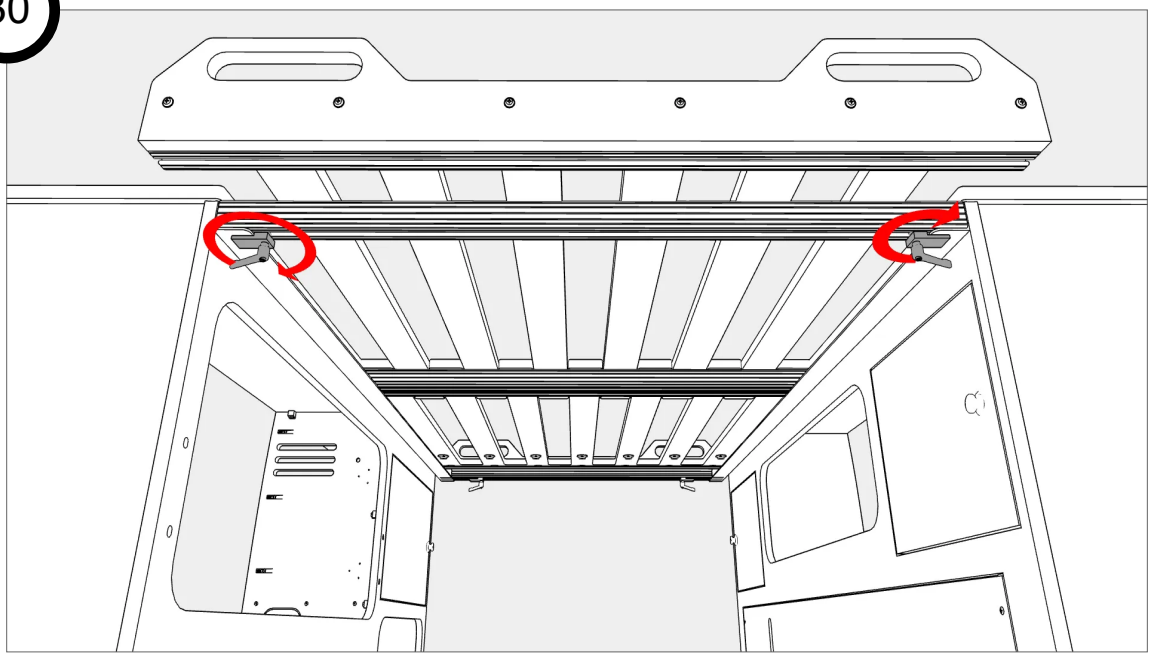


1 Begin Cabinet Install

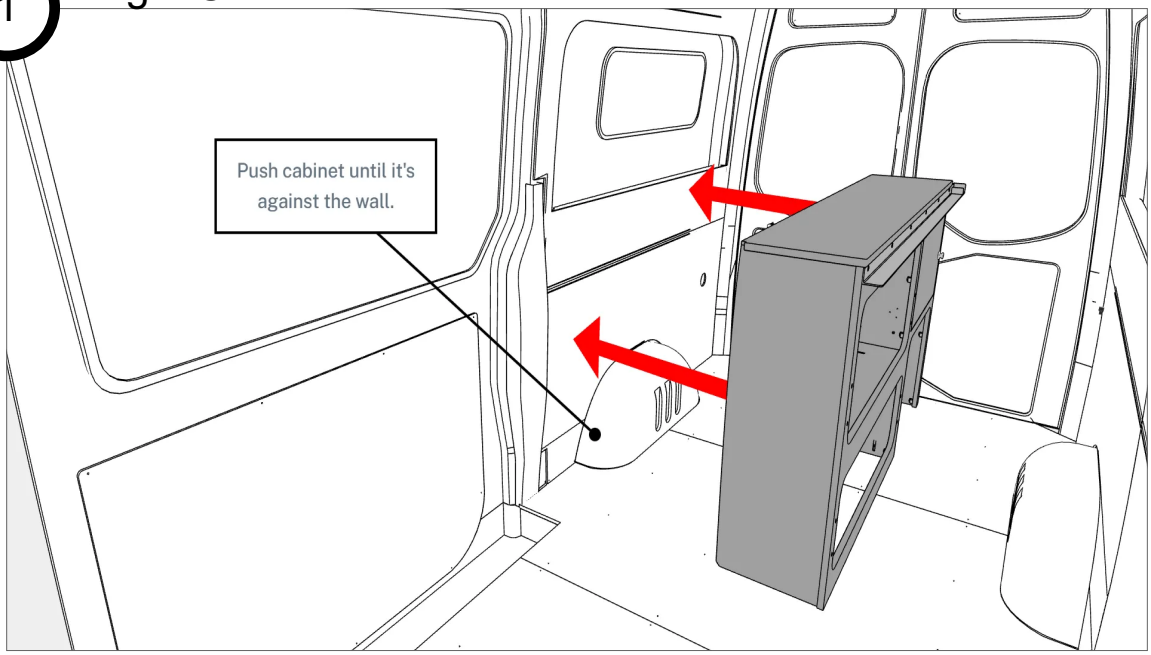


2a

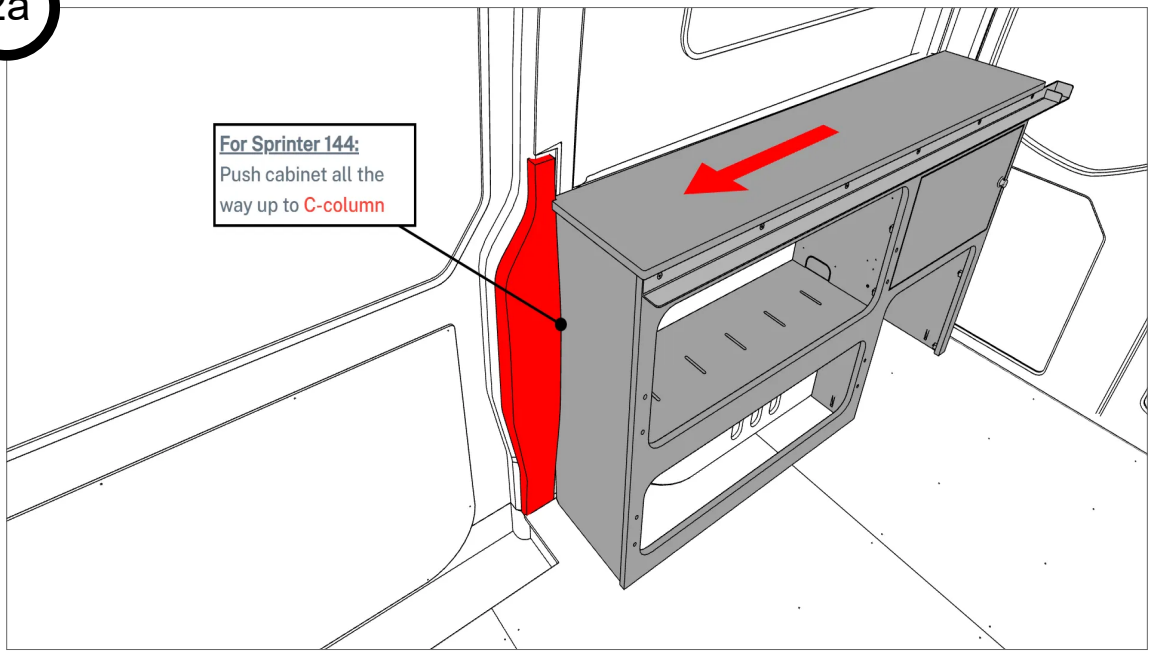


2b

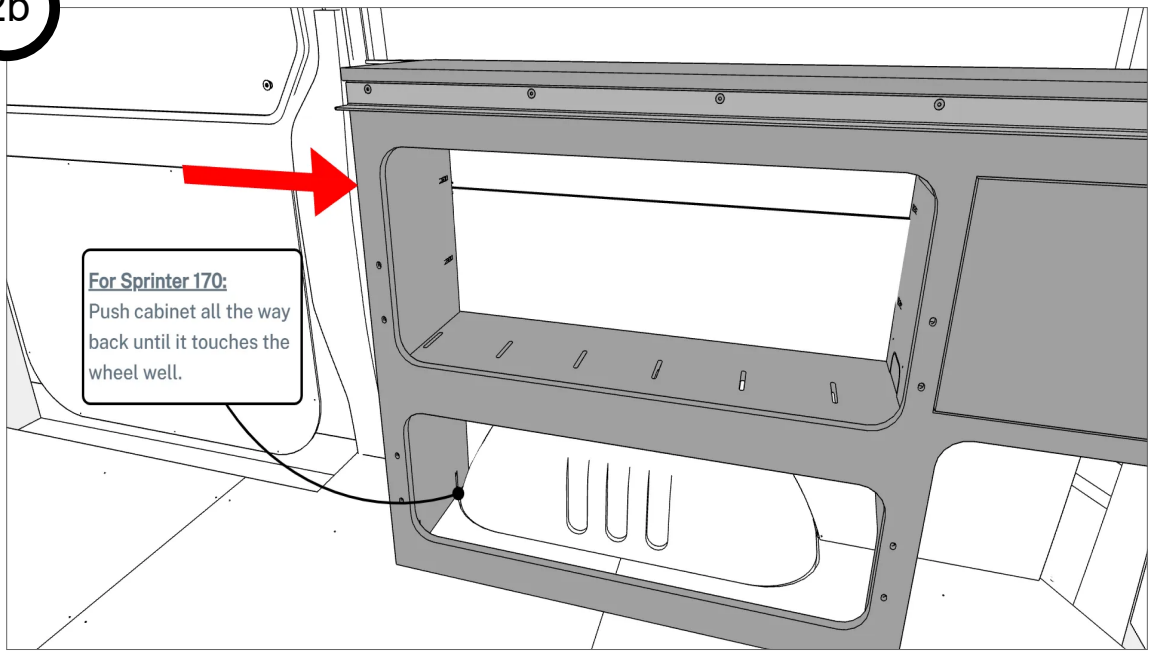


3

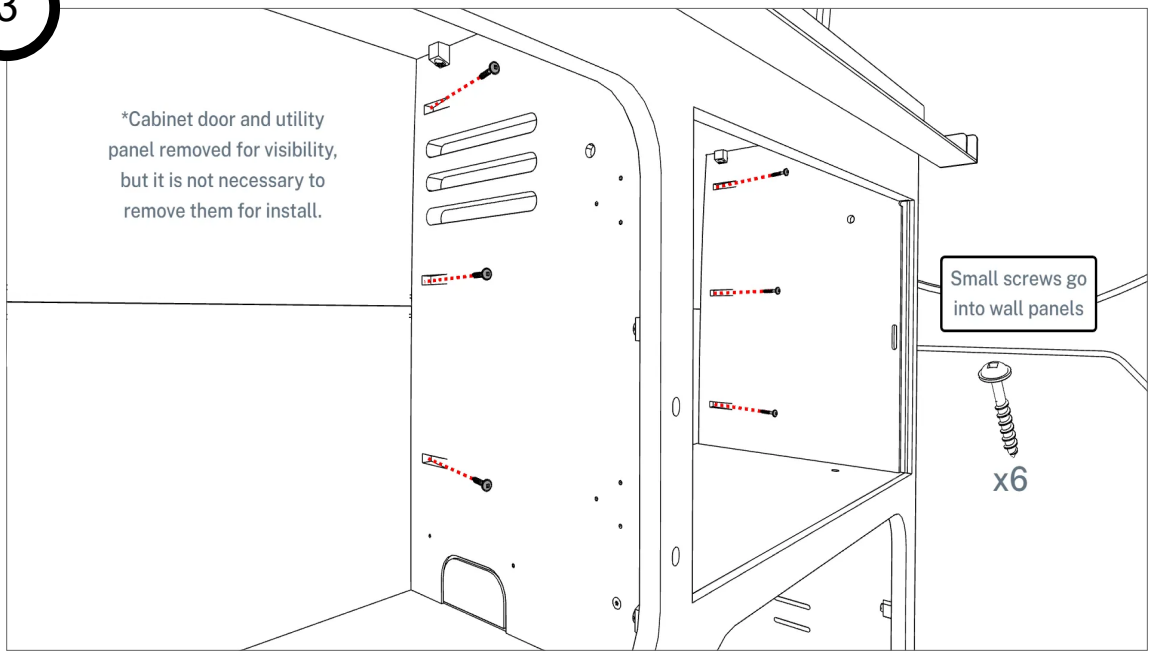
*Cabinet door and utility panel removed for visibility, but it is not necessary to remove them for install.
Small screws go into wall panels
x6


4

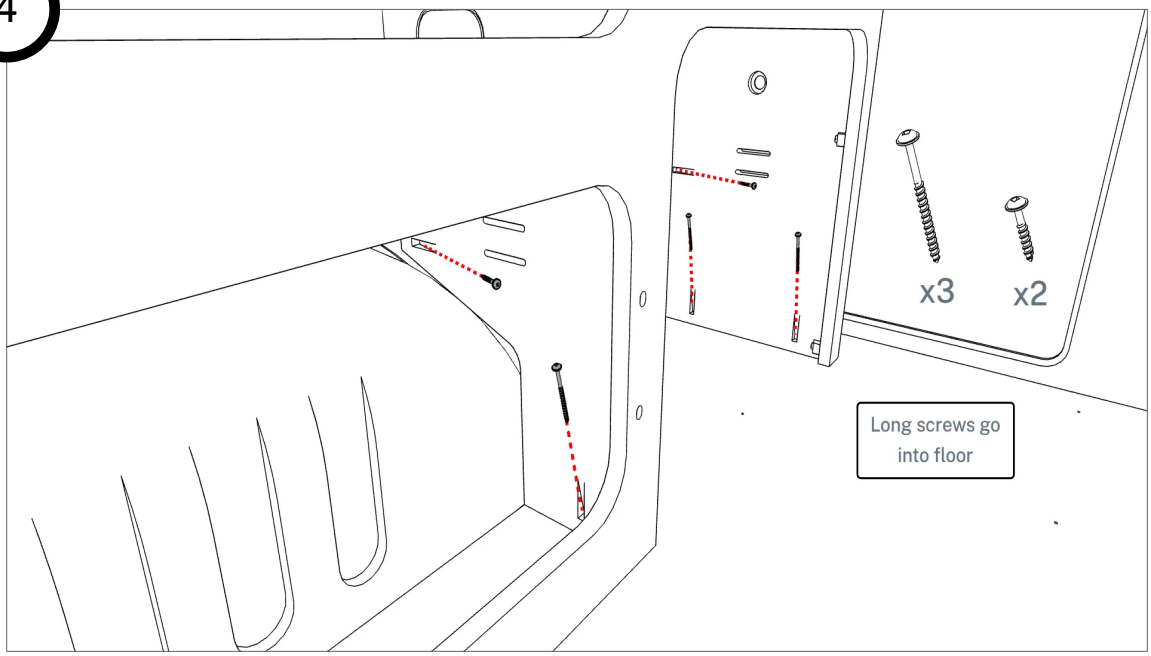
x3
x2
Long screws go into floor


5

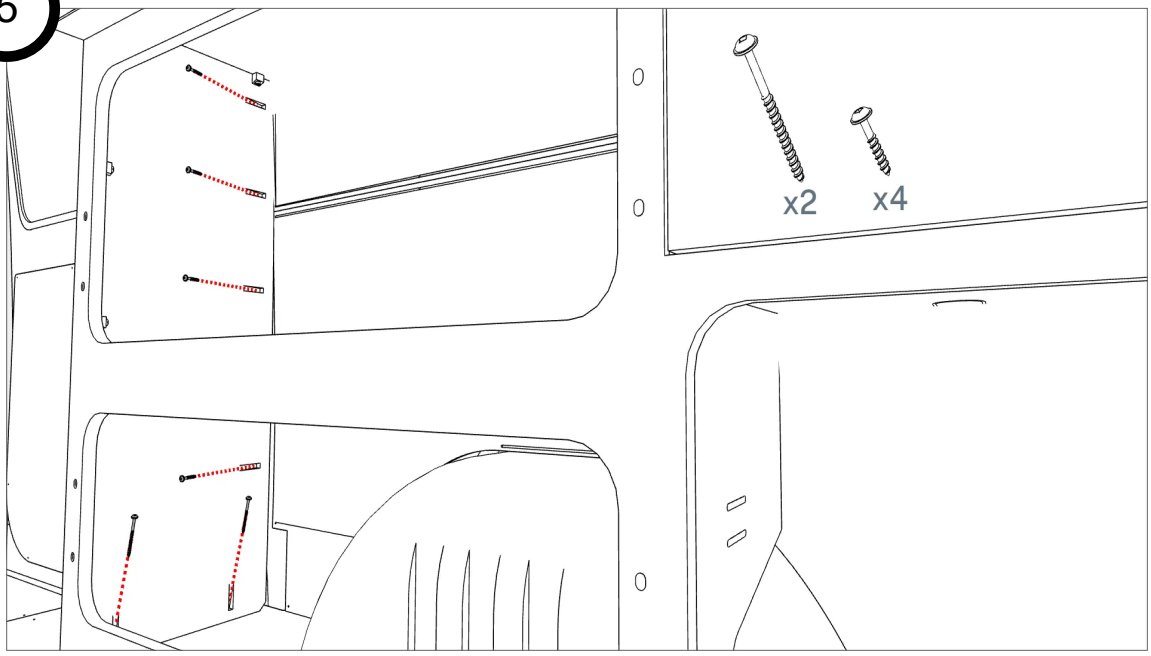
x2
x4


6

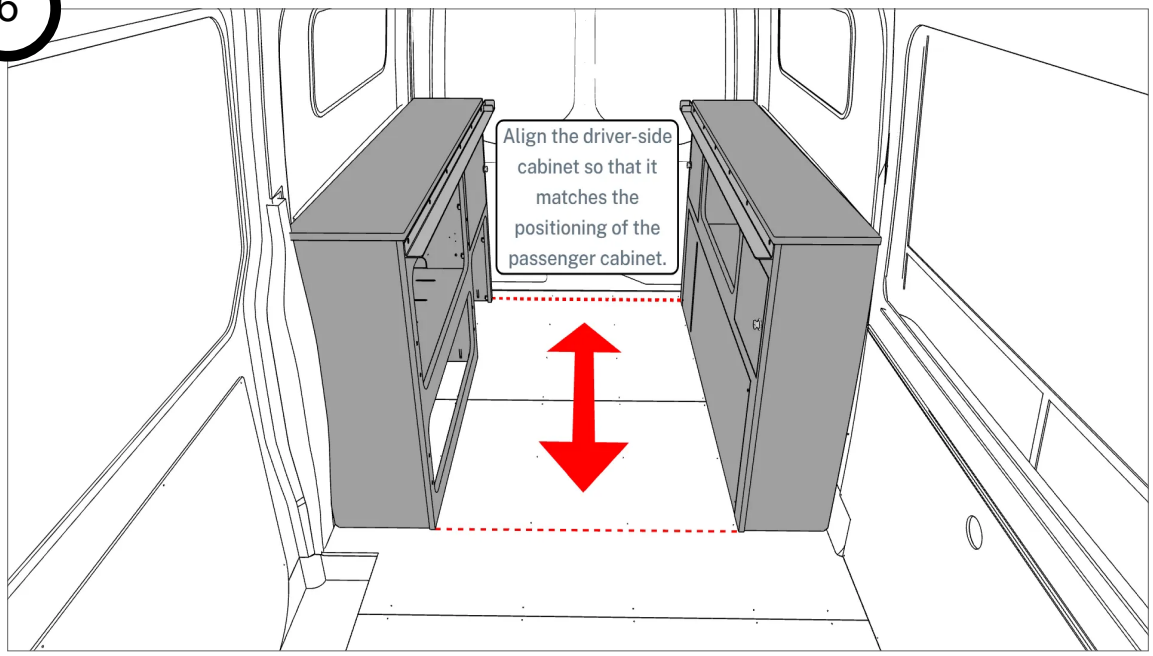
Align the driver-side cabinet so that it matches the positioning of the passenger cabinet.


10

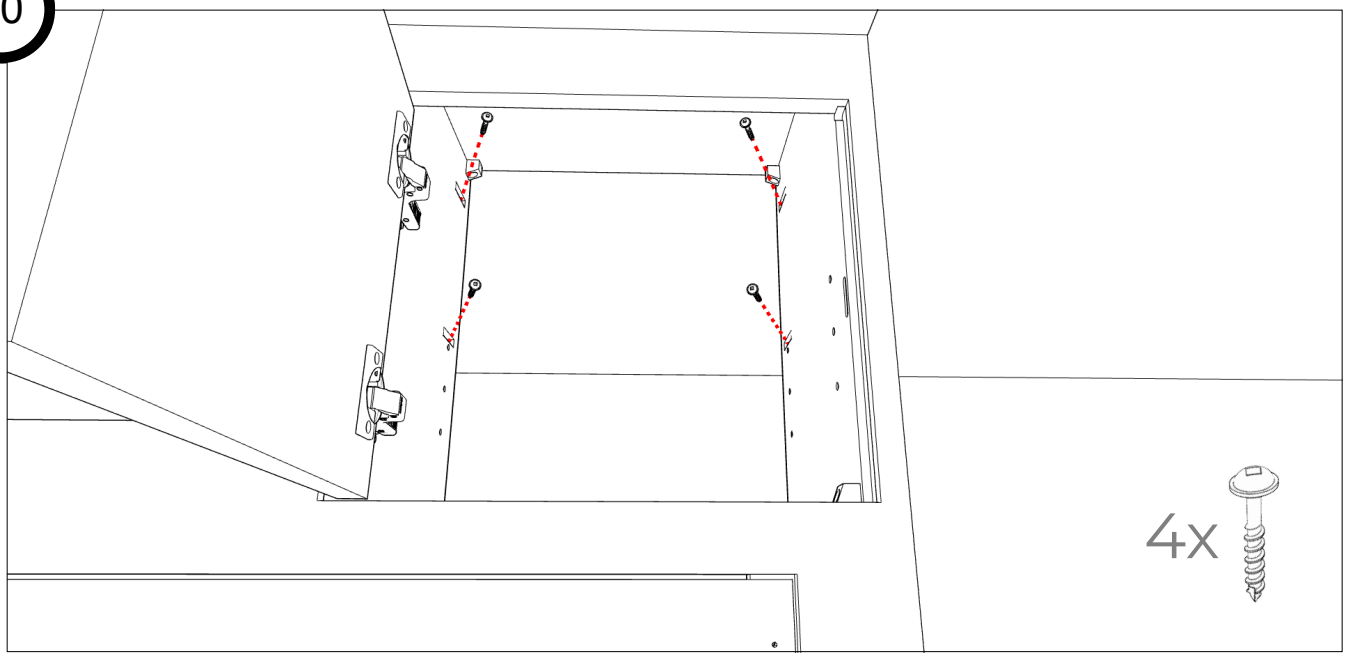
4x


11

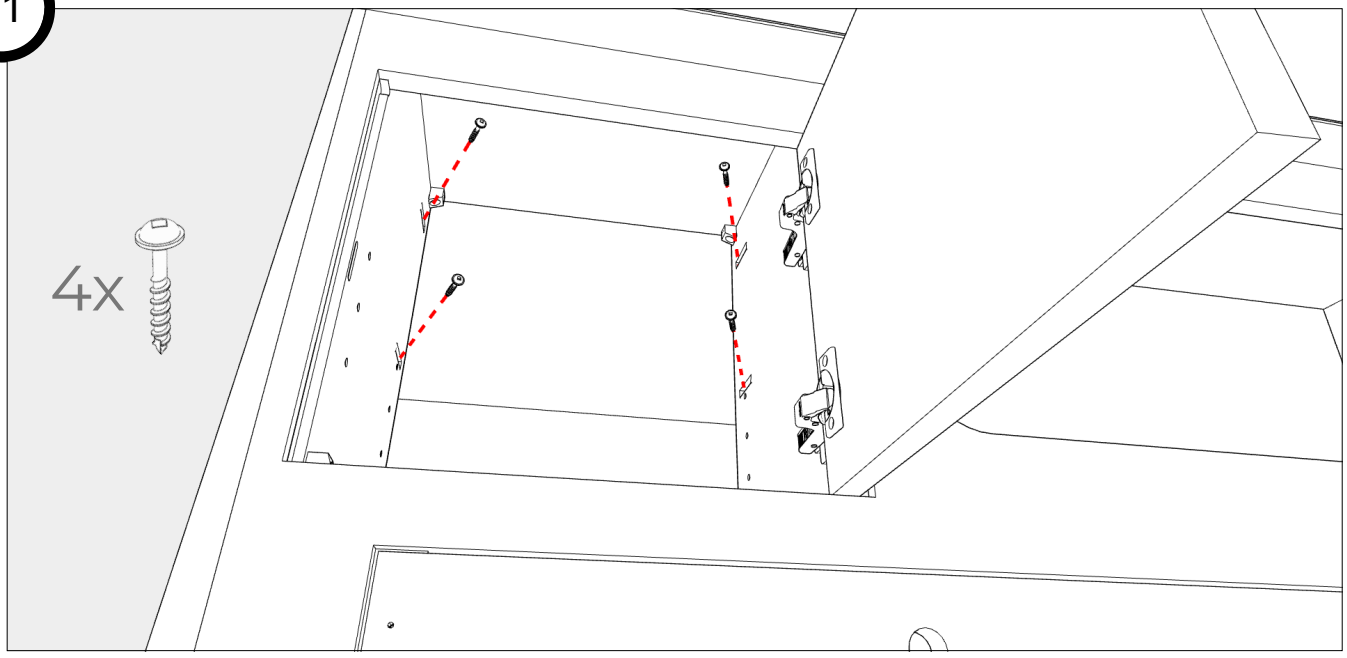
4x


12

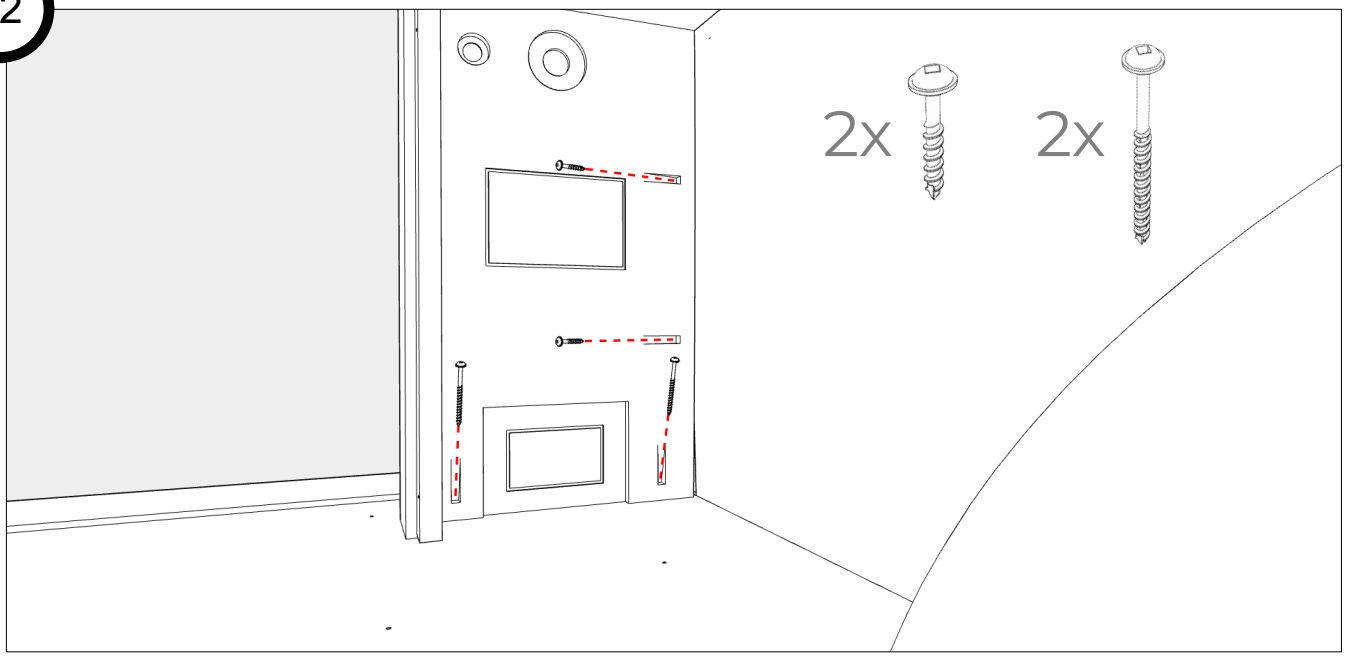

13

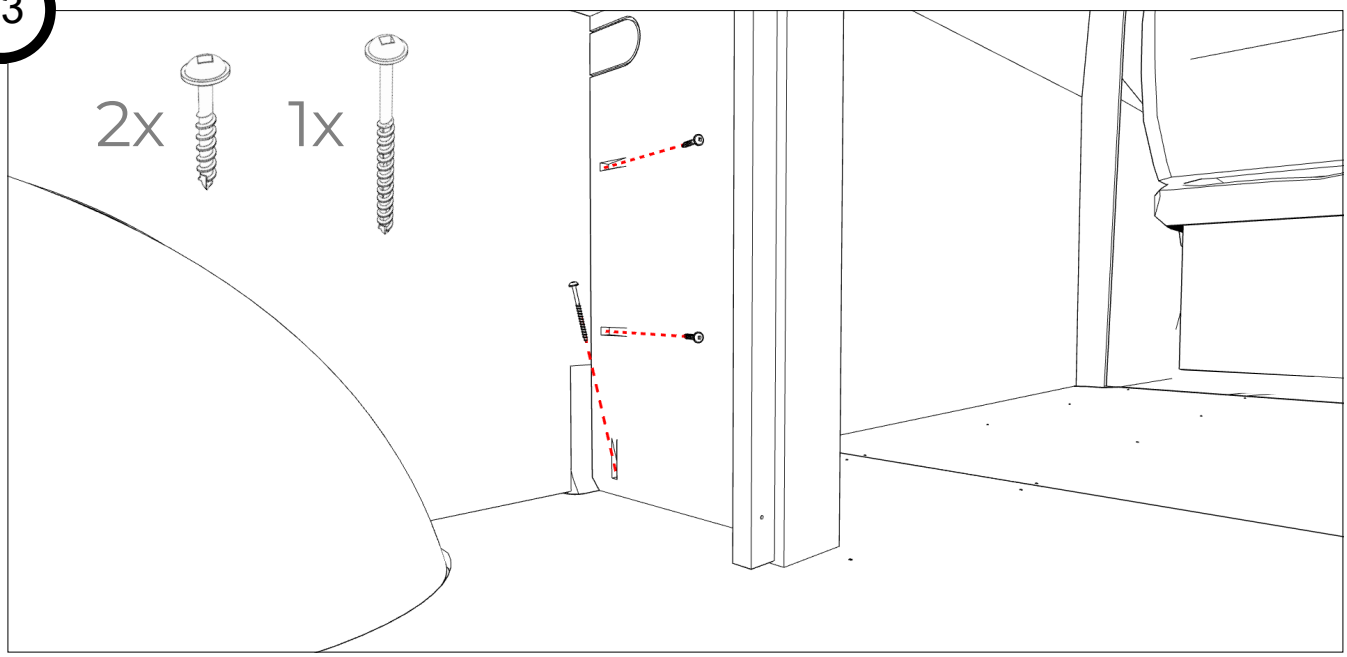


14

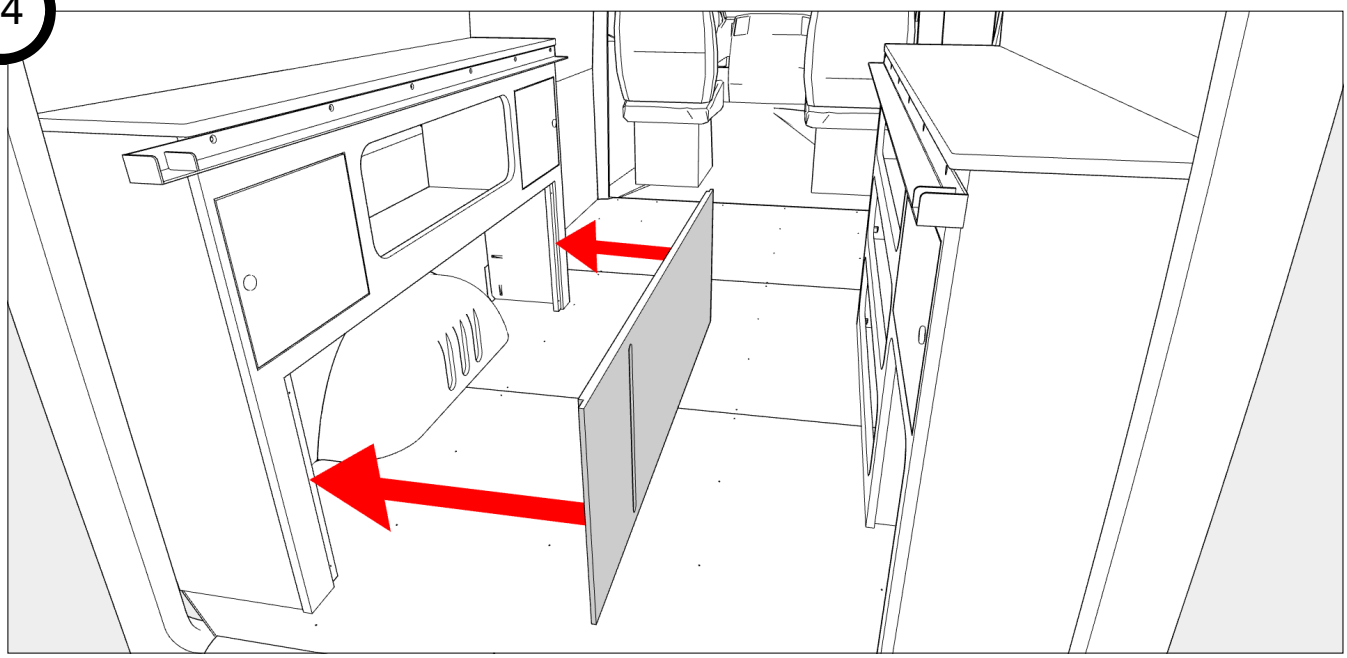

TIMBER

WWC & Bed Assembly Complete
Congratulations!

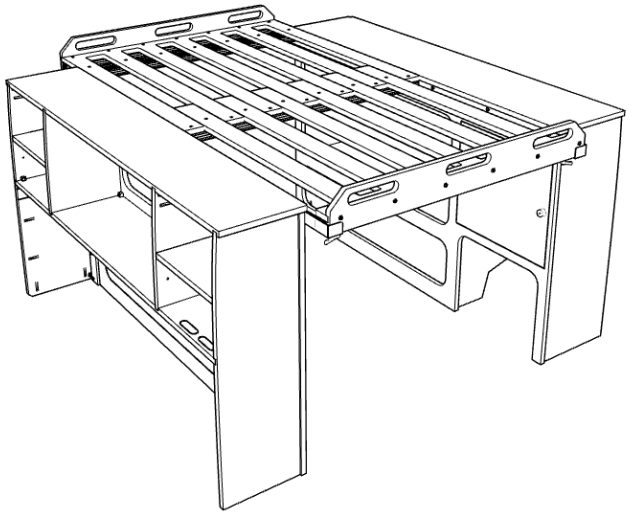

We'd love to see your finished wood cabinet in its new home! Share your photos on social media using the hashtag #TimberVanKits, and don't forget to tag us. Your creations inspire us, and we believe they will inspire others too.

Thank you once again for choosing Timber Van Kits. Your dedication and craftsmanship have brought our product to life, and we look forward to being a part of your future adventures!

TIMBERVANKITS.COM • 720-282-5075

Have a question or issues with your product? Feel free to call us or send a message via the contact page on our website. If you call us and we can't get to the phone please leave us a message and we'll get back to you as soon as we can.

facebook.com/timbervankits

instagram.com/timbervankits