
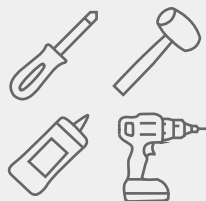


DIY WWC PASSENGER CAB



TIMBER

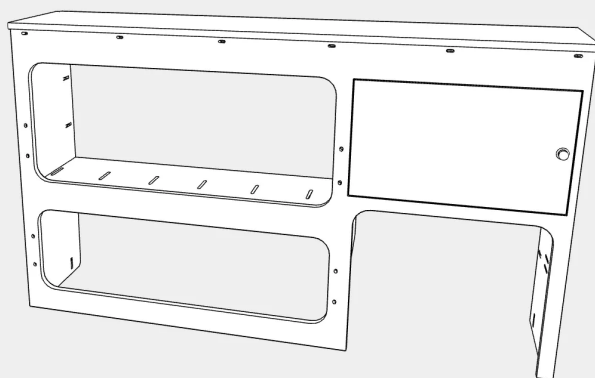



Note:

Depending on the version of cabinet purchased, some features may be cut all the way through or just pocketed.

Pocketed features can be cut out later by following the grooves.

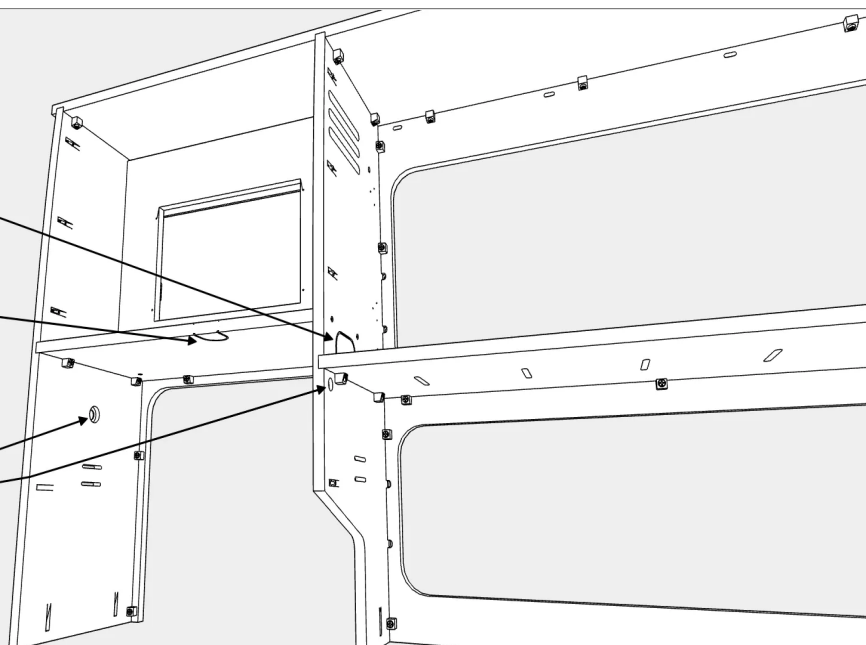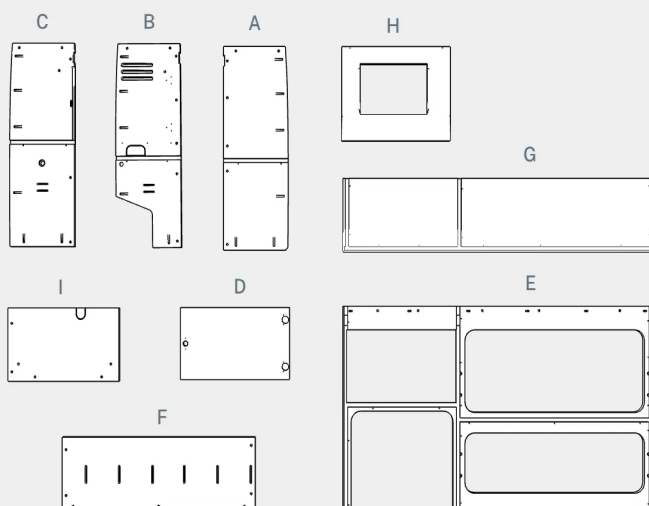


1

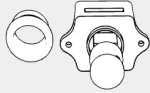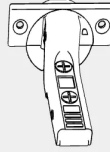x42
OUT108x42
FAS279x1
HAR056x2
HAR039x2
HAR470x7
FAS161x14
FAS199x5
FAS017x4
FAS030x12
FAS331

2


Before assembling:
sand all holes, channels,
edges, and faces of
wood panels to remove
imperfections and
achieve a smooth finish.
This will help the pieces
fit together cleanly. The
more time spent
sanding, the better the
end result will be.

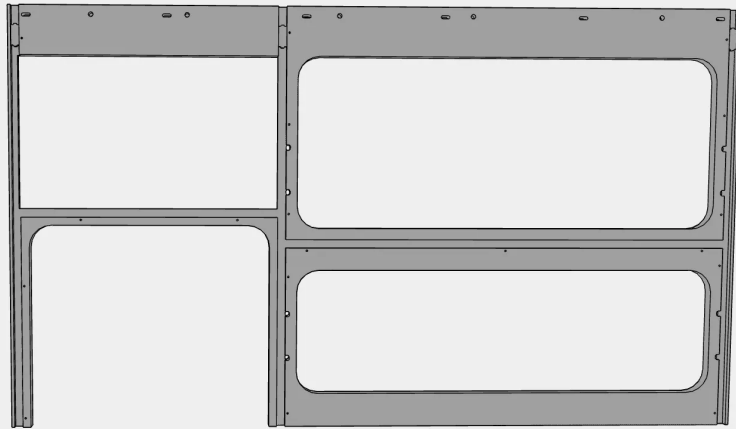


3




x4

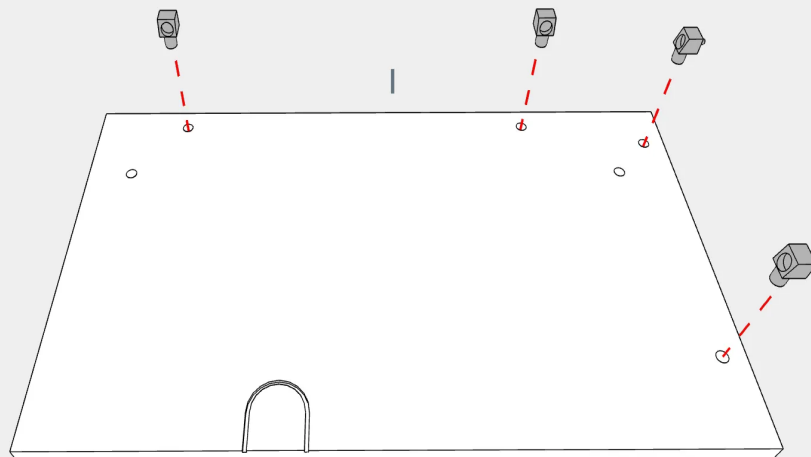


4

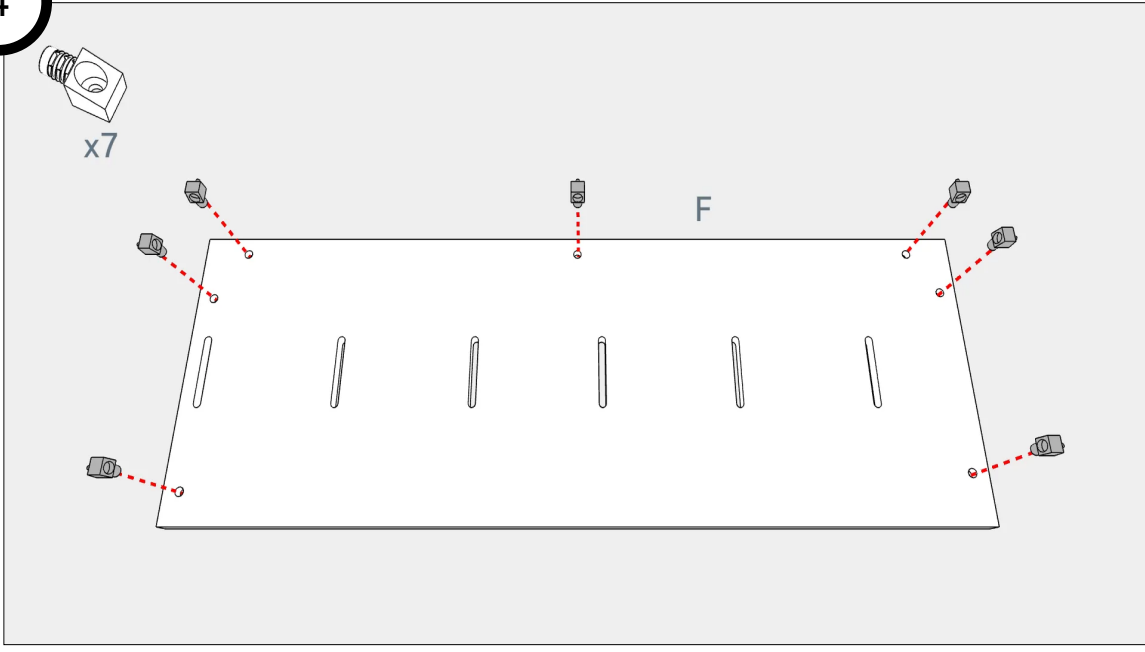

5

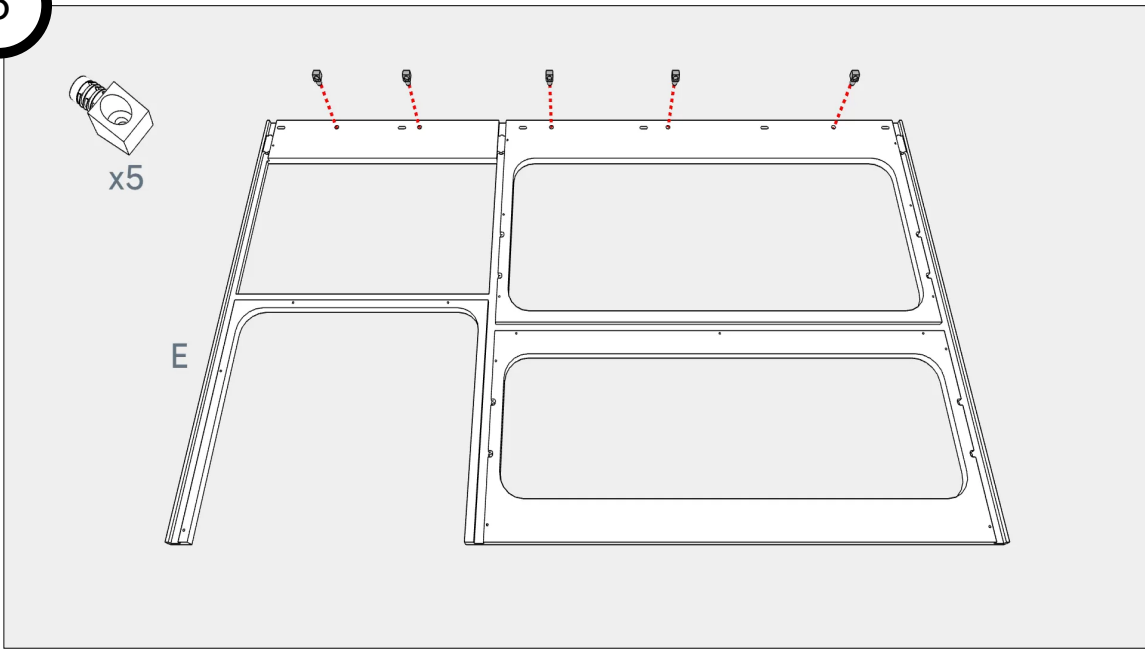


6

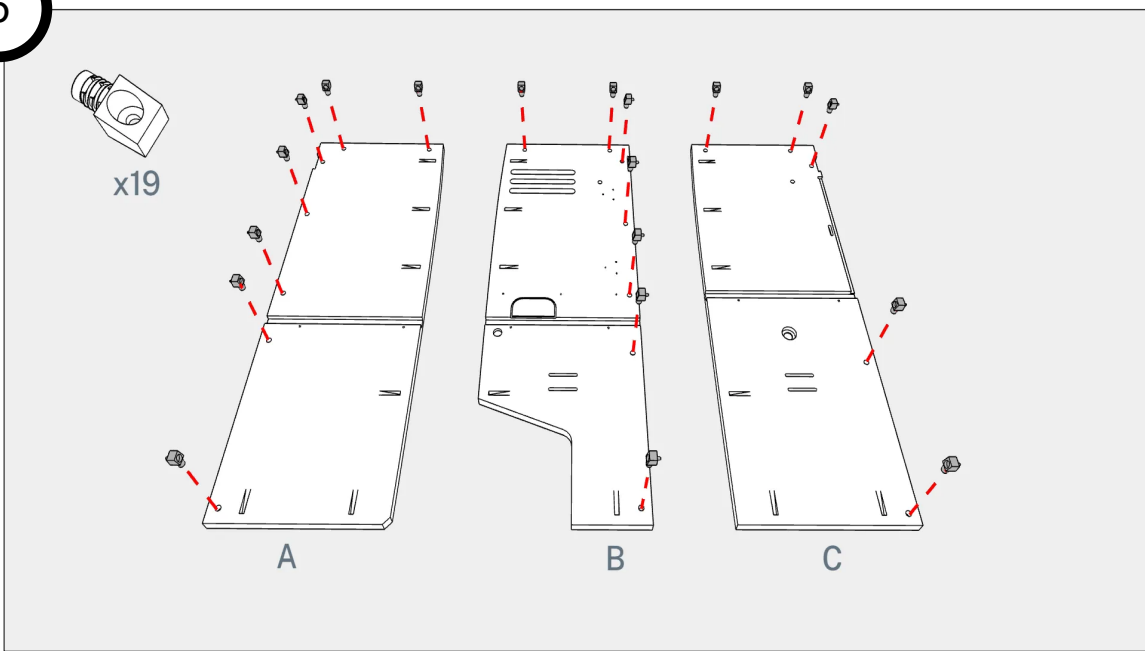


7

Note: We recommend dry-fitting wood panels before gluing to check the fit. Apply wood glue to **channels** where the wood panels joint, just before attaching.


Repeat for all wood joint pieces as you progress through your assembly.

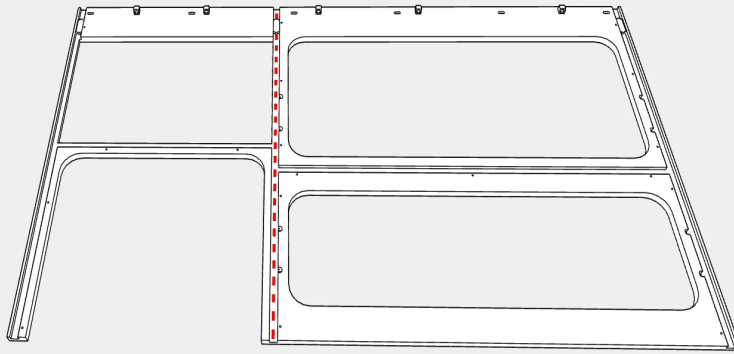


8

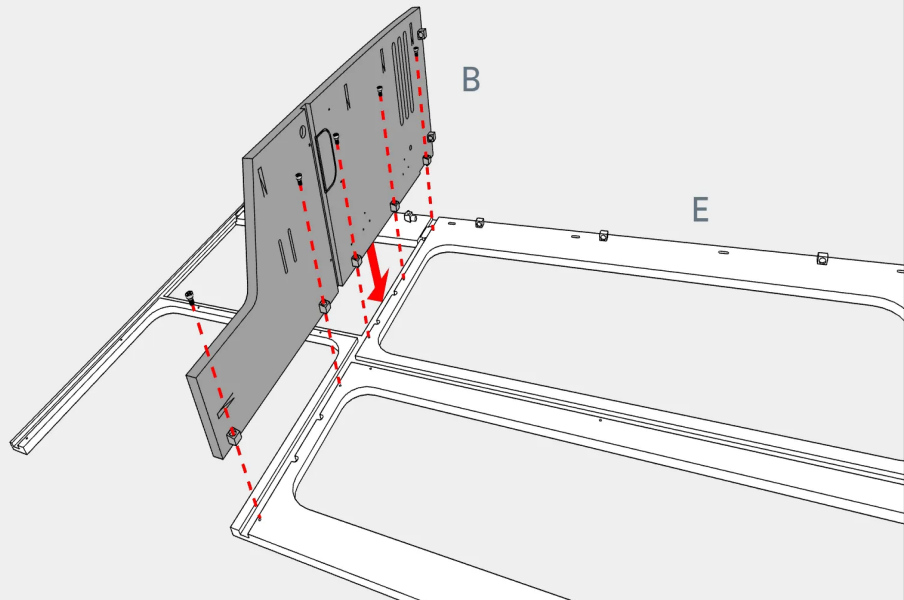
x5


9

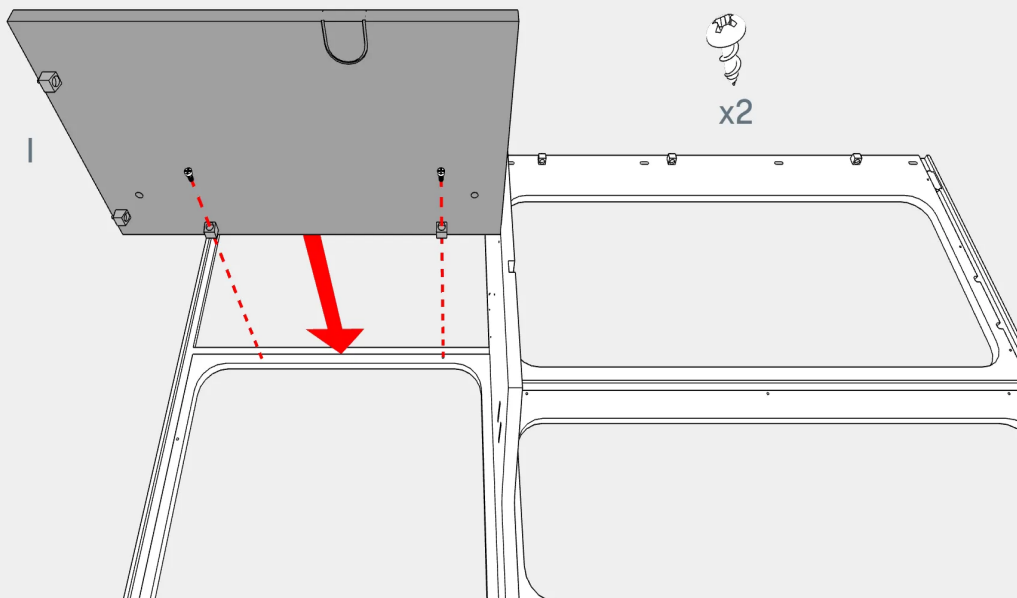
x2


10

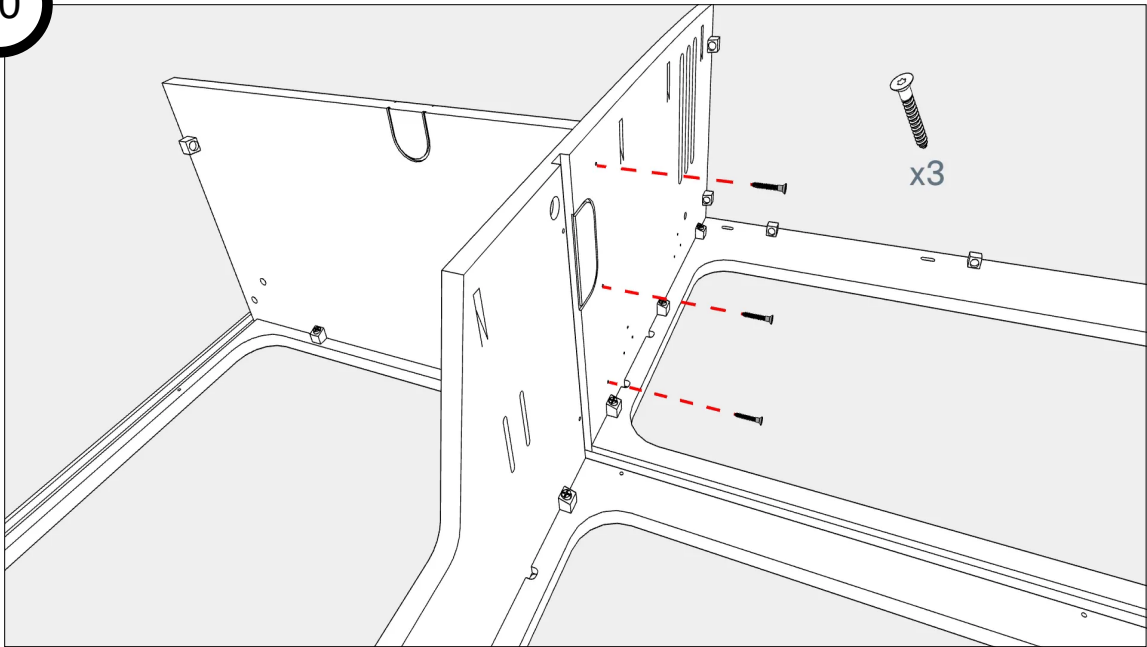


11

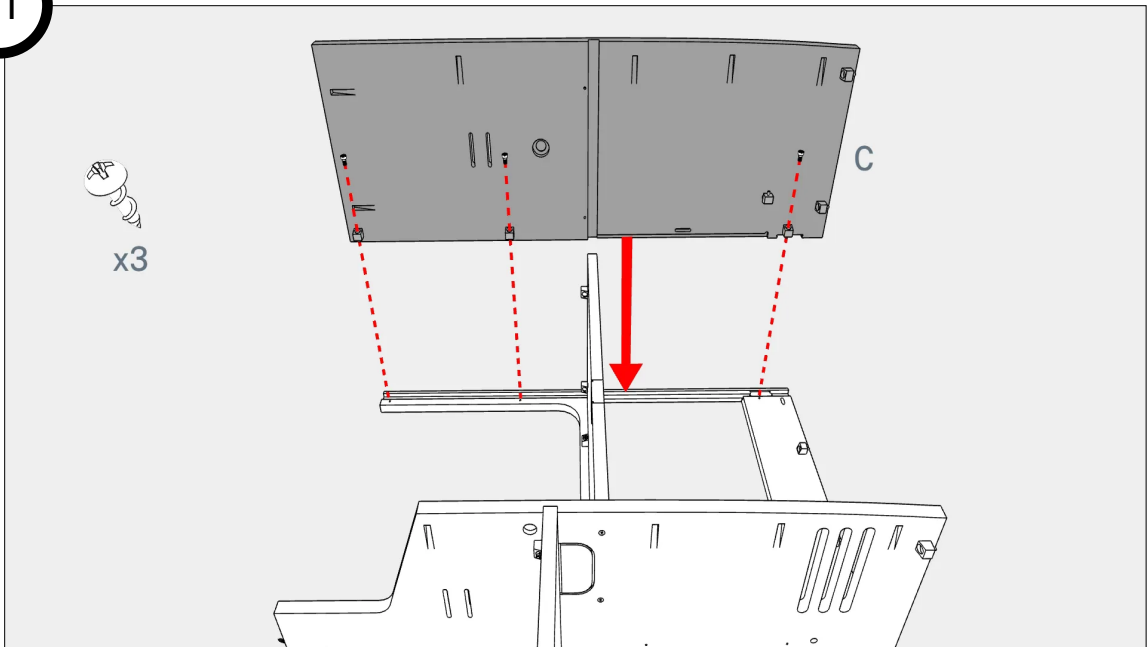


12

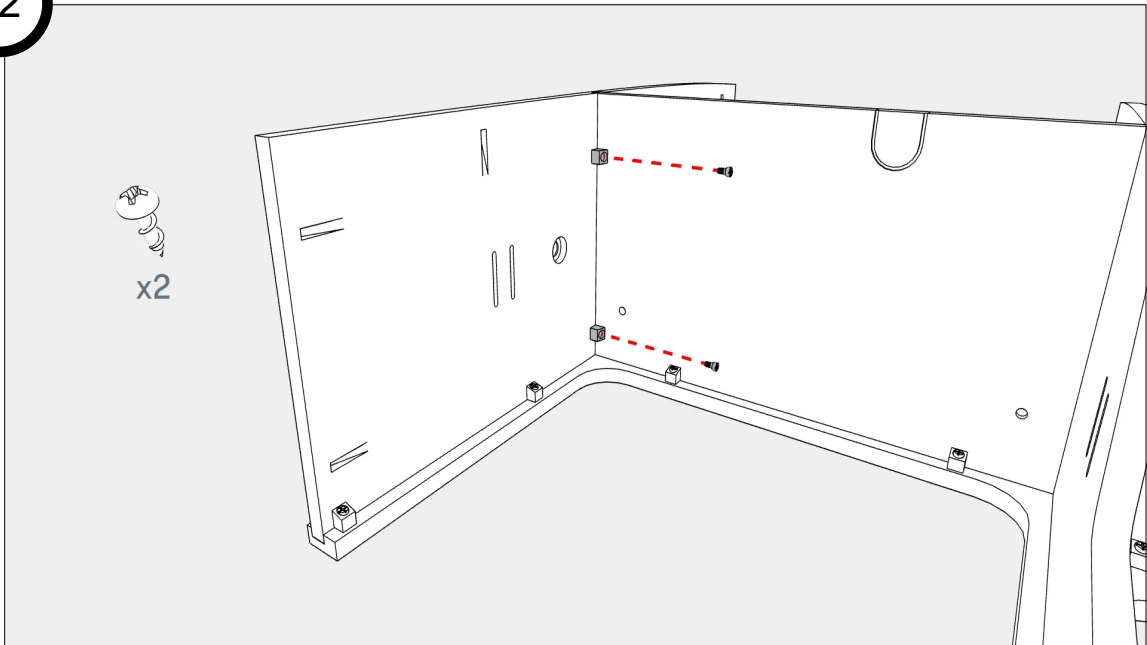


13

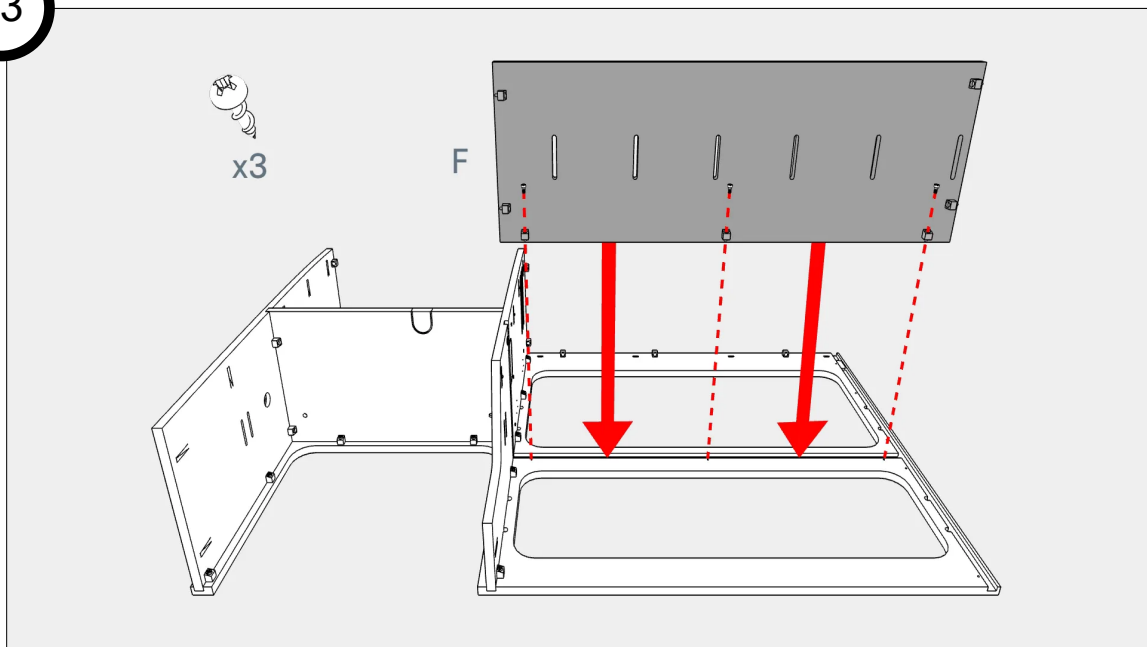


14

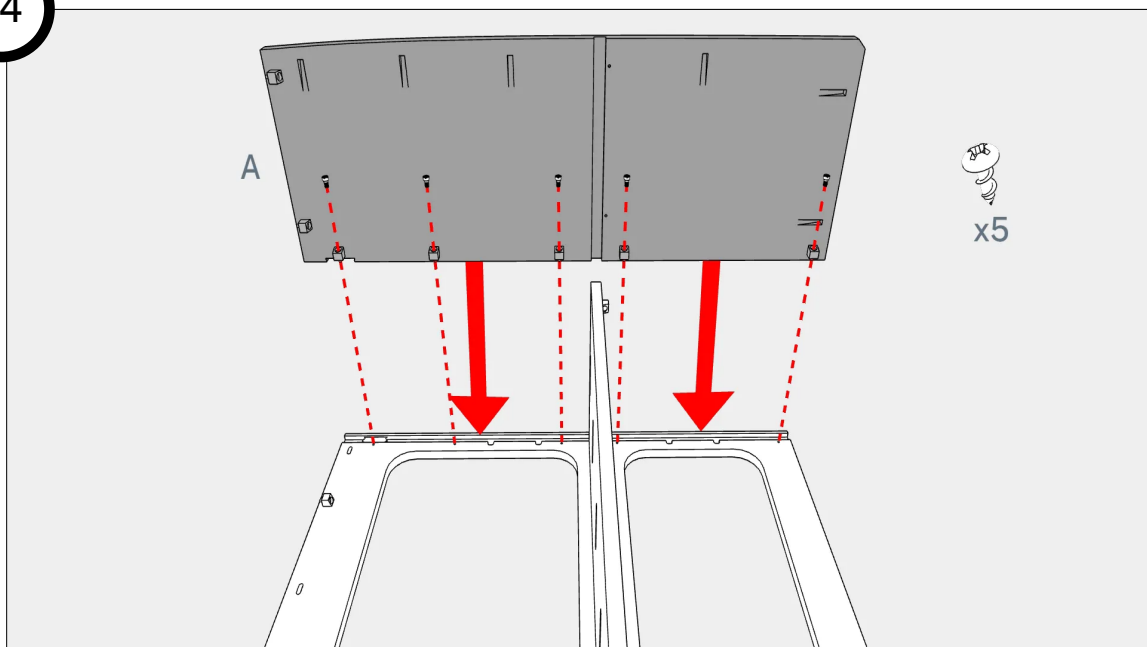


15

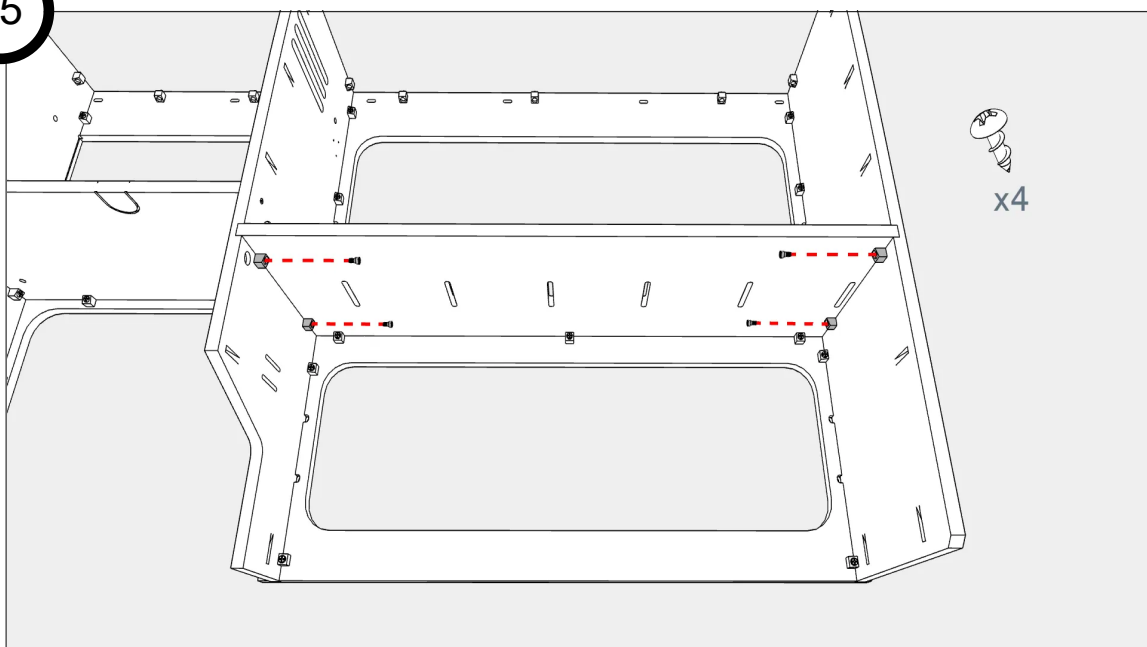


16

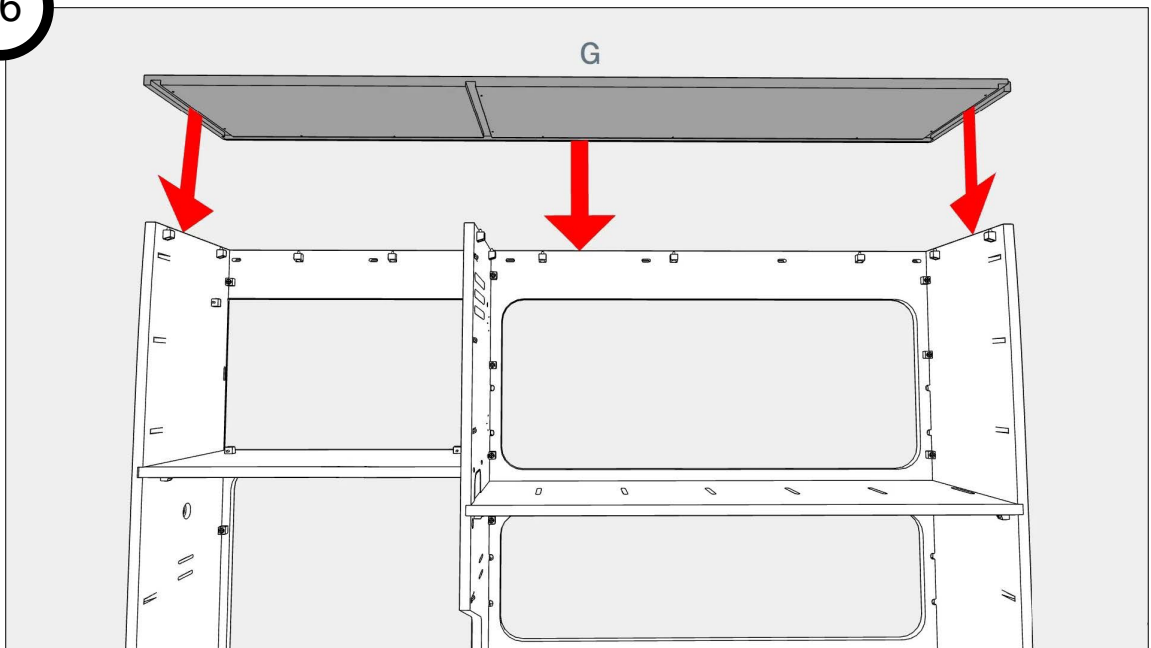

17

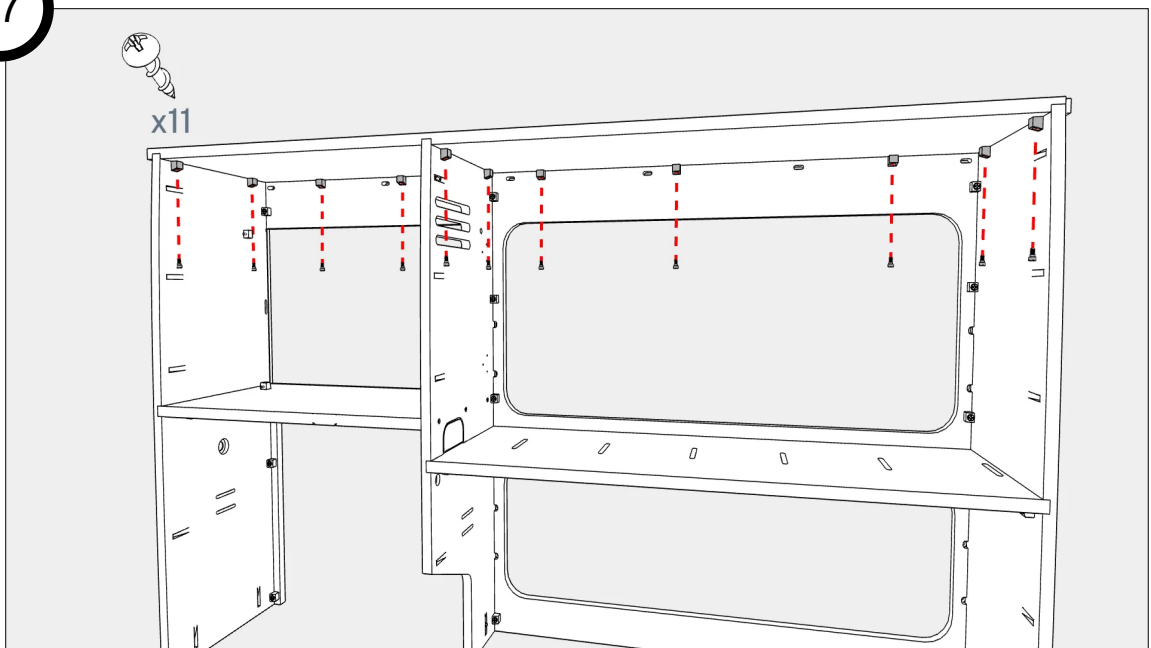


18

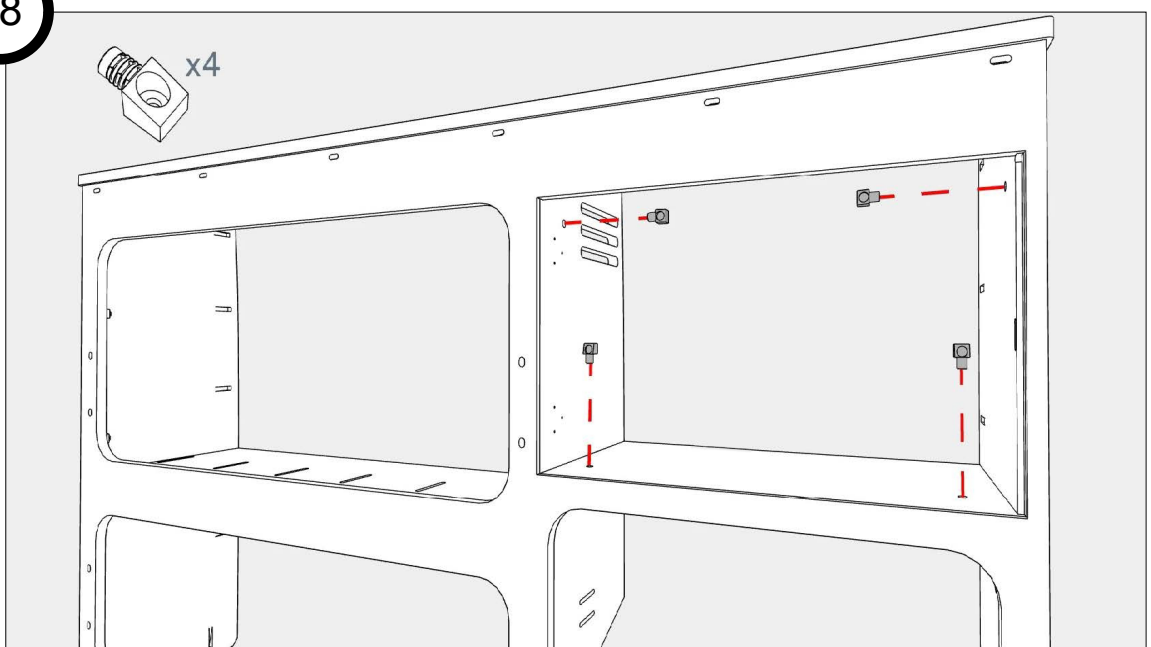


19


NOTE: For customers who bought just the bed system by itself, part H is completely optional. If you just wish to use this area for storage we'd recommend not installing part H. If you're building one of our full ship kits, panel H will be required for electrical installation

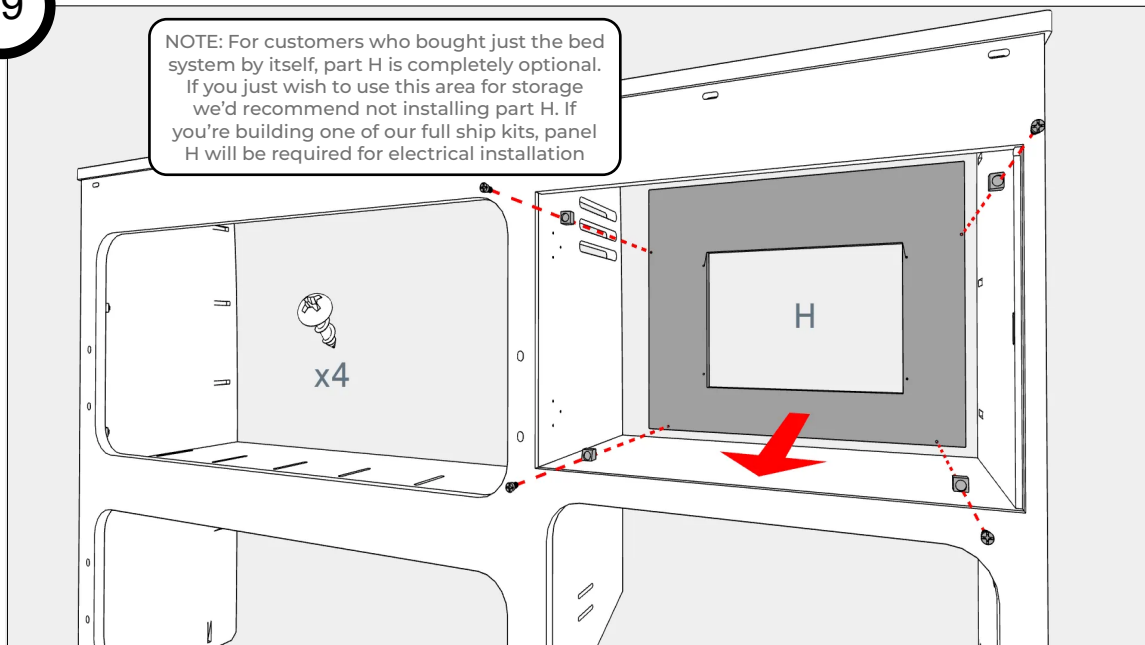


20

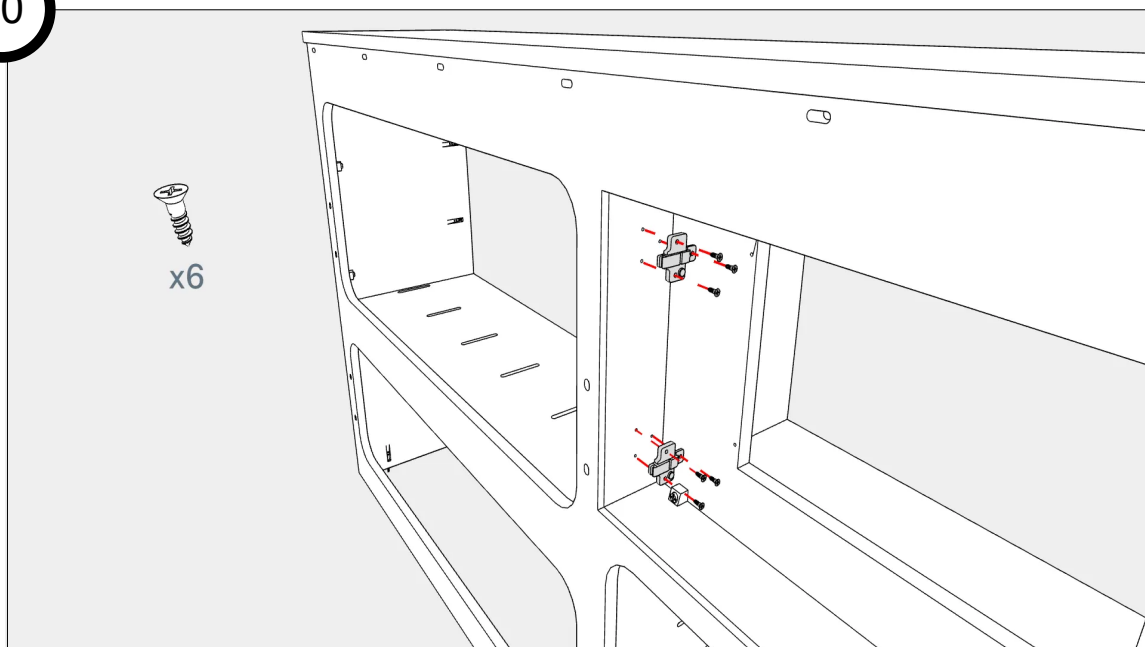


21

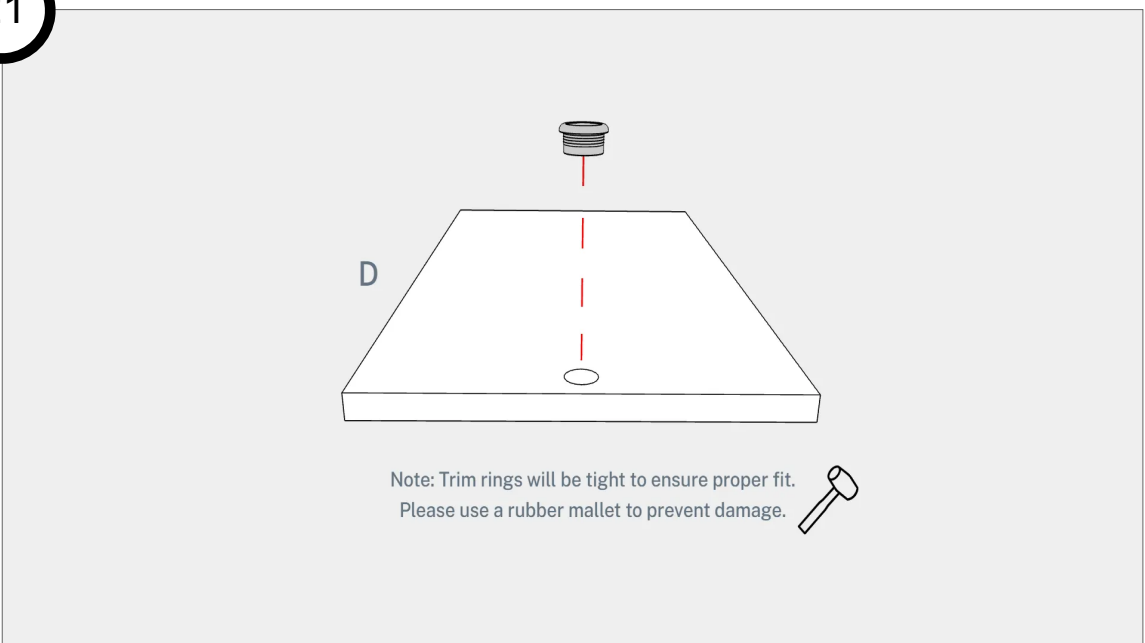


22



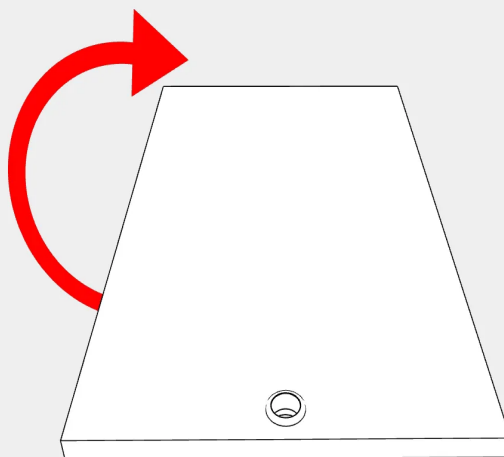



23

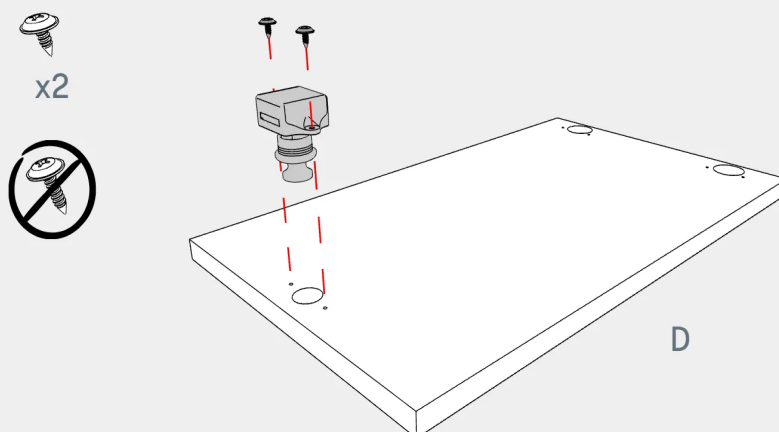

24

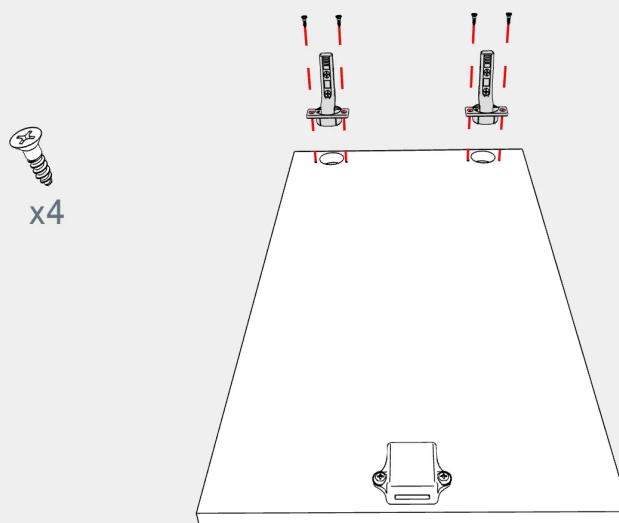


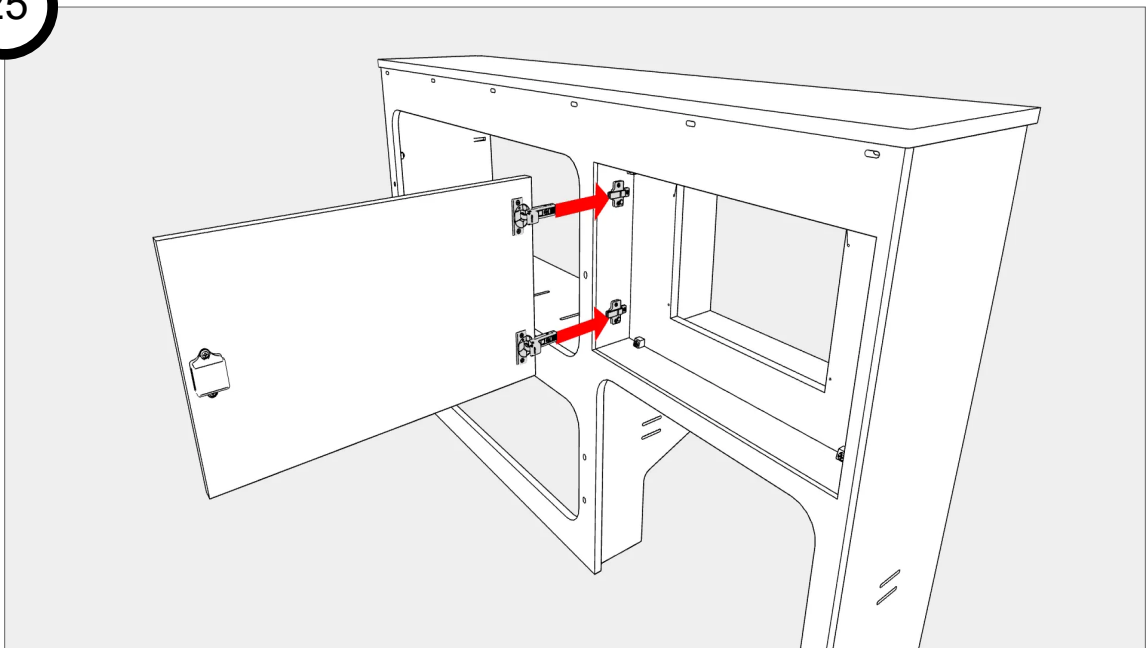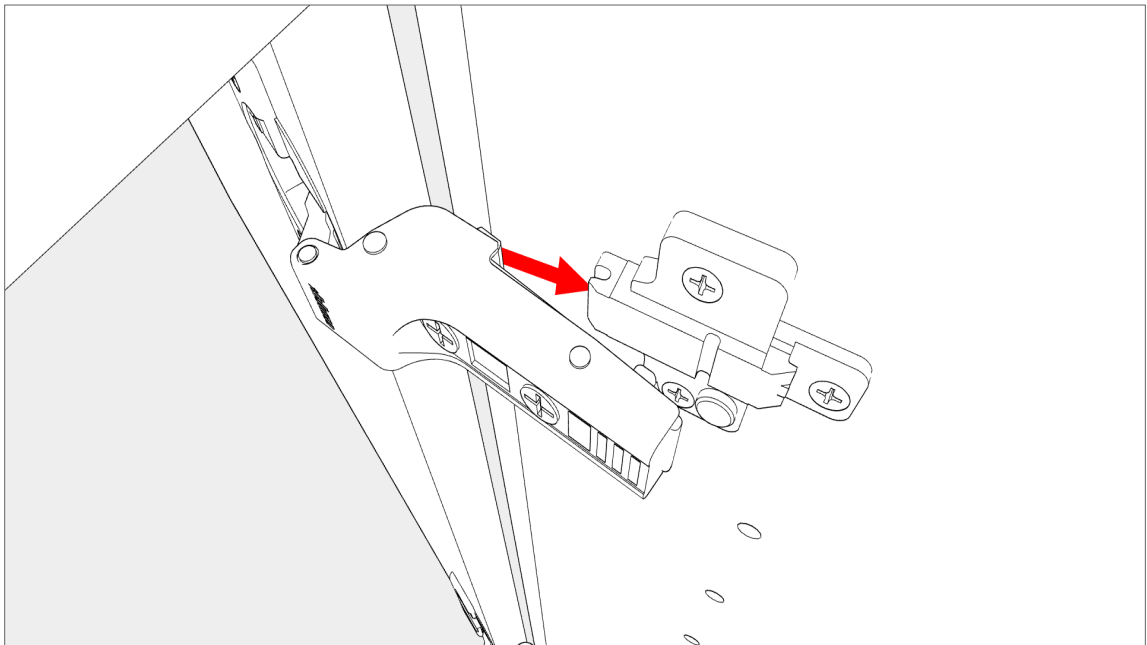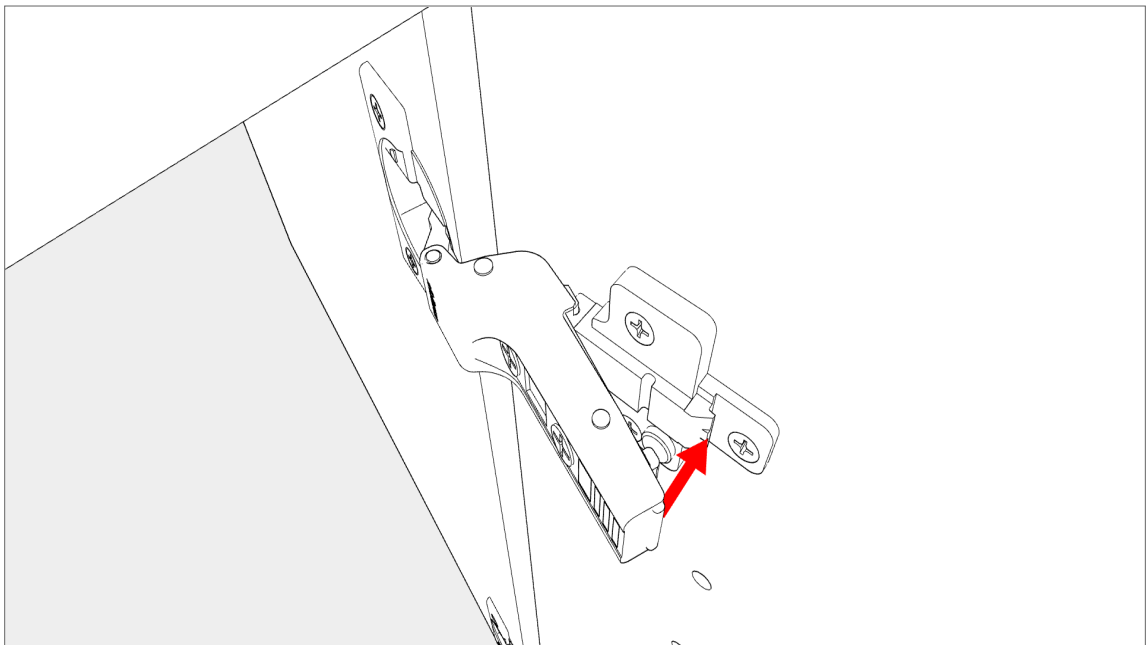

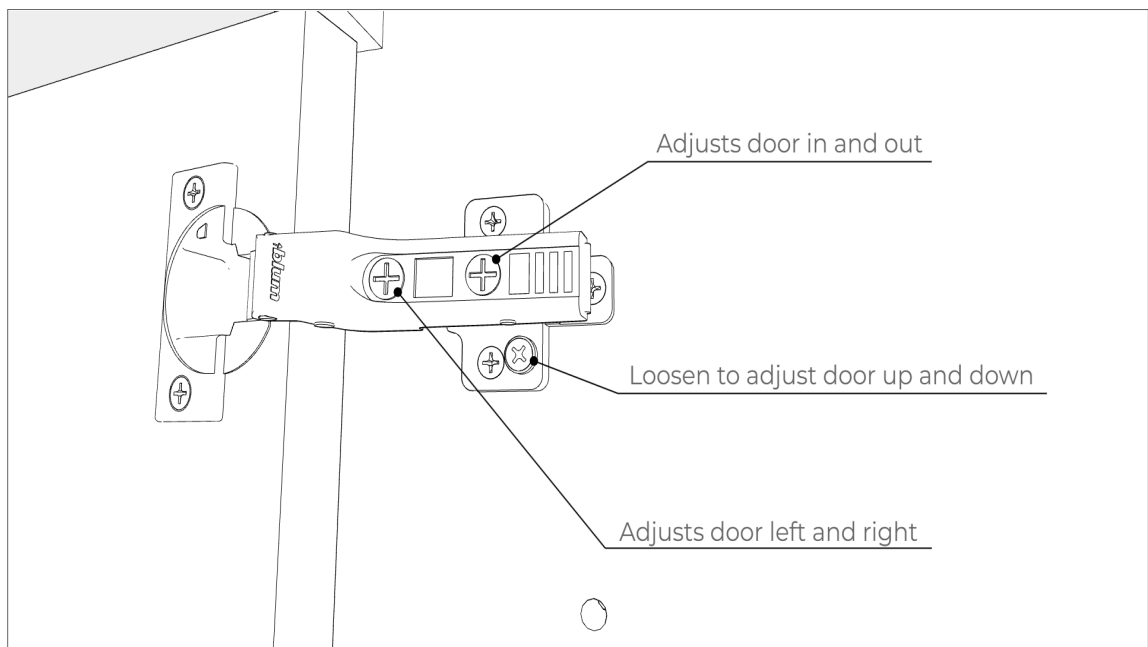





26

Optional:
Use the pre-cut
slots to attach
bungee cords
across cabinet
face.

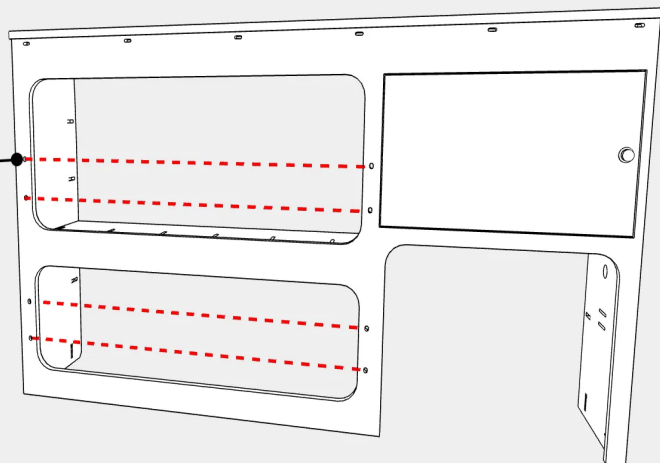


DIY WWC DRIVER CAB

TIMBER

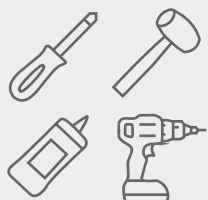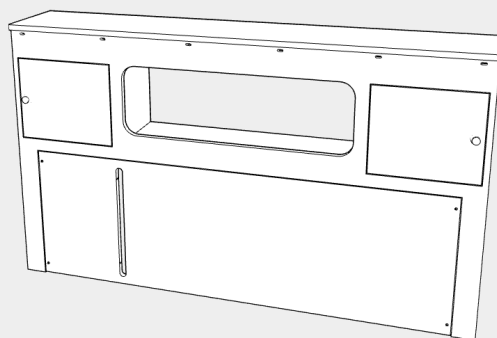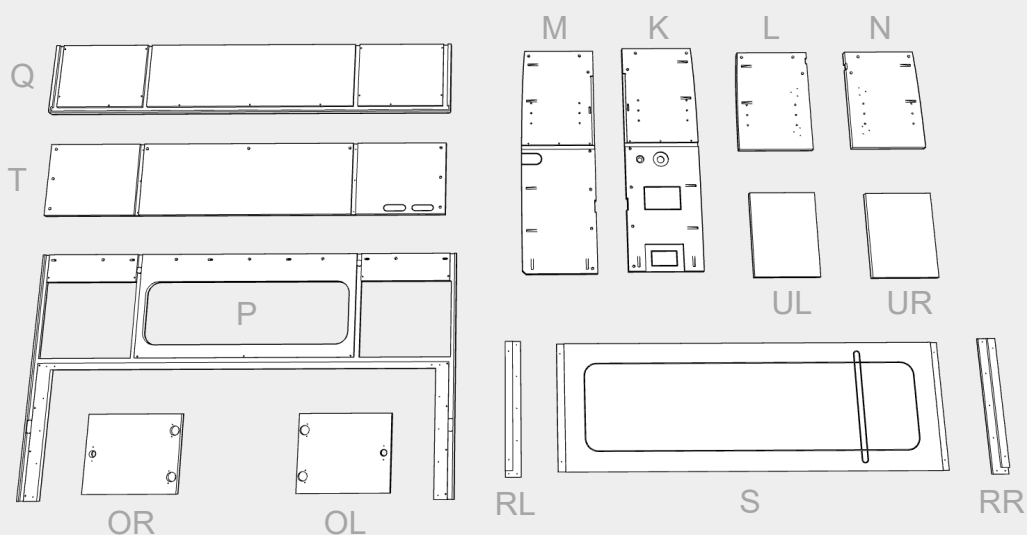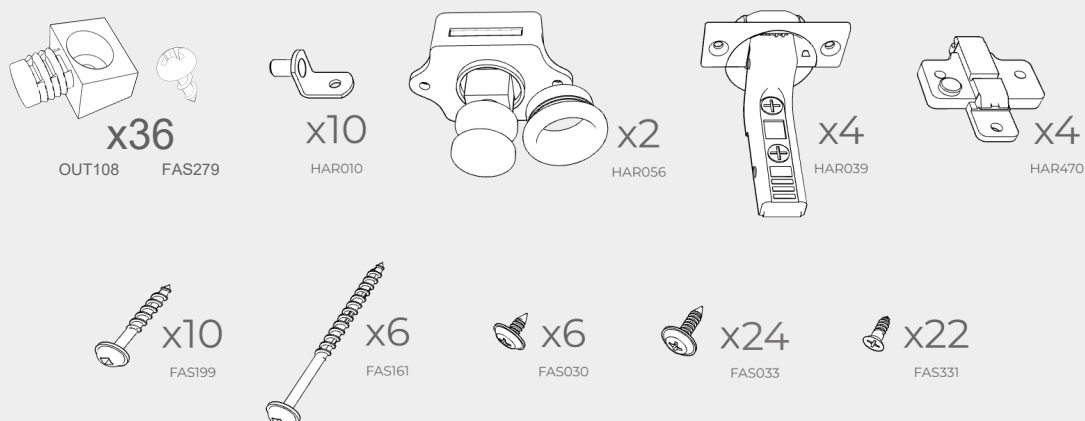


Note:
After assembly, you
can use the precut
slots to attach
bungee cords
across the cabinet
face

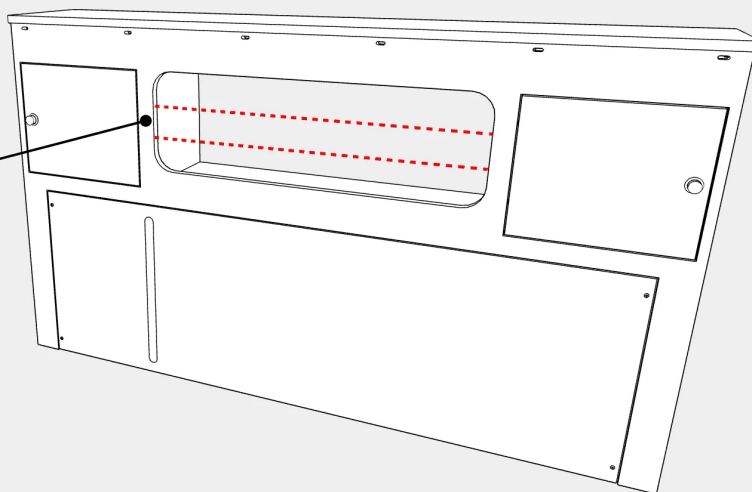


1

Before assembling:
sand all holes, channels, edges
and faces of wood panels to
remove imperfections and achieve
a smooth finish. This will help the
pieces fit together cleanly. The
more time spent sanding, the
better the end result will be.


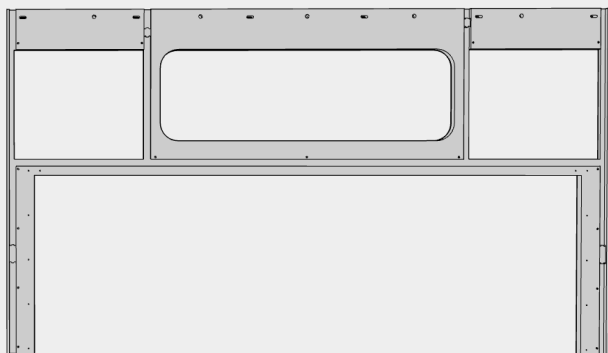


2

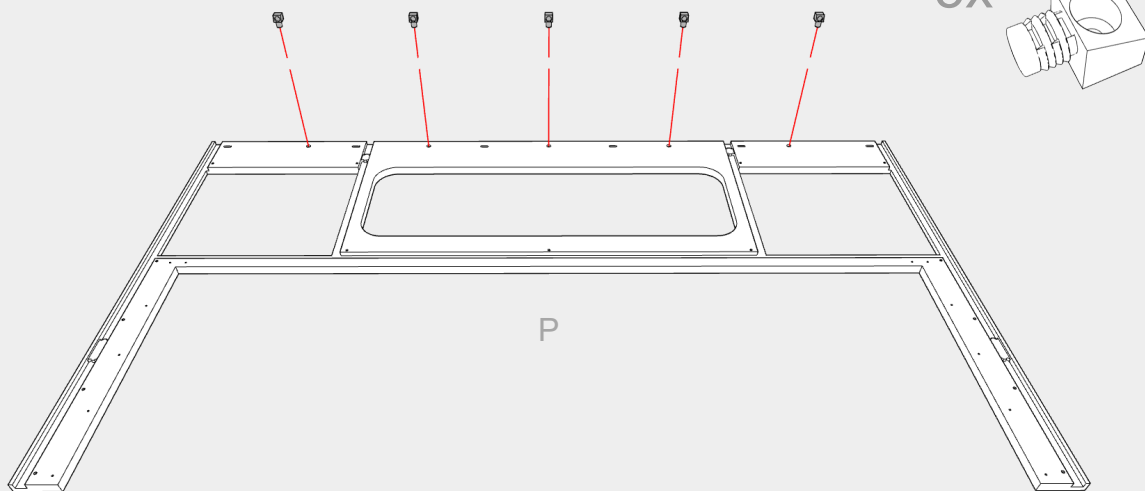


3

14x

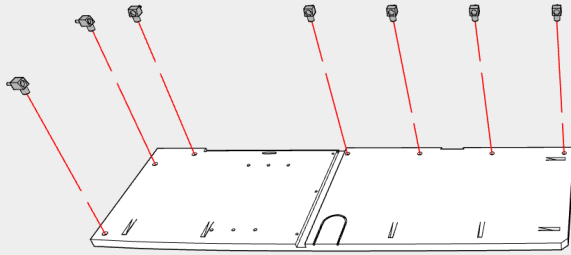



M

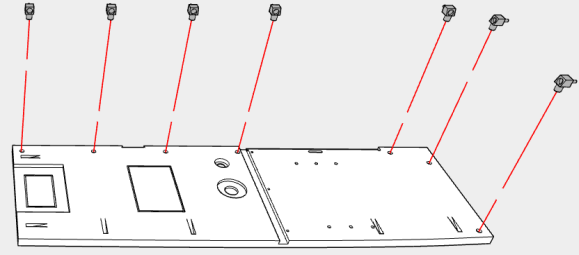


K

4


15x

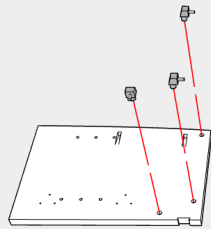

L

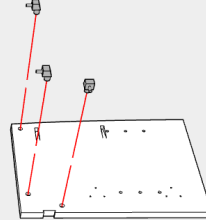


N

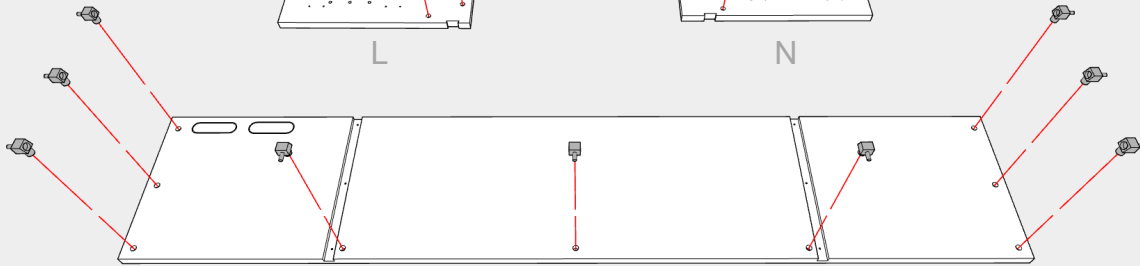


T

5


Note: We recommend dry-fitting wood panels before gluing to check the fit. Apply wood glue to channels where wood panels joint just before attaching. Repeat this for all wood joint pieces as you progress through your assembly.

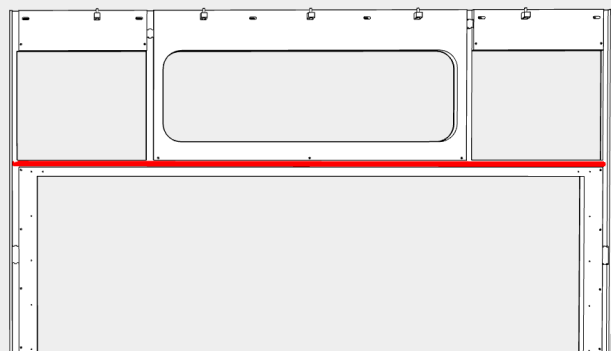


6

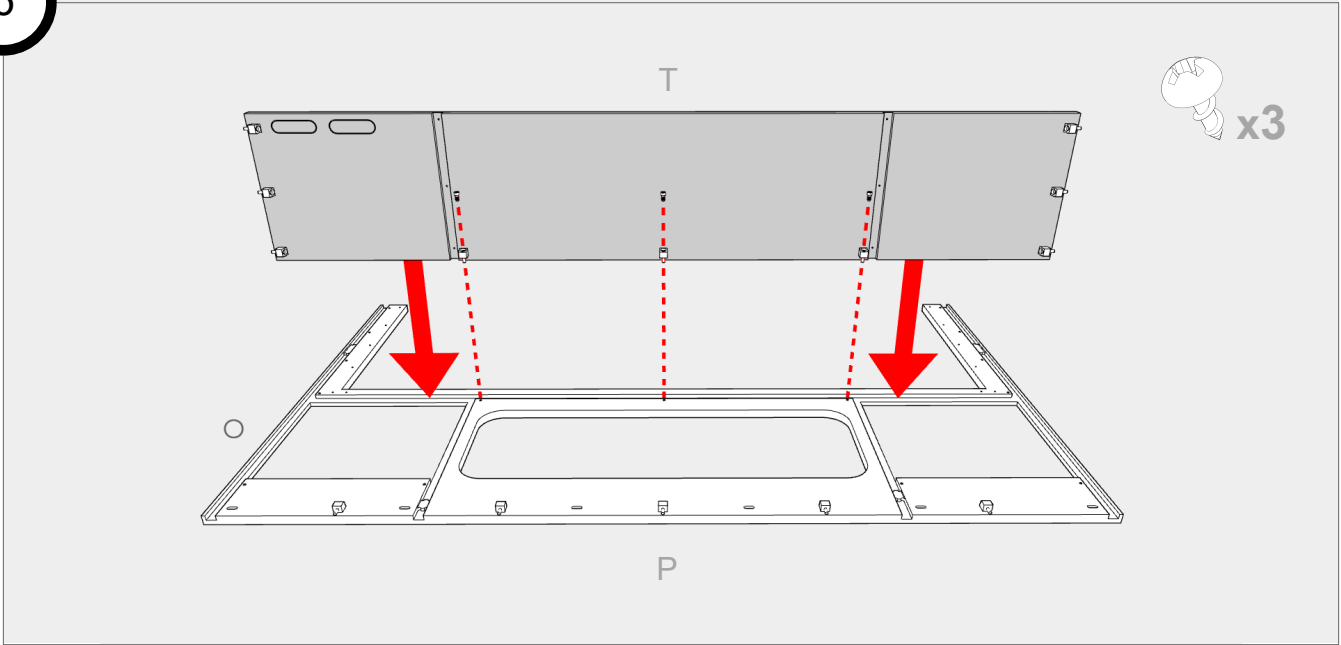


7

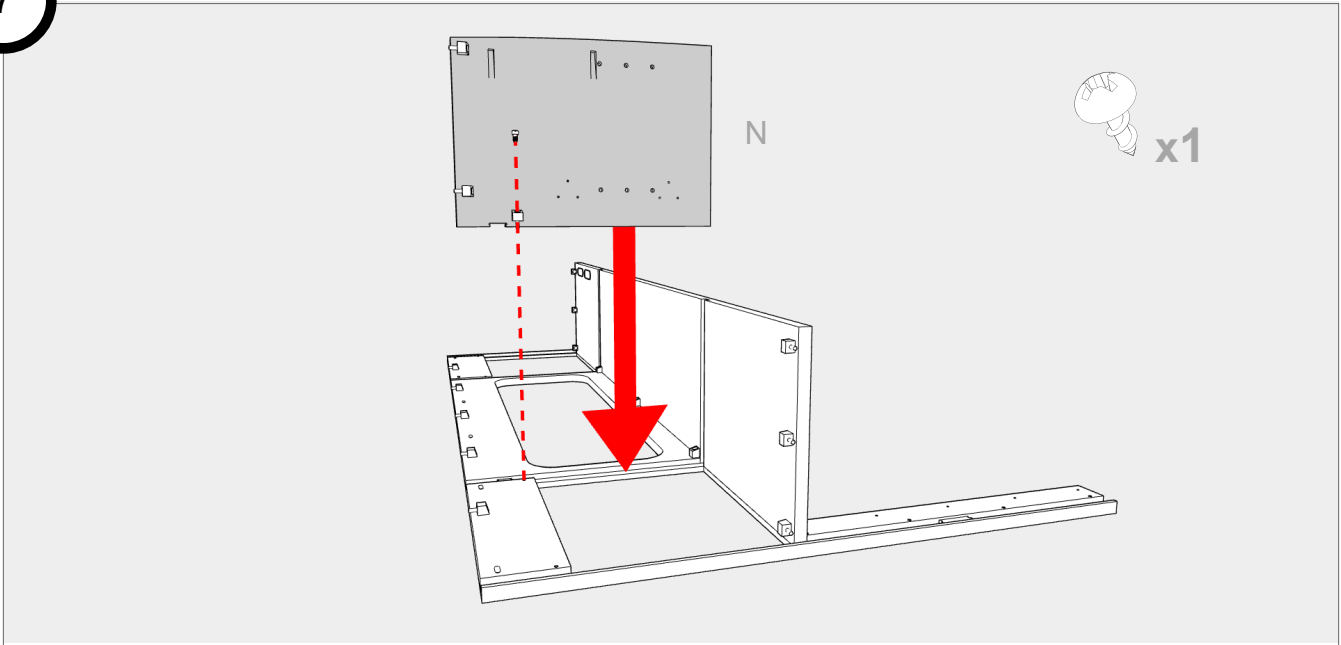


8

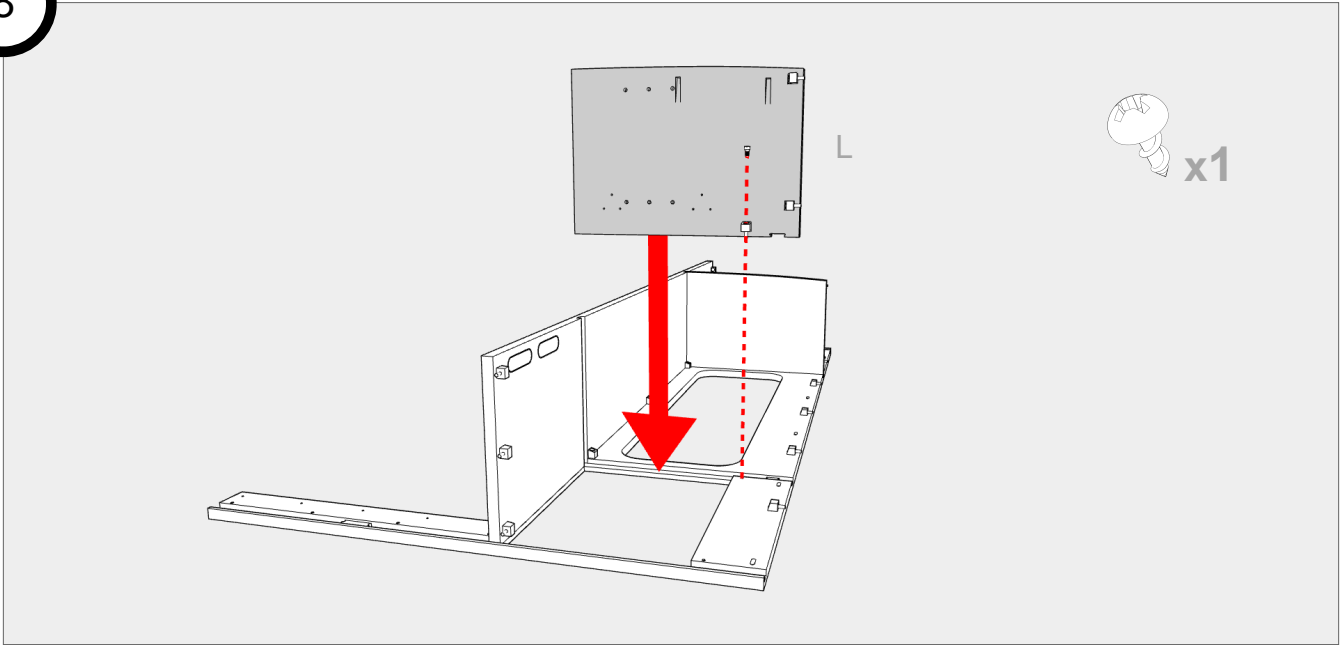


9

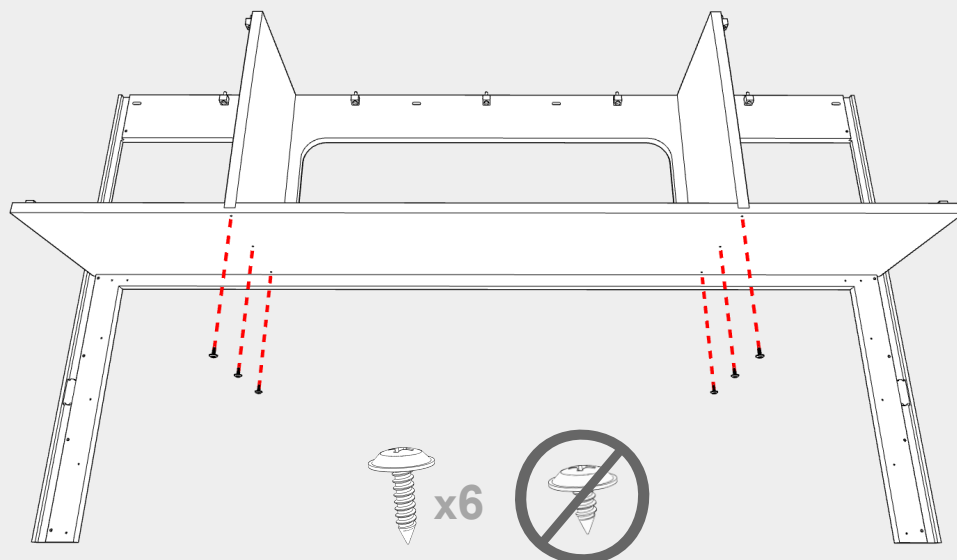


10

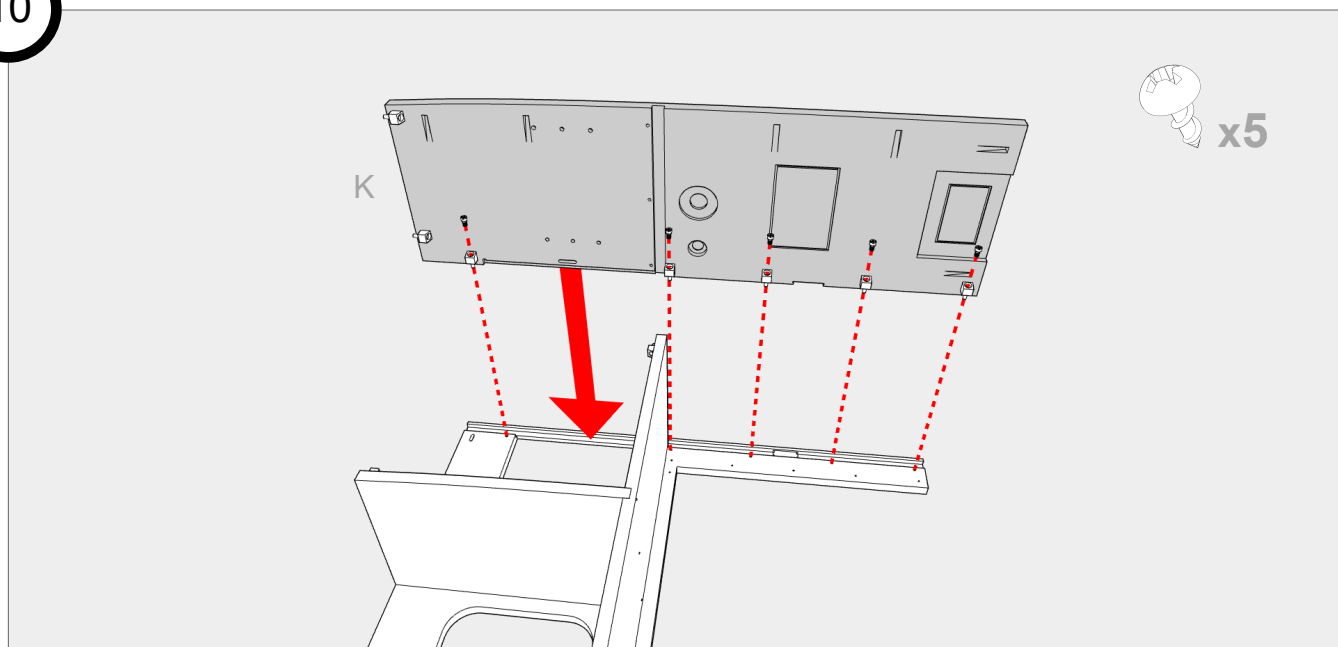


11

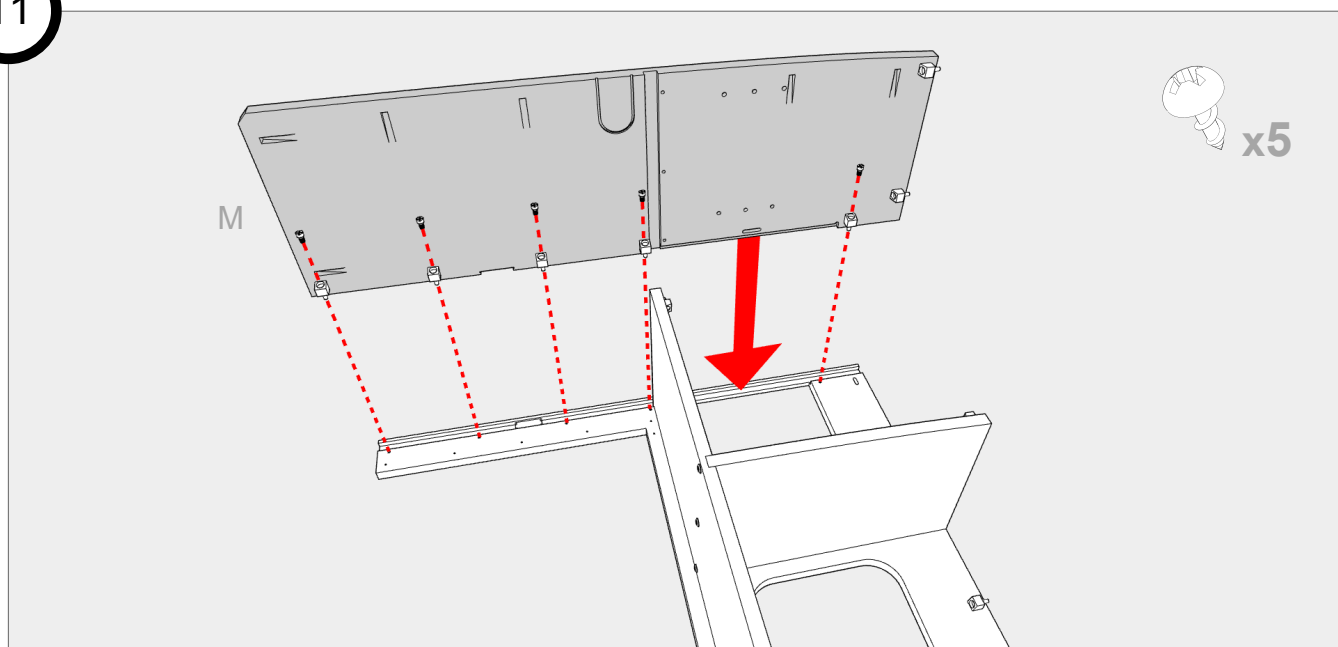


12

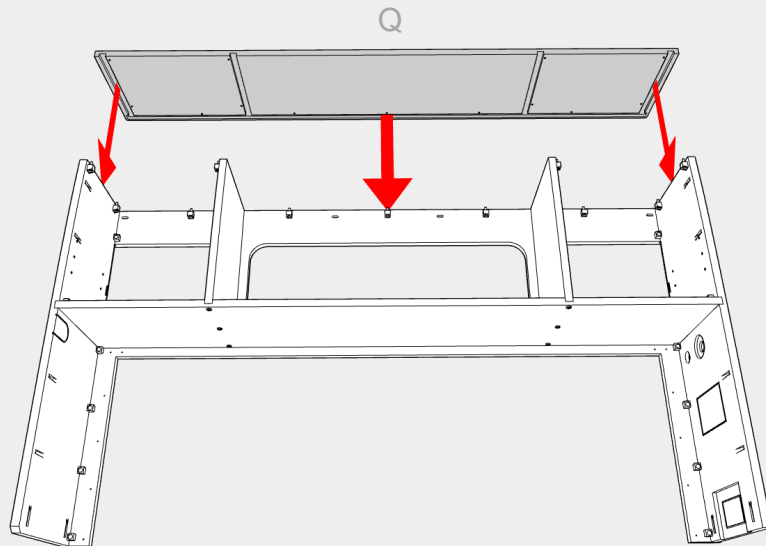


13

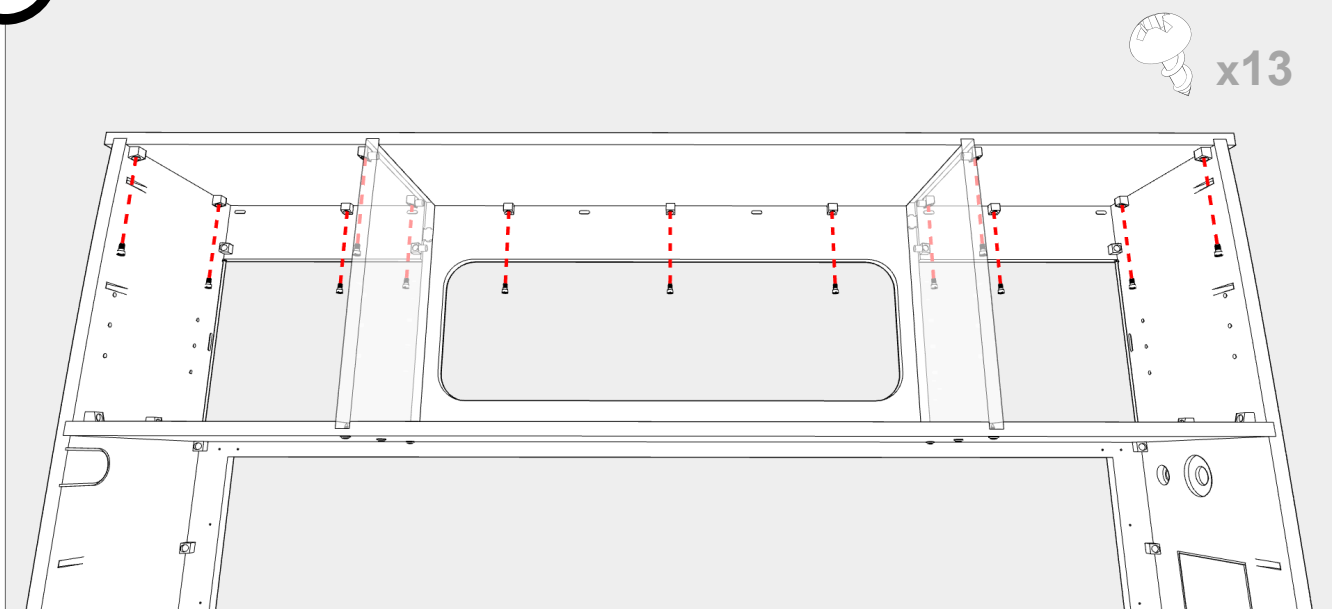


14

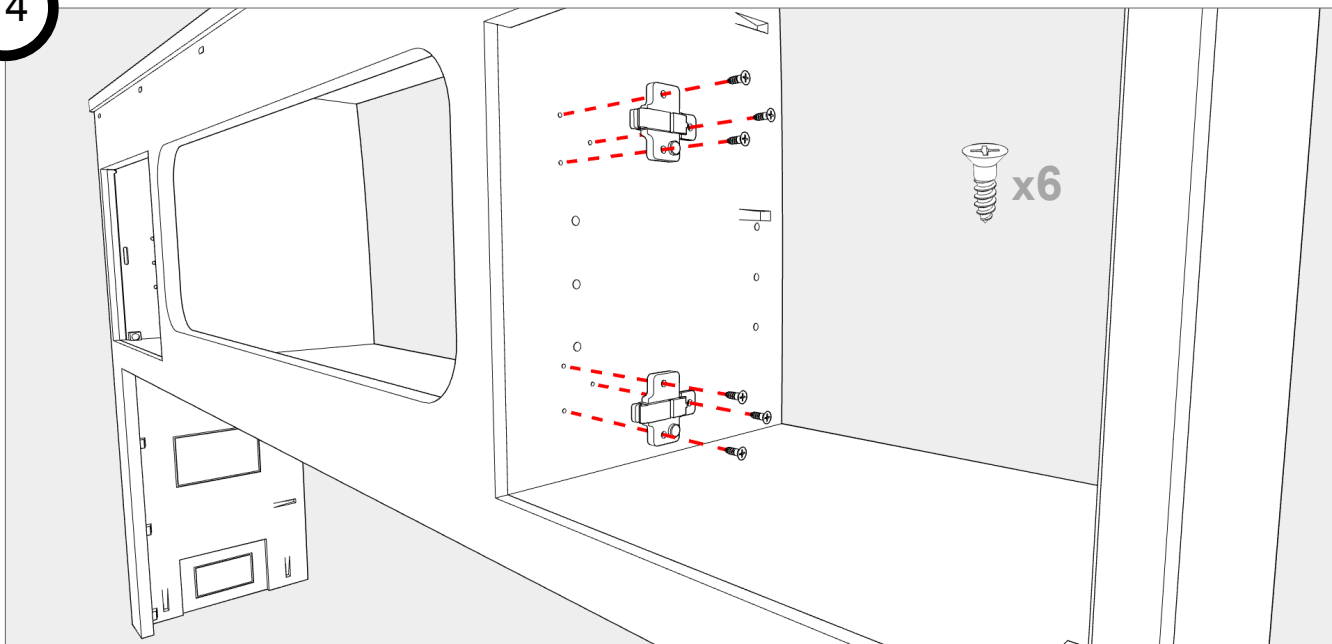


15

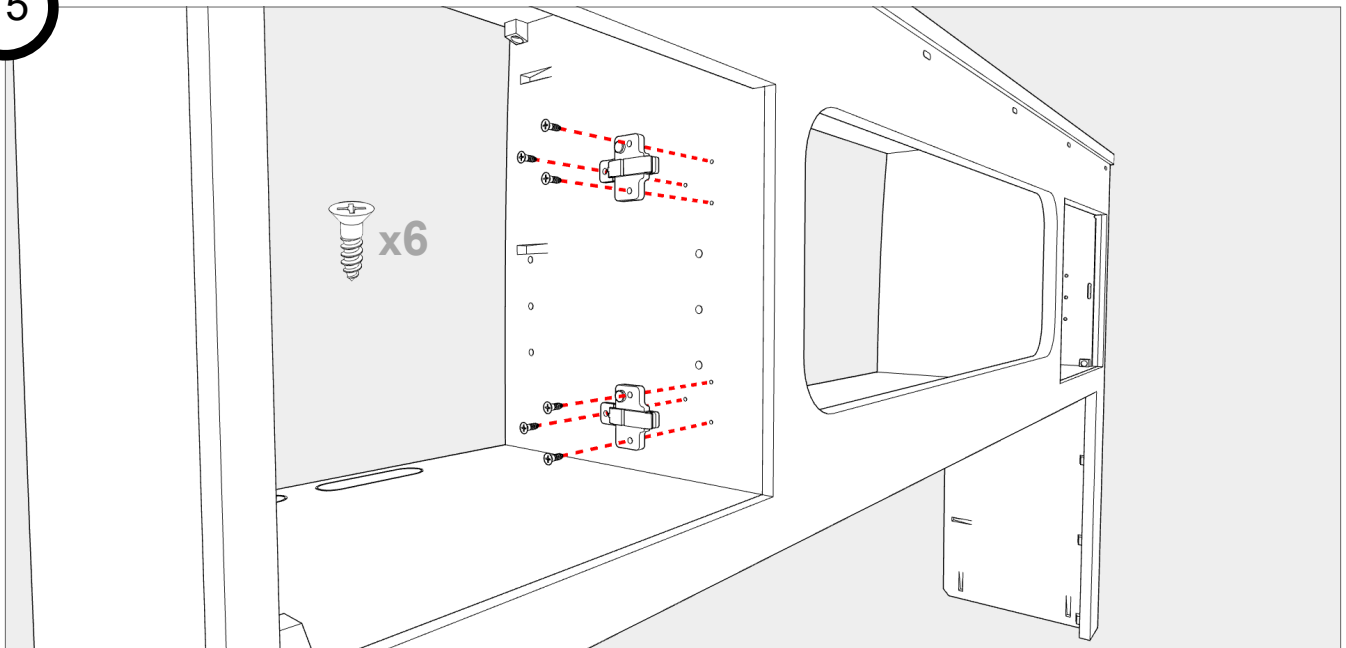


16


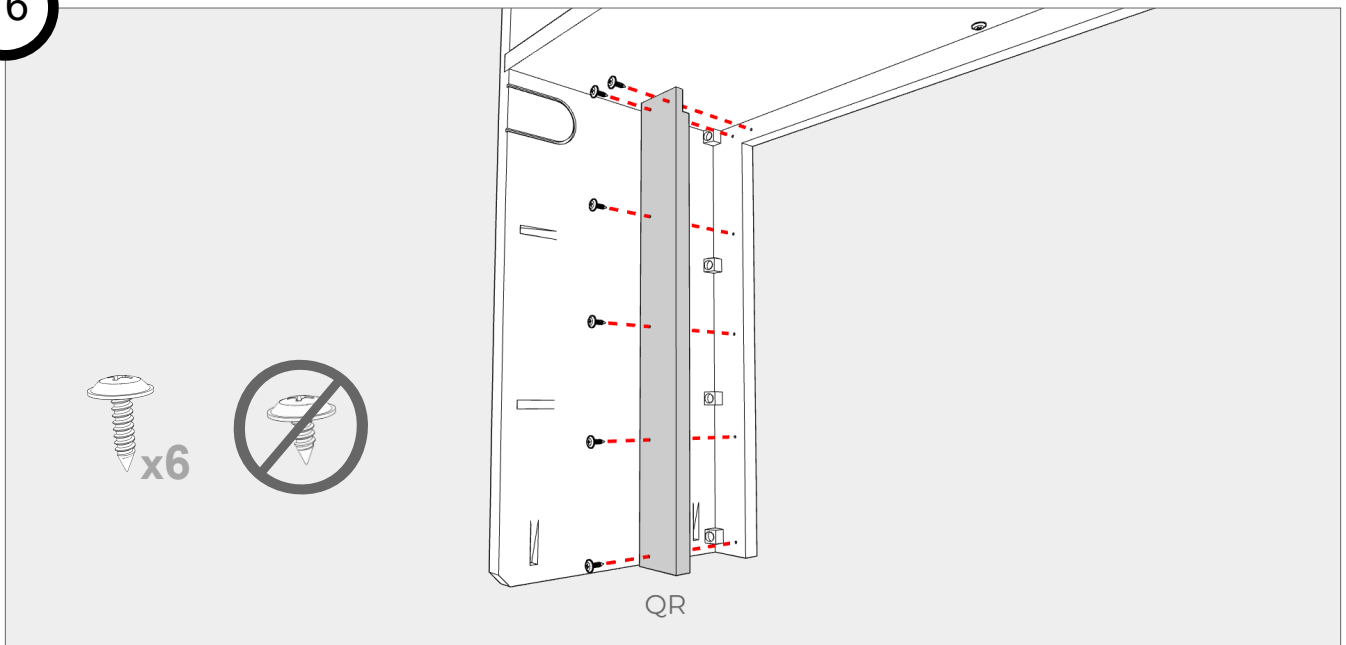



17

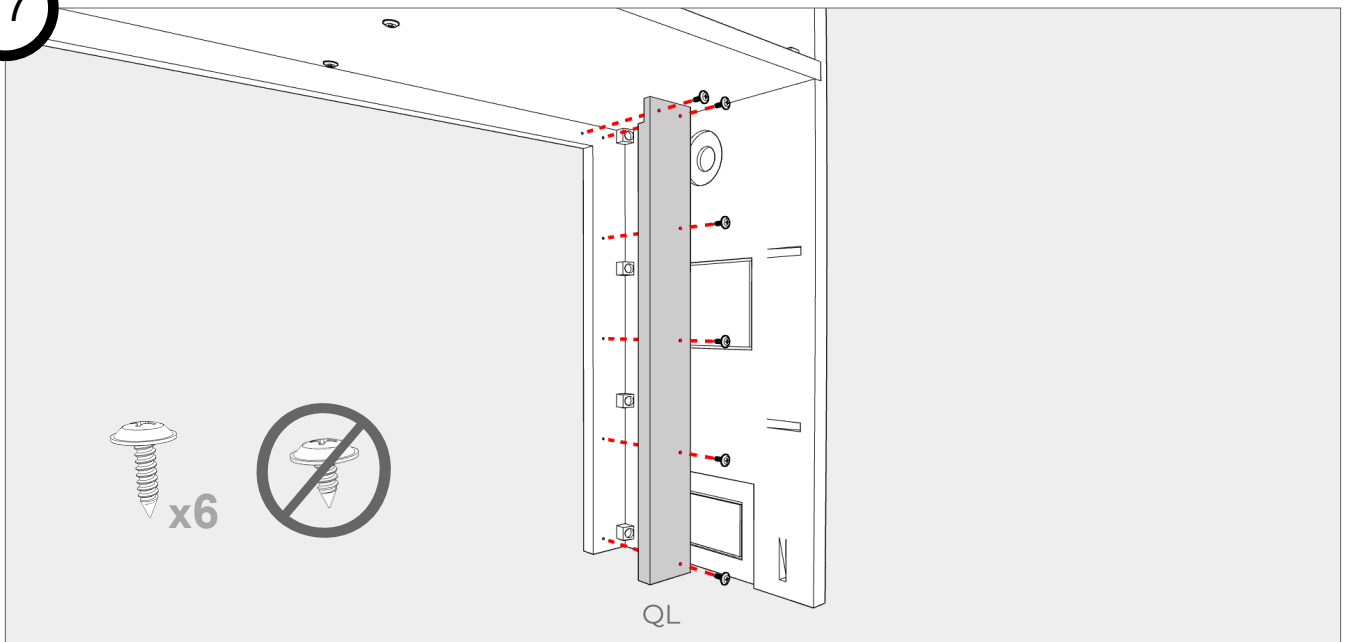

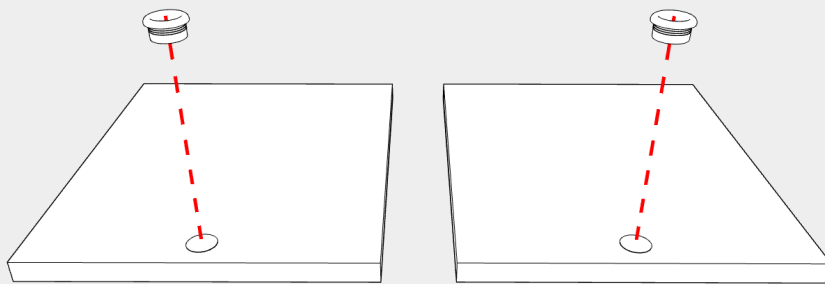


Note: trim rings will be tight to ensure a proper fit.
Use a rubber mallet to avoid damage.

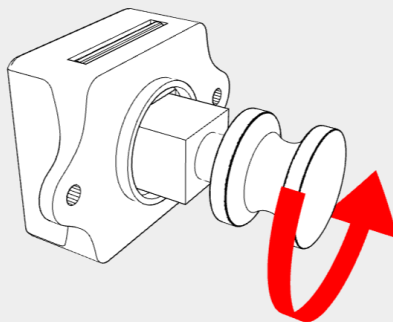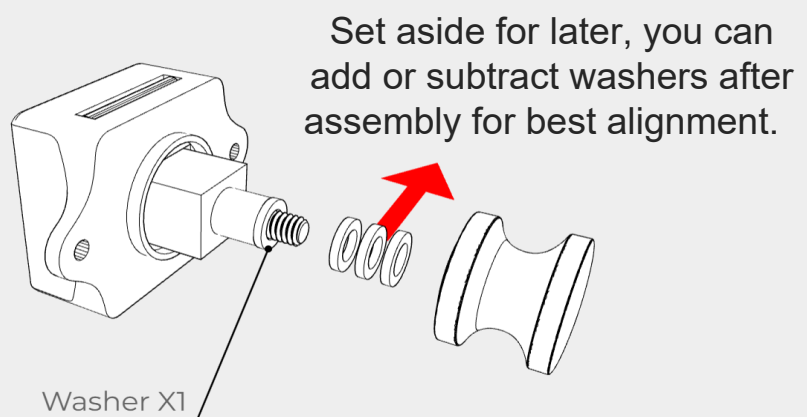


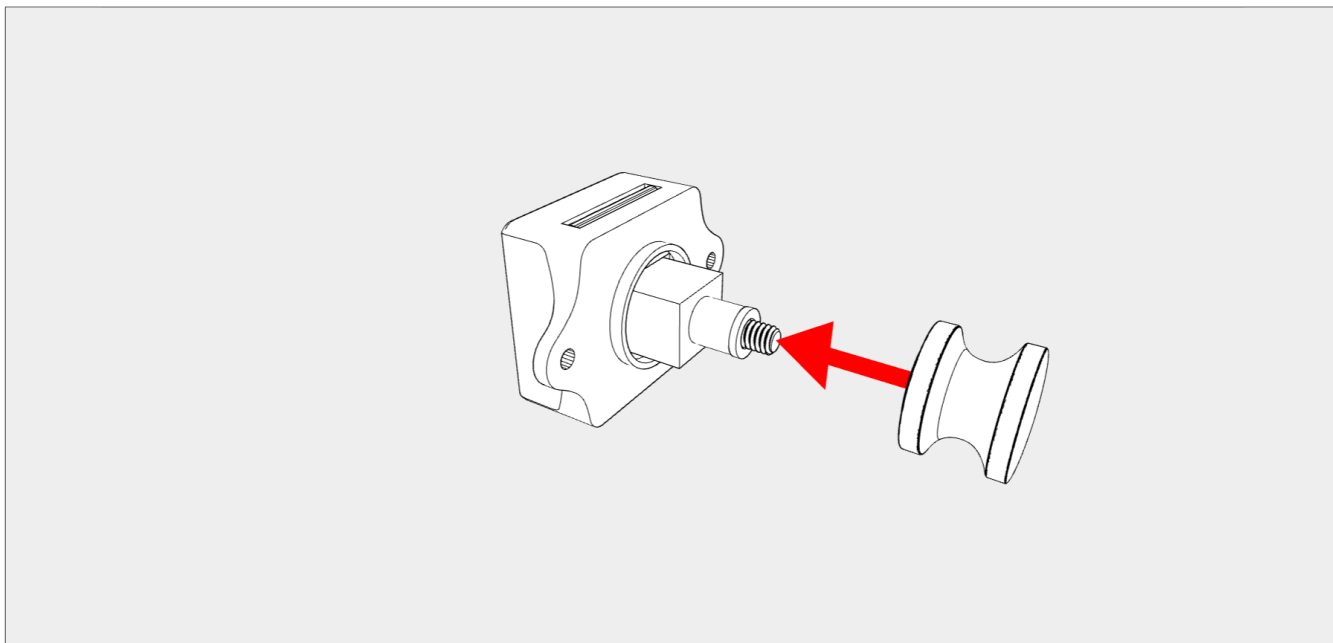


19

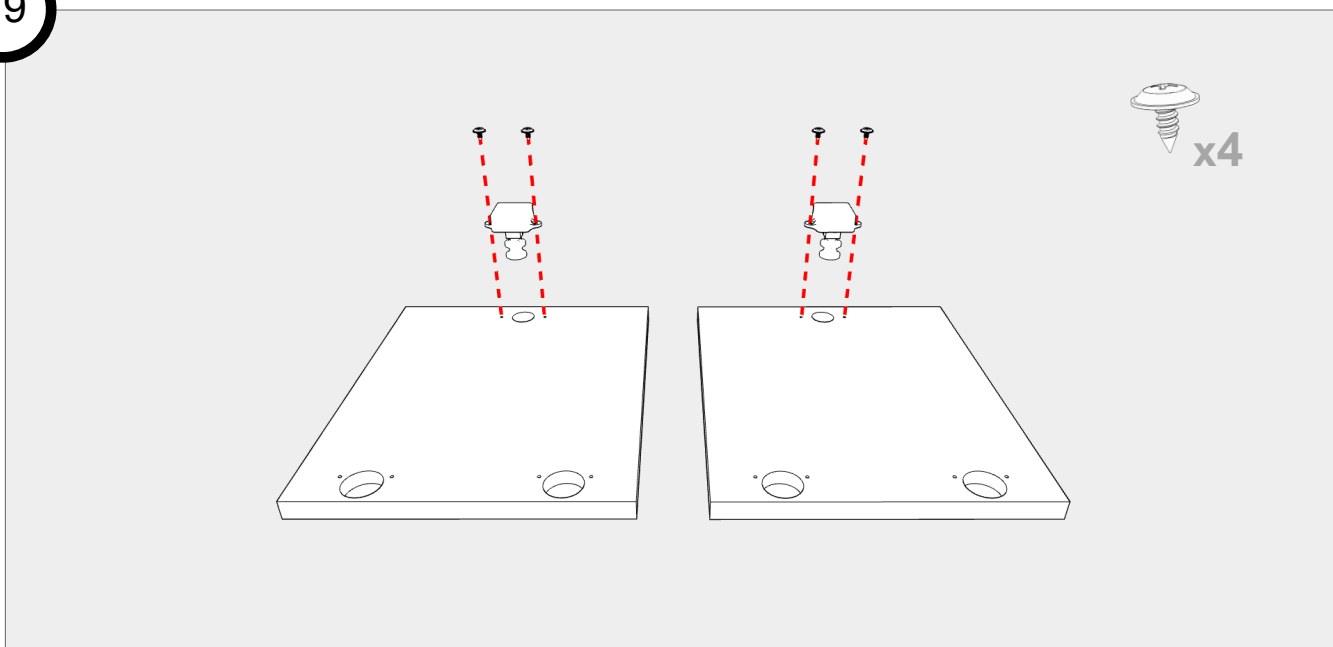

20

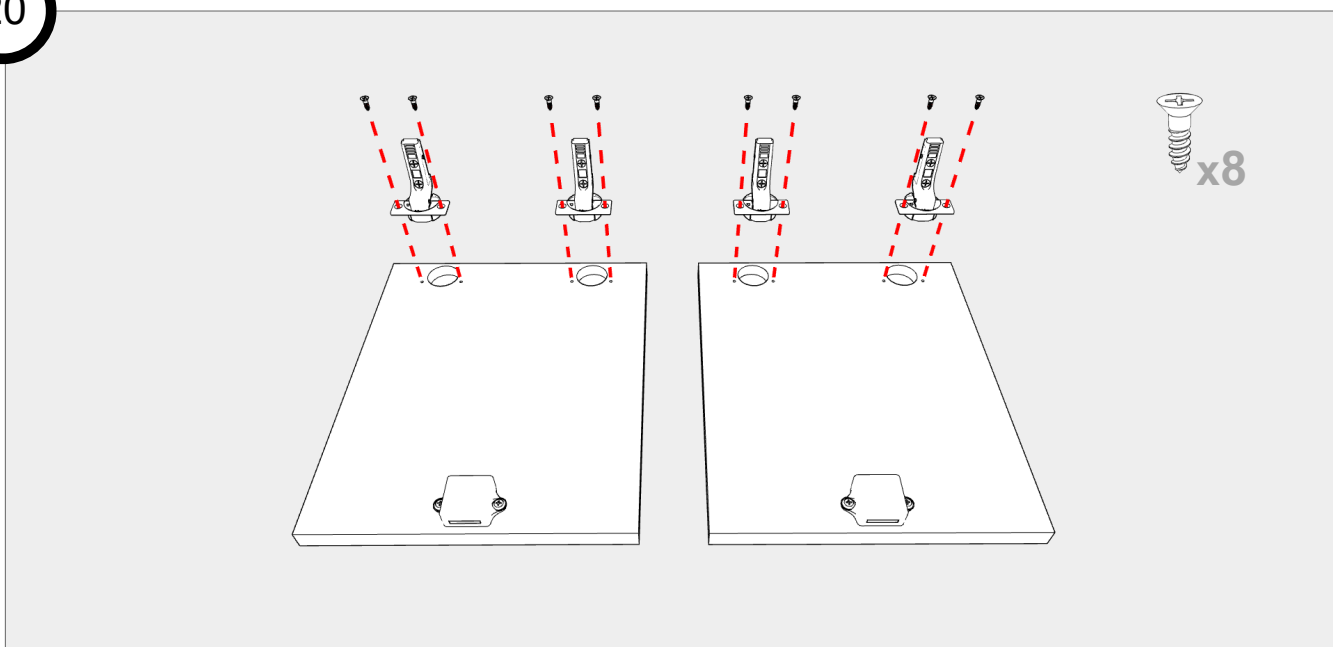


21

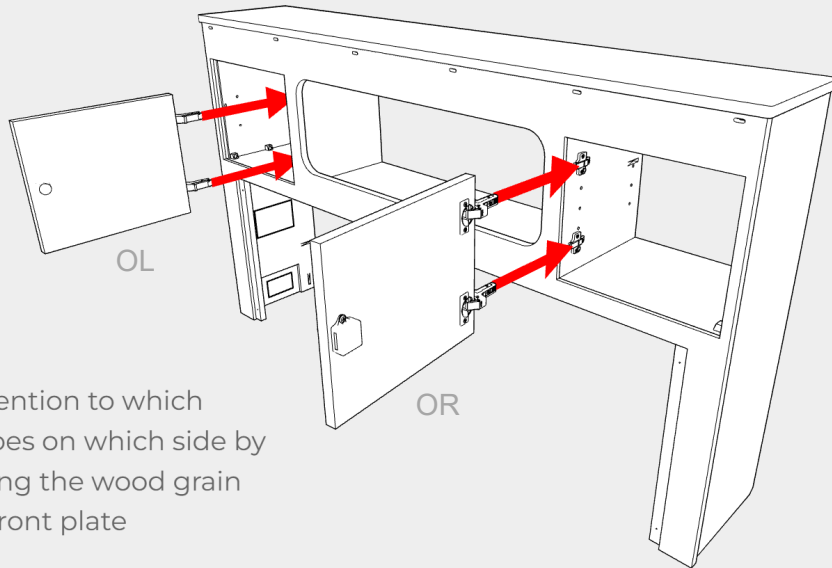


Note:
Pay attention to which
door goes on which side by
matching the wood grain
to the front plate

22

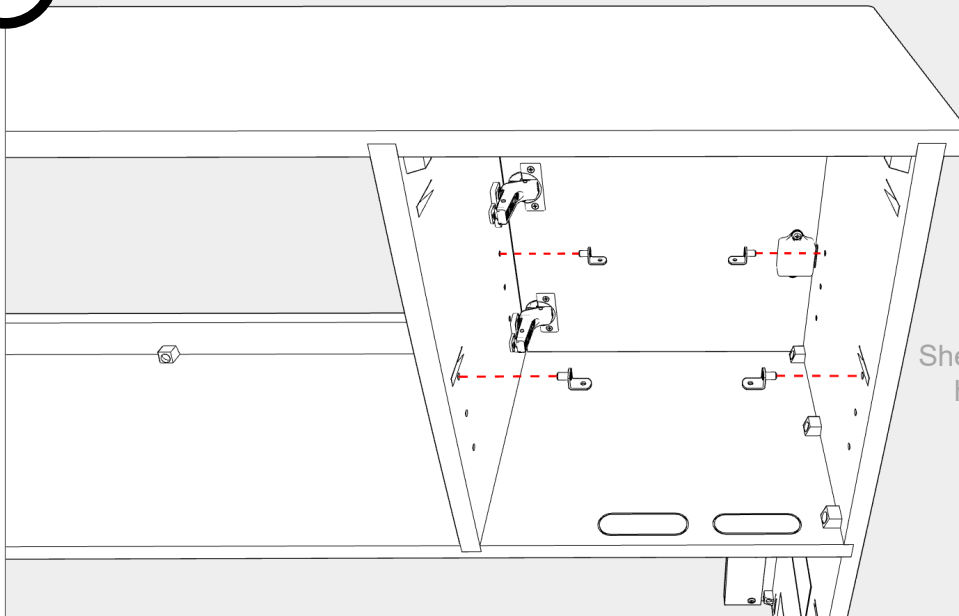


Shelf height is variable, choose
holes for desired location.

23

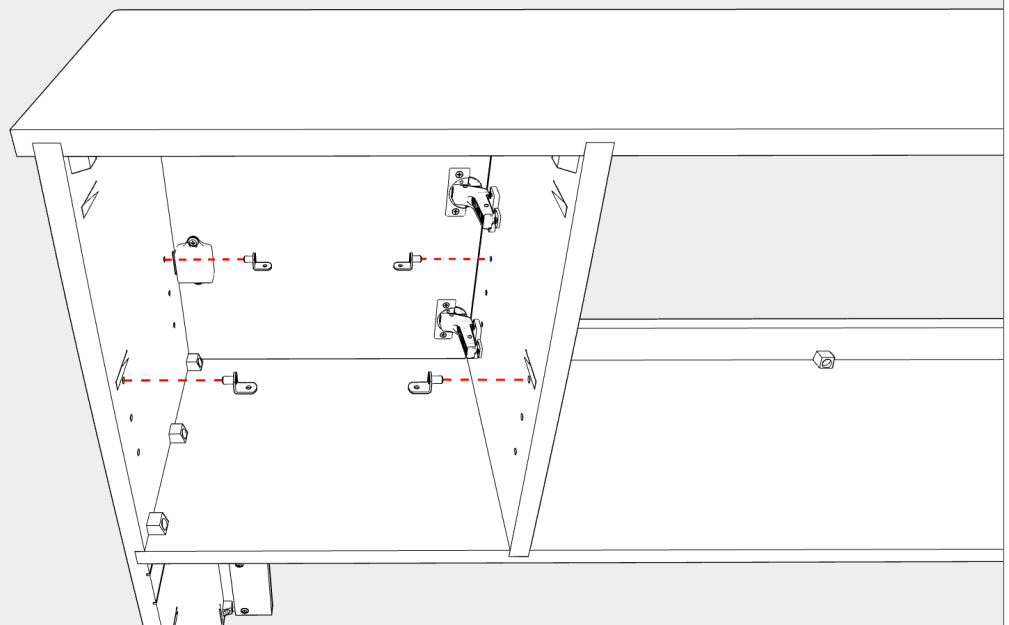


24

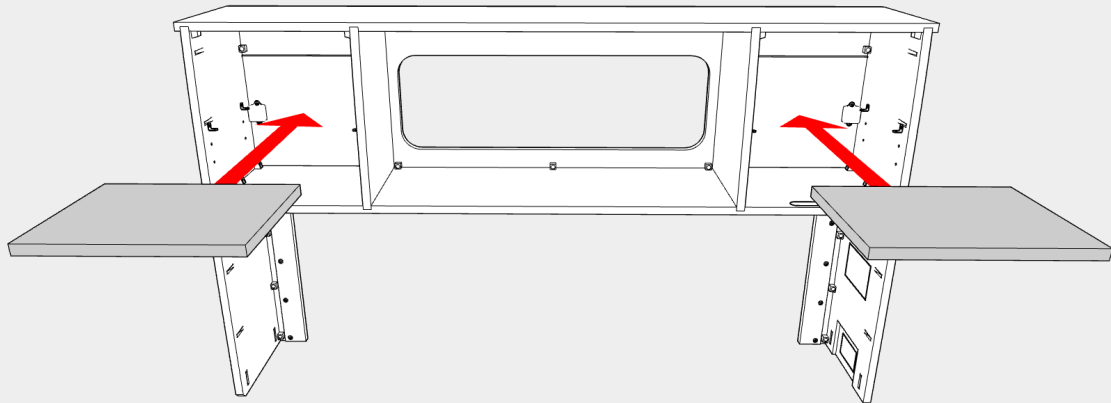


25

Tank Cover can be modified for your desired look, cut along guide to turn into a wheel well storage cubby

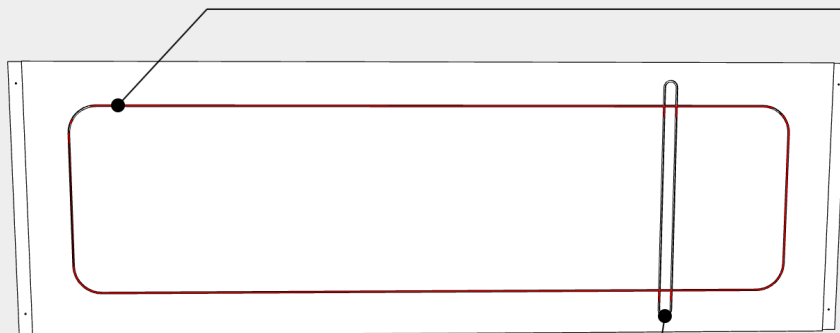

Or if you want to use this space for a water tank, you can cut along this guide to add a handle for easy removal of the cover

26

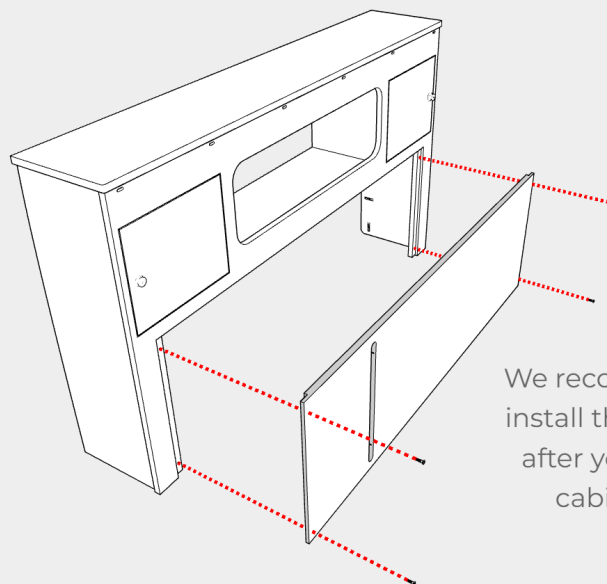






x4




We recommend waiting to install this cover plate until after you've screwed the cabinet to your van

DIY WWC BI-SLIDE BED


TIMBER

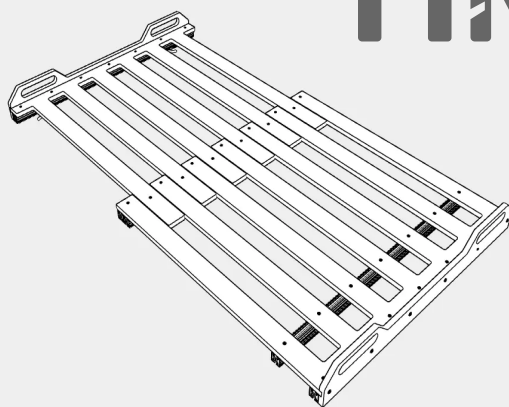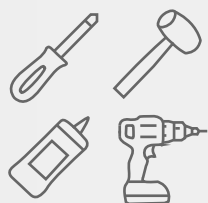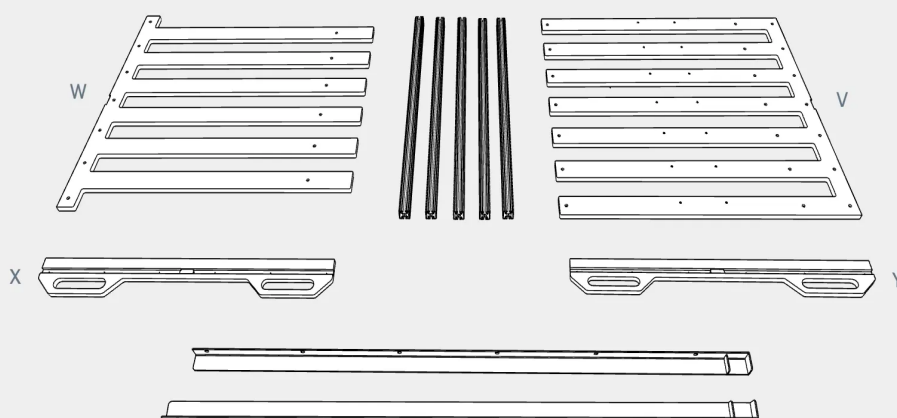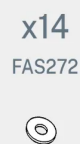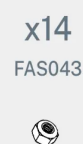


1

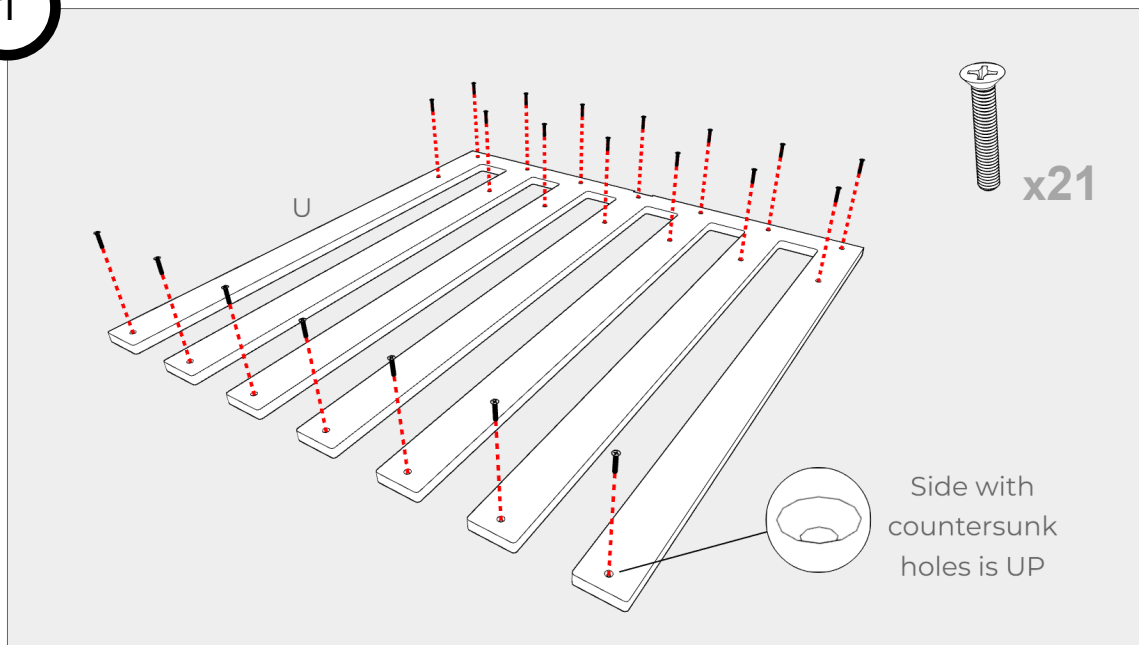


2

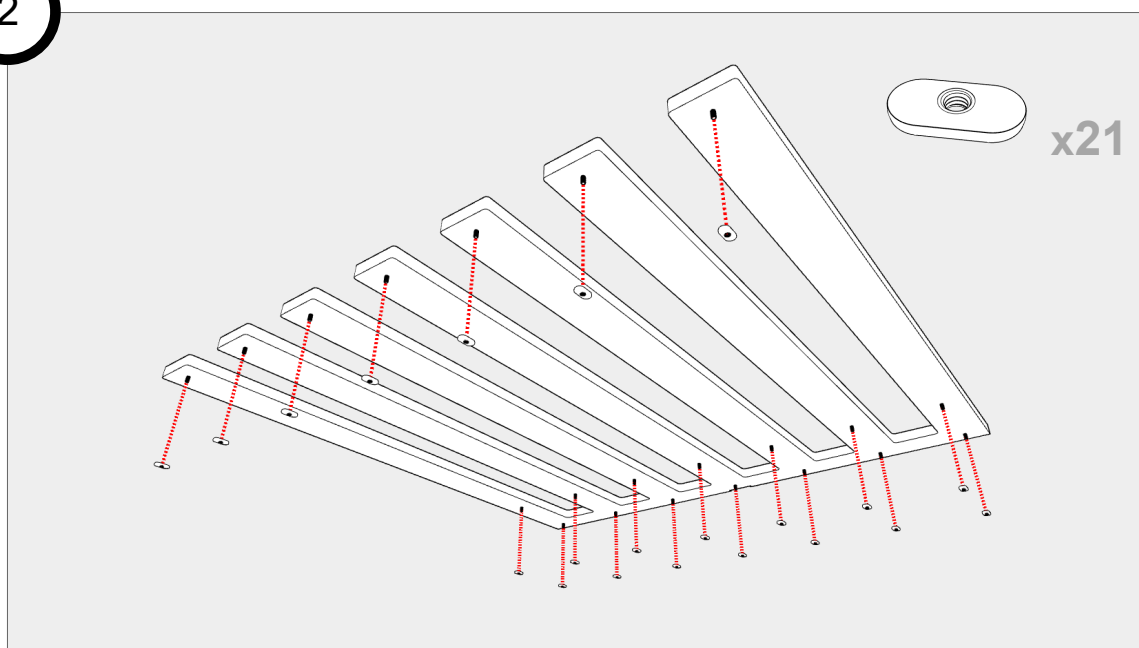


3

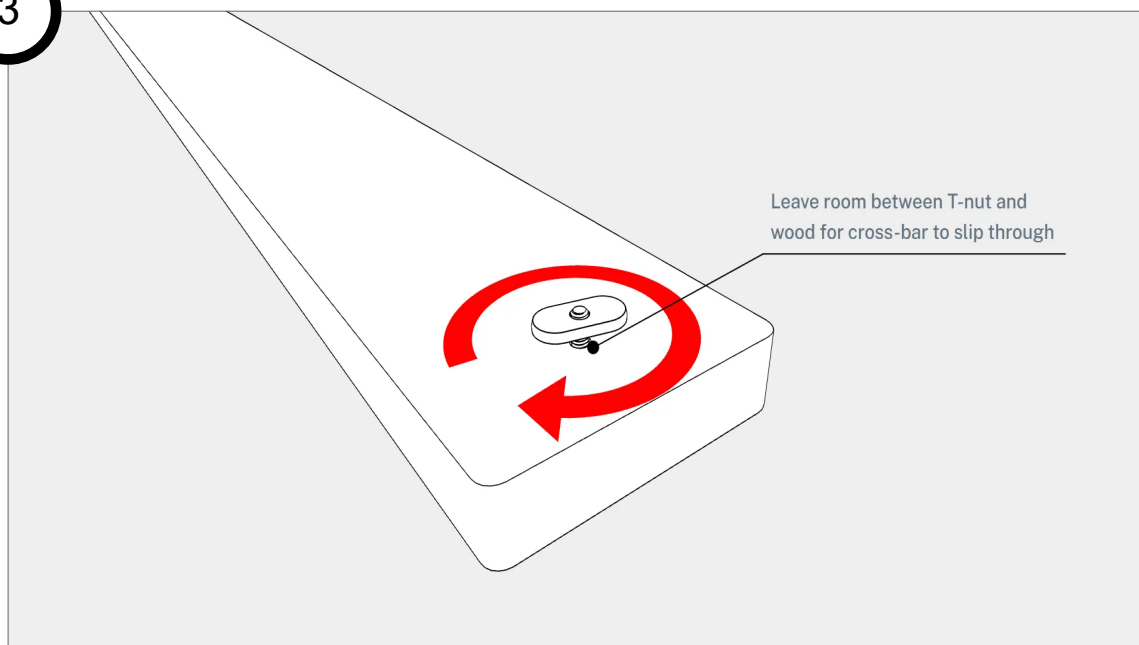


4

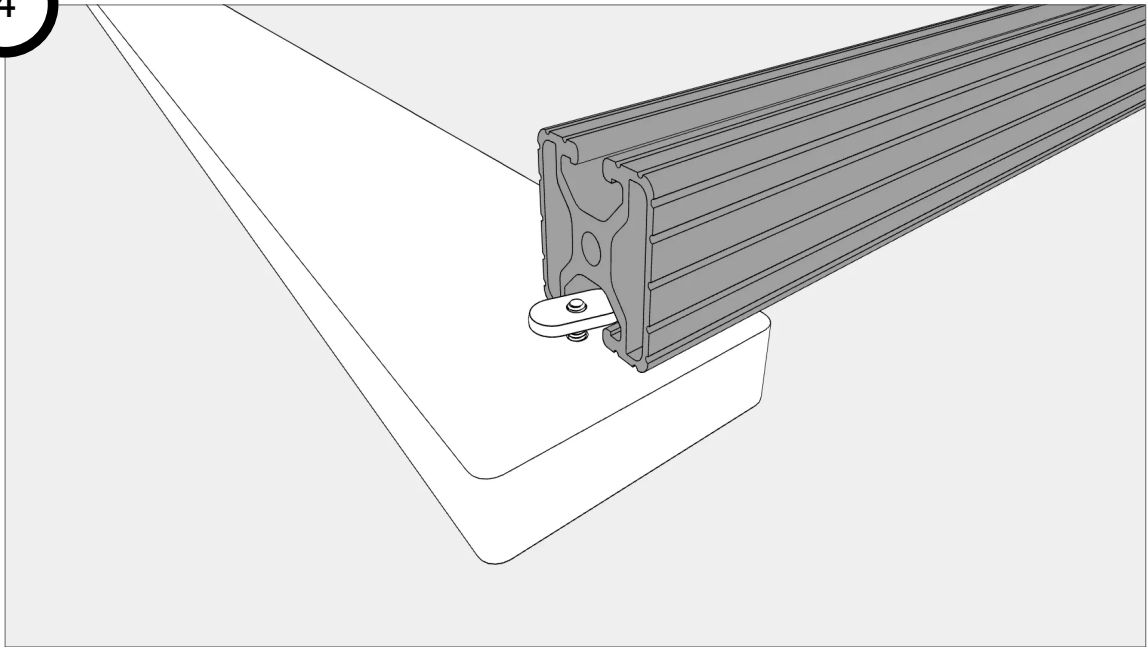


5

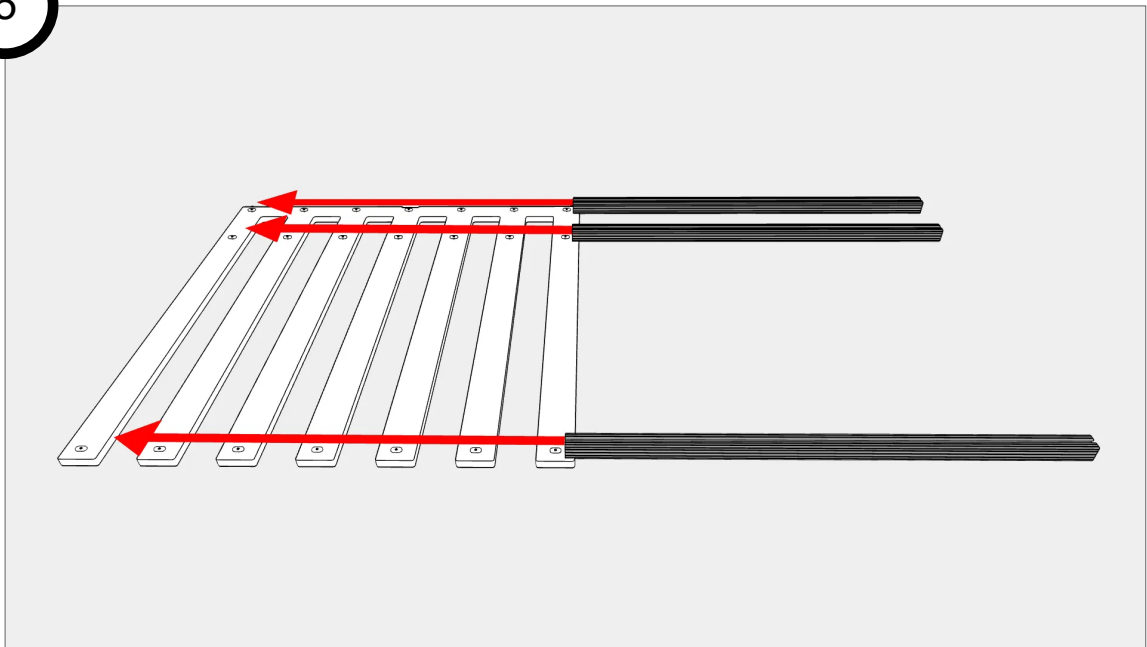

6

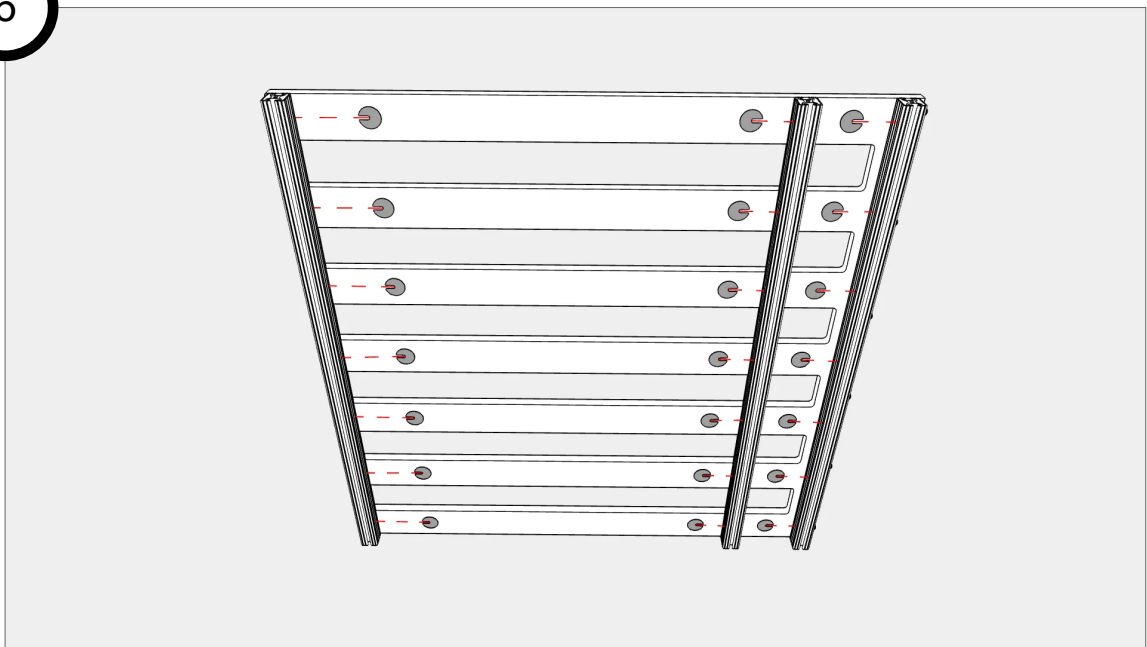


7

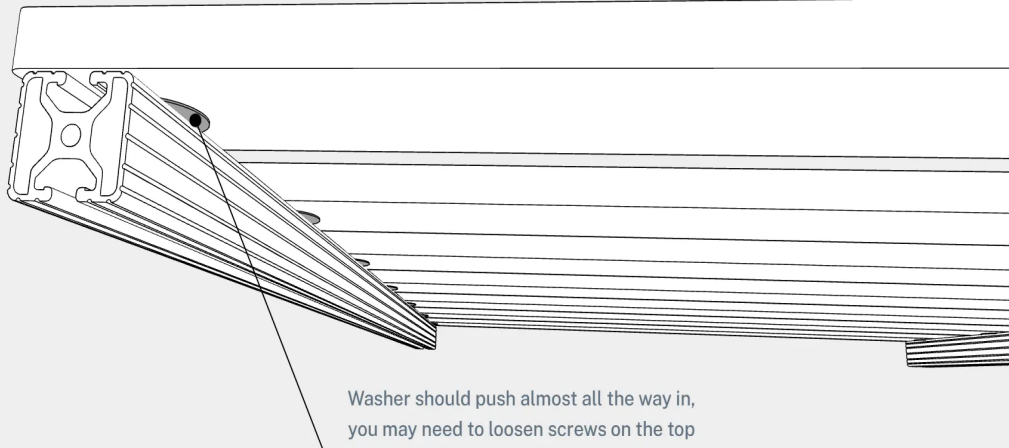


8




9

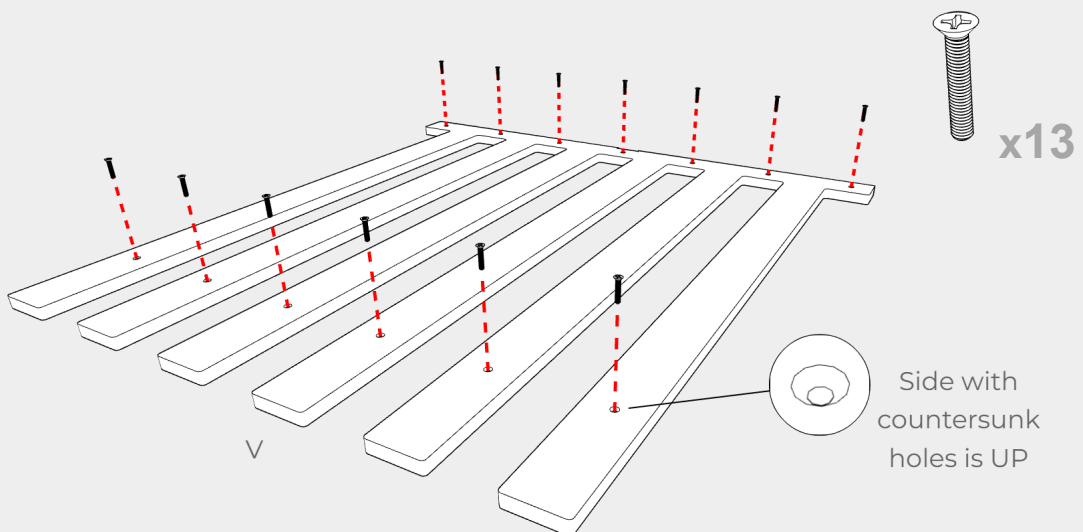


10

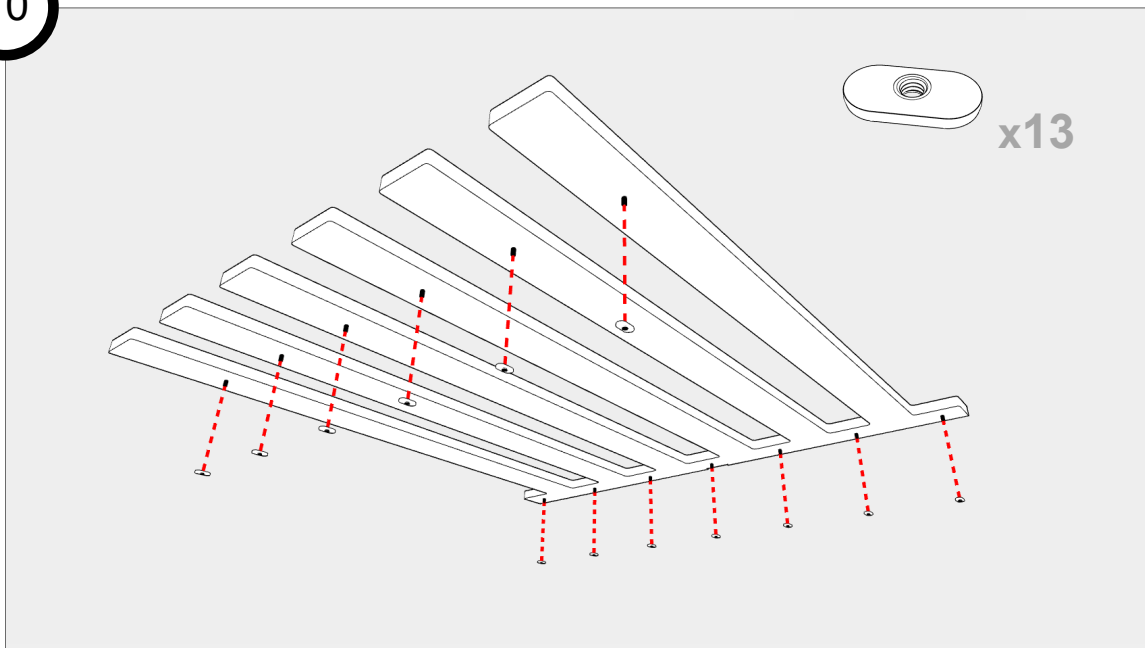


11

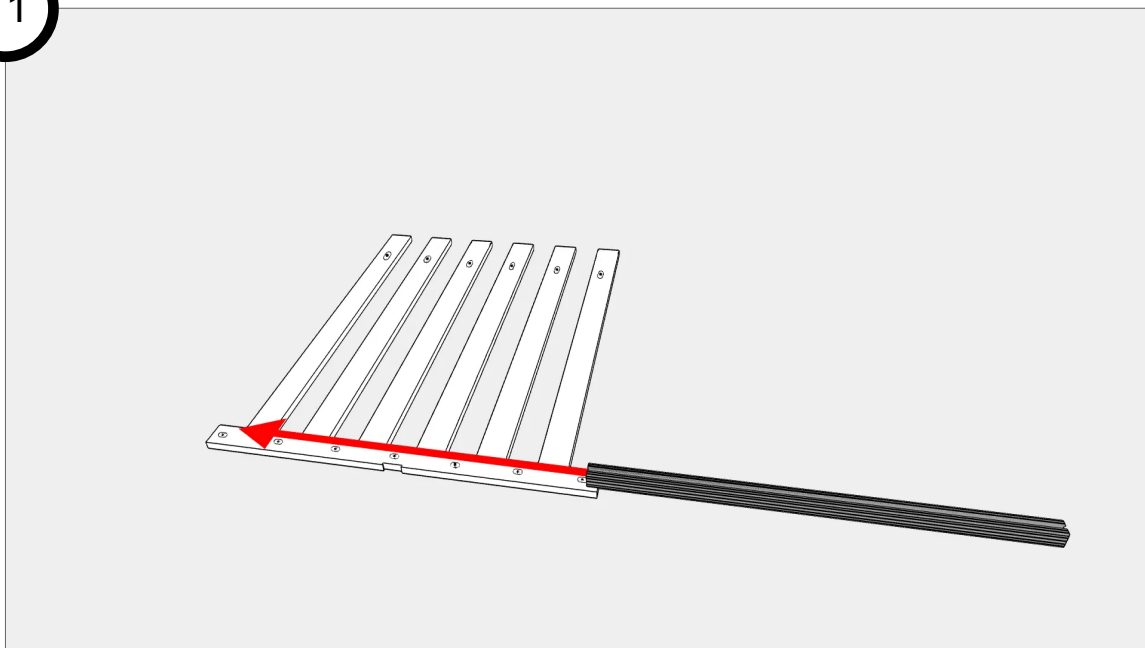


12

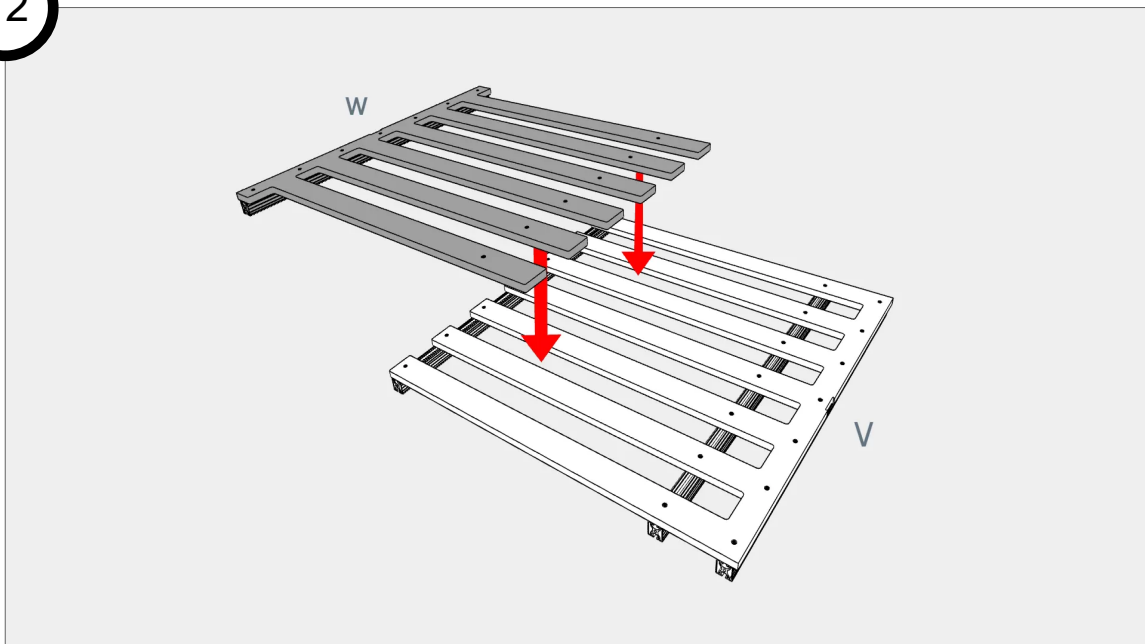


13

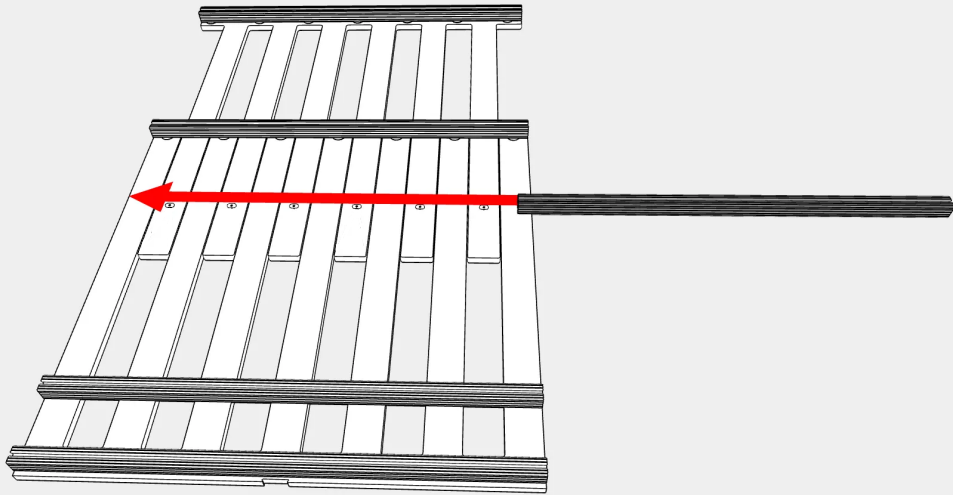


14

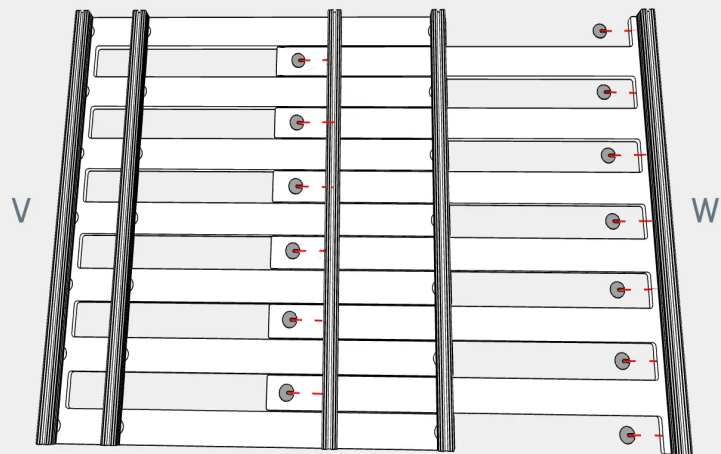


15

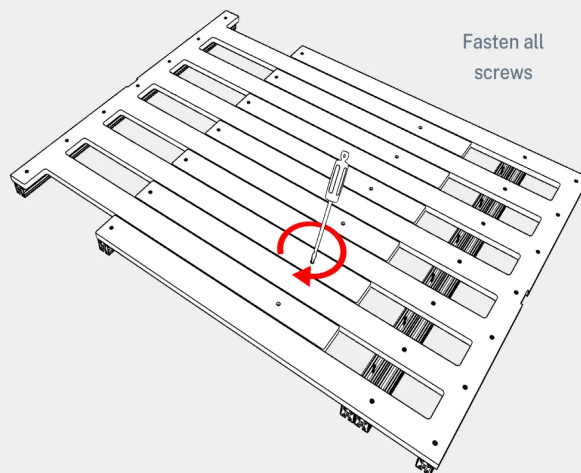


16

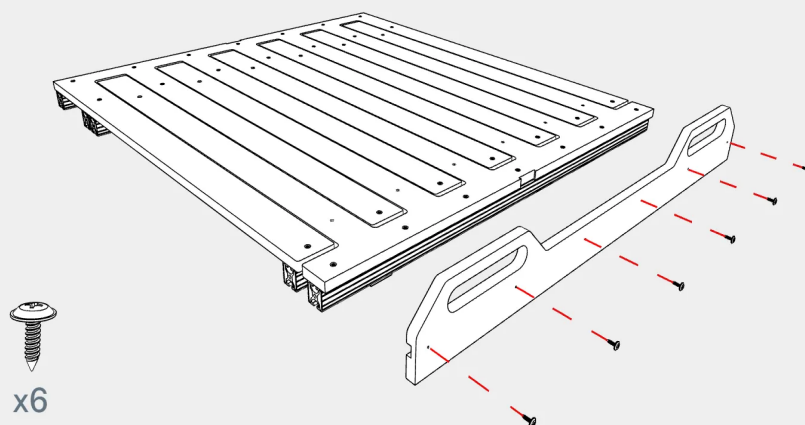


17

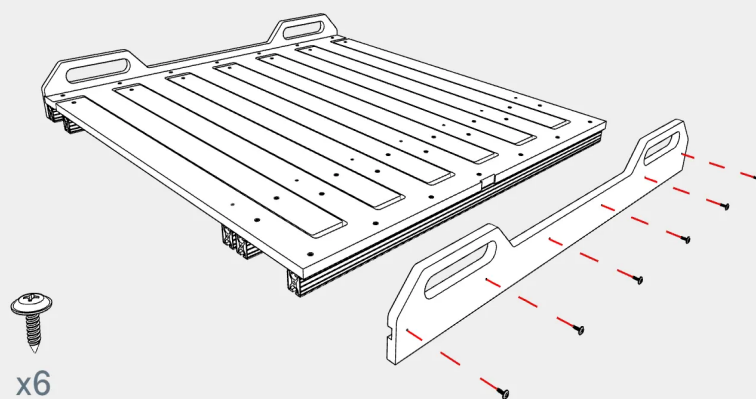


18

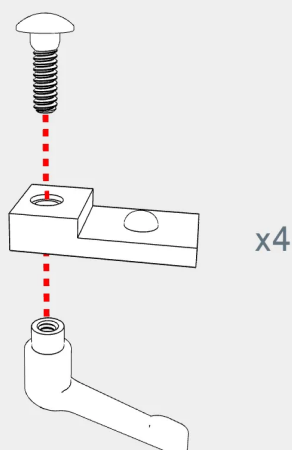


19

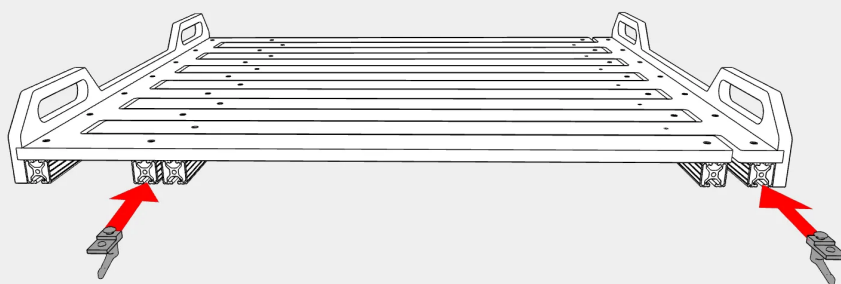

20

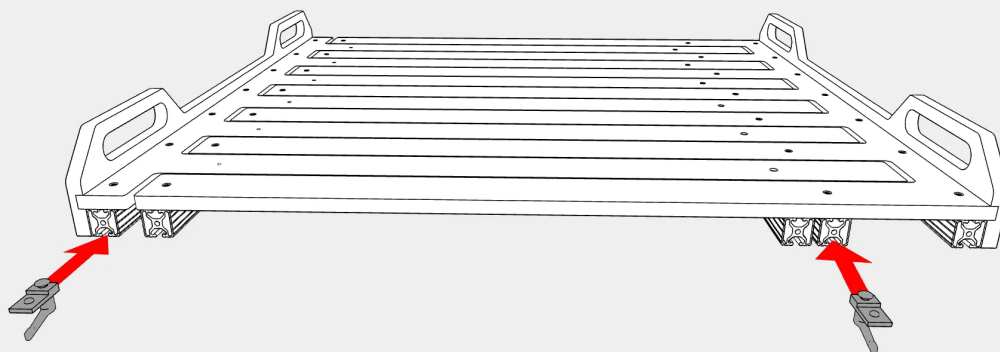


21

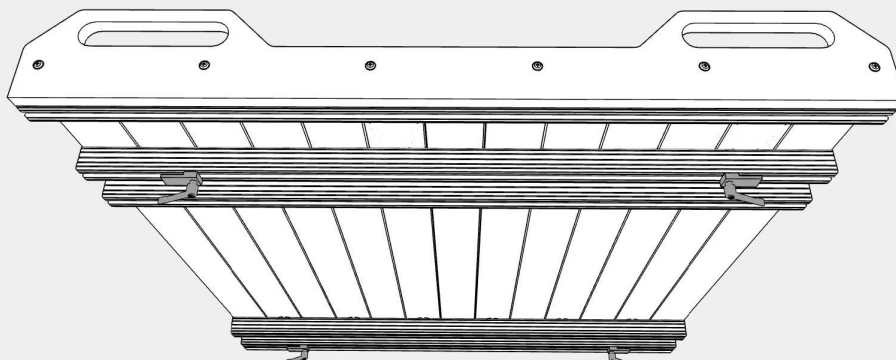

22


-  x6
-  x6
-  x6

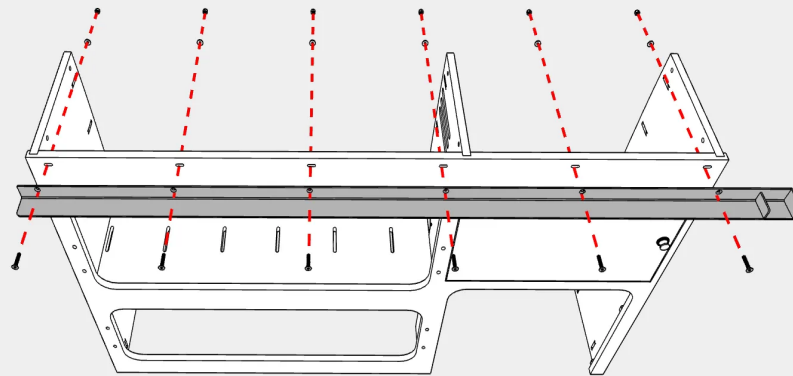

*Top of cabinet hidden for clarity

23


-  x6
-  x6
-  x6

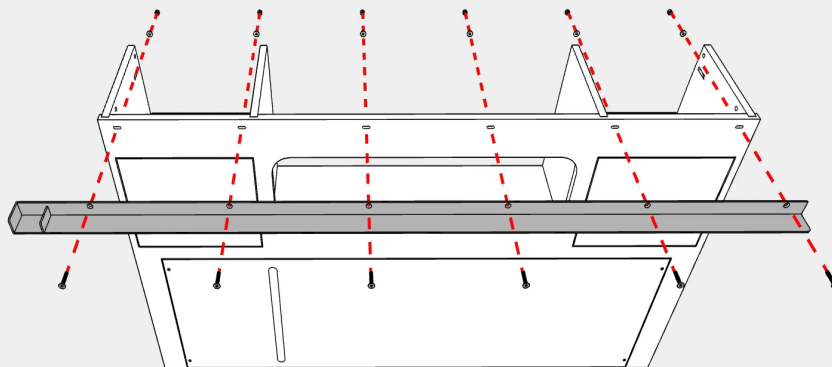


*Top of cabinet hidden for clarity

24

Driver Side

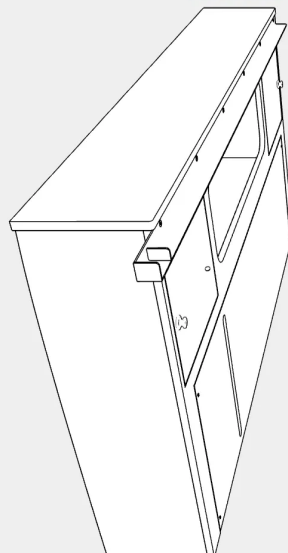


Passenger Side

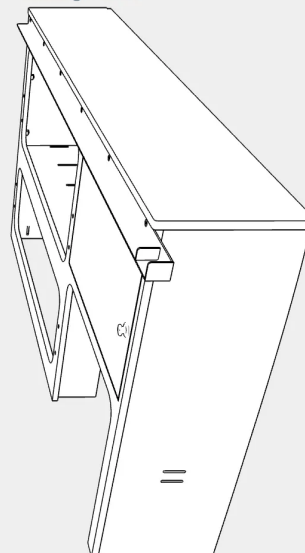


Install wheel well
cabinets in van
before proceeding
(See installation
steps at the end of
this PDF)

25

Note bed
orientation upon
insertion onto rails

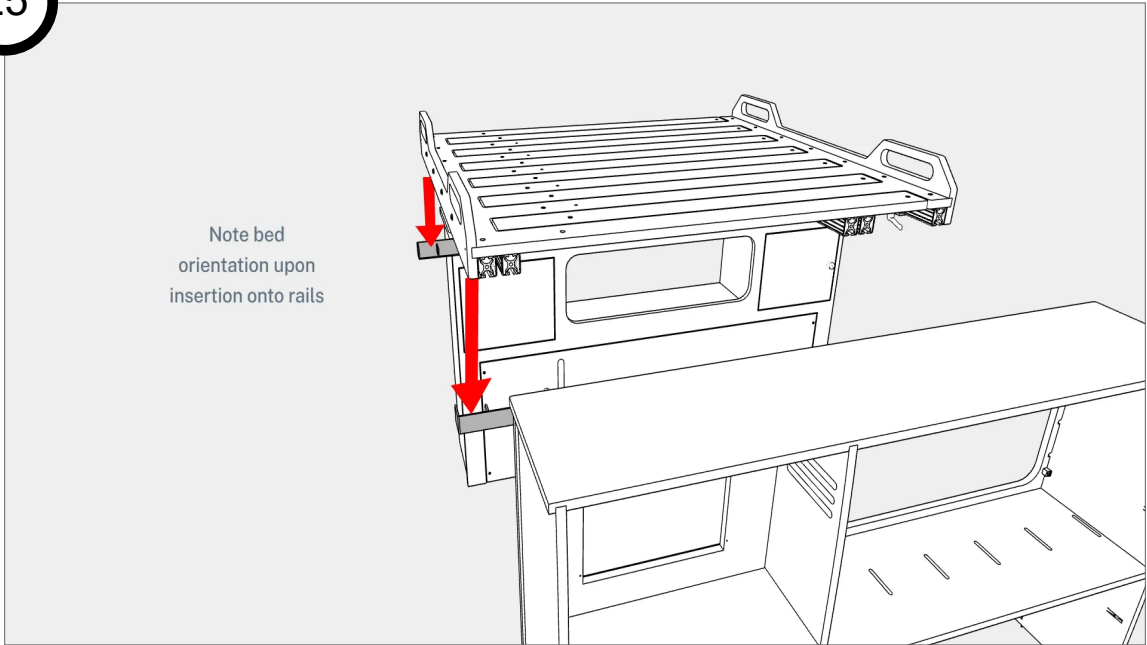


26

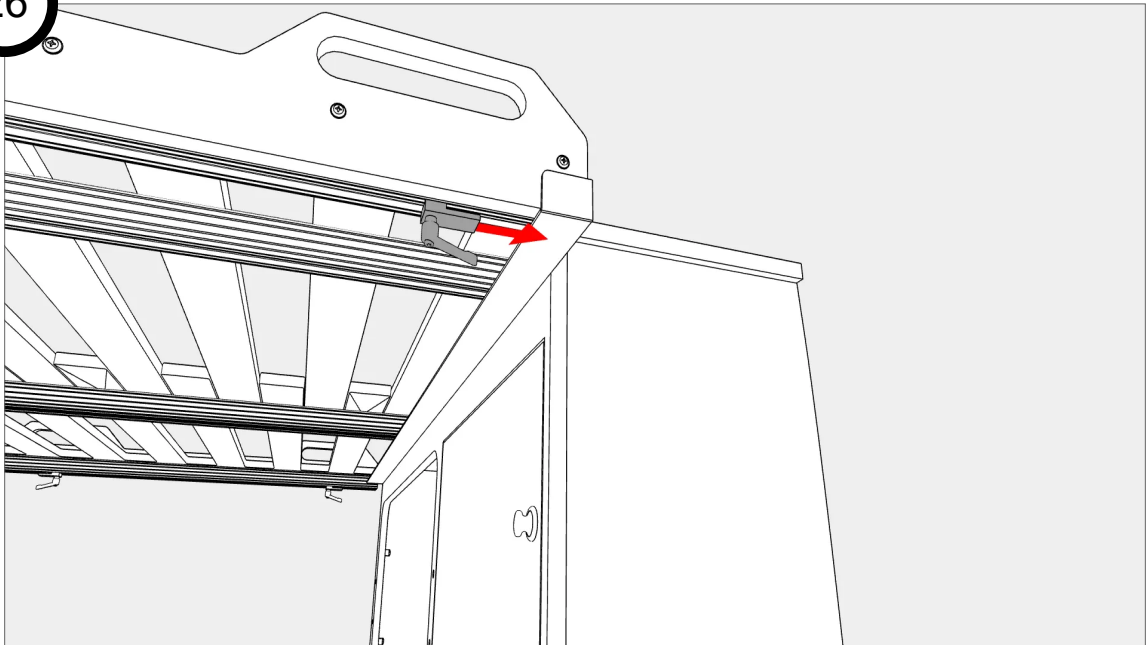


27


Tighten all locking
handles to secure
while driving

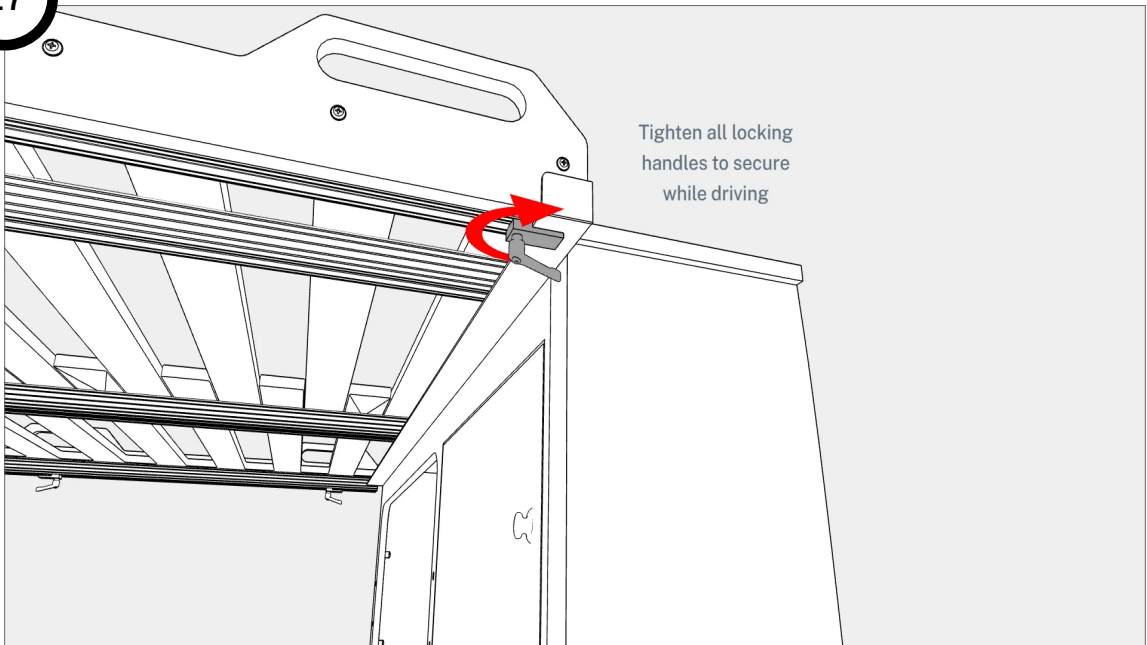


28

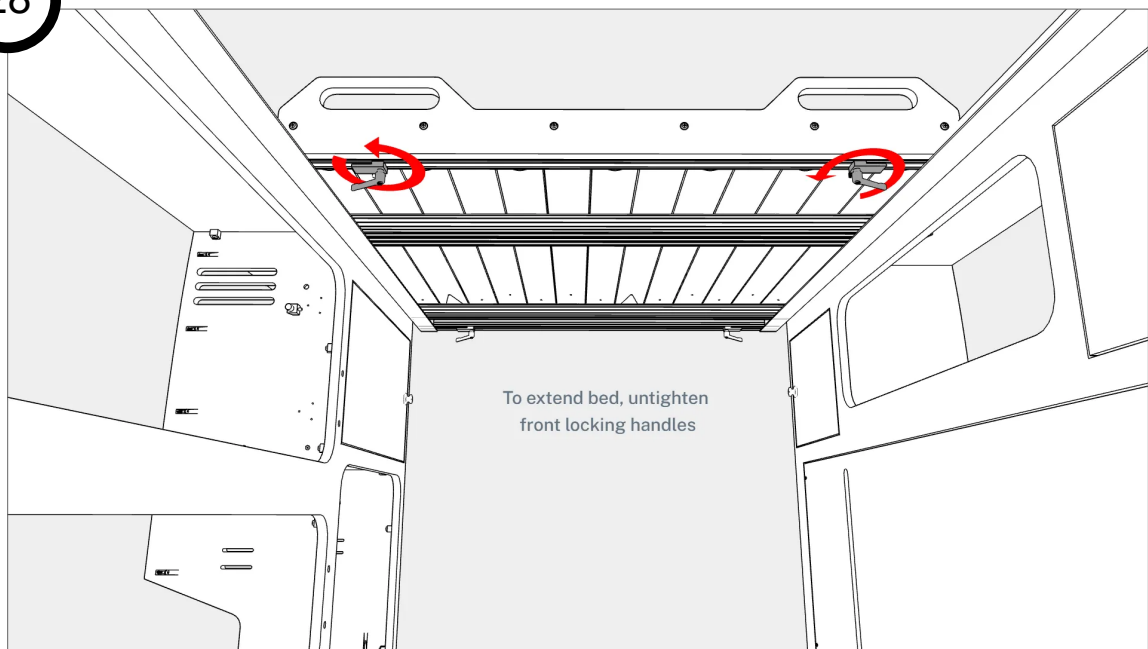

29

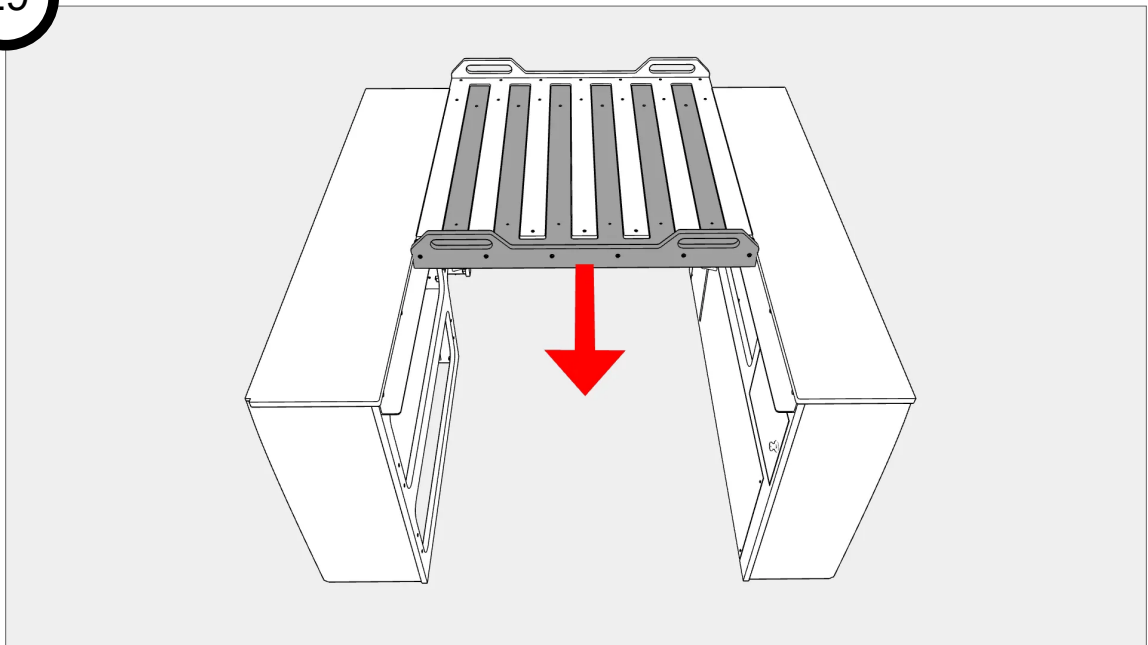


30

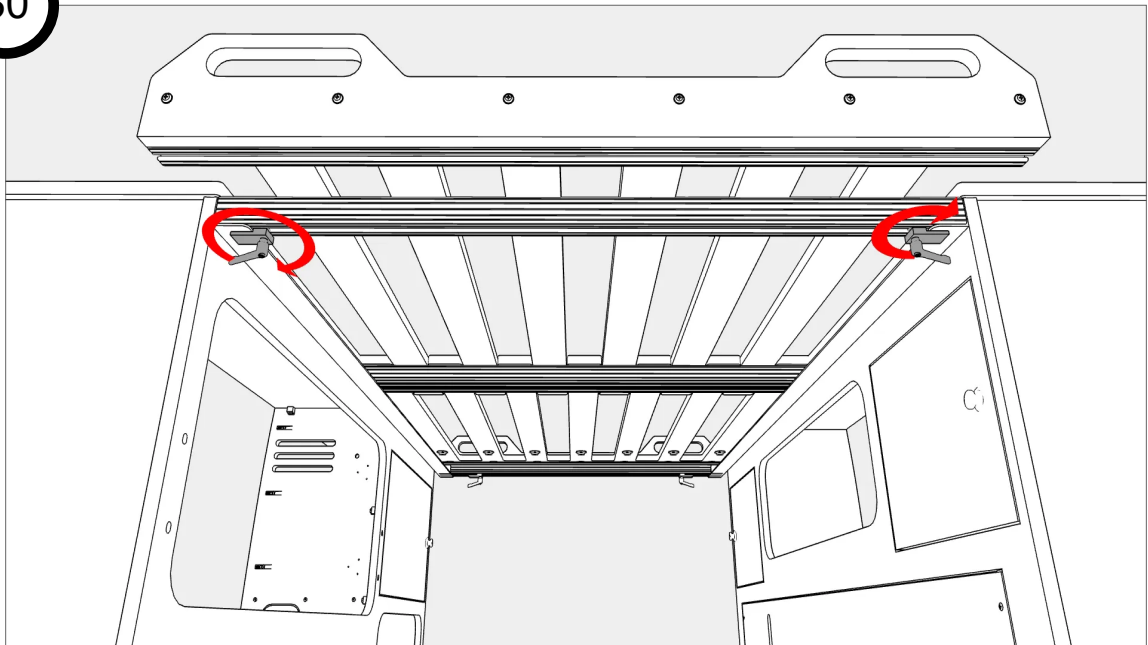


1


Begin Cabinet Install

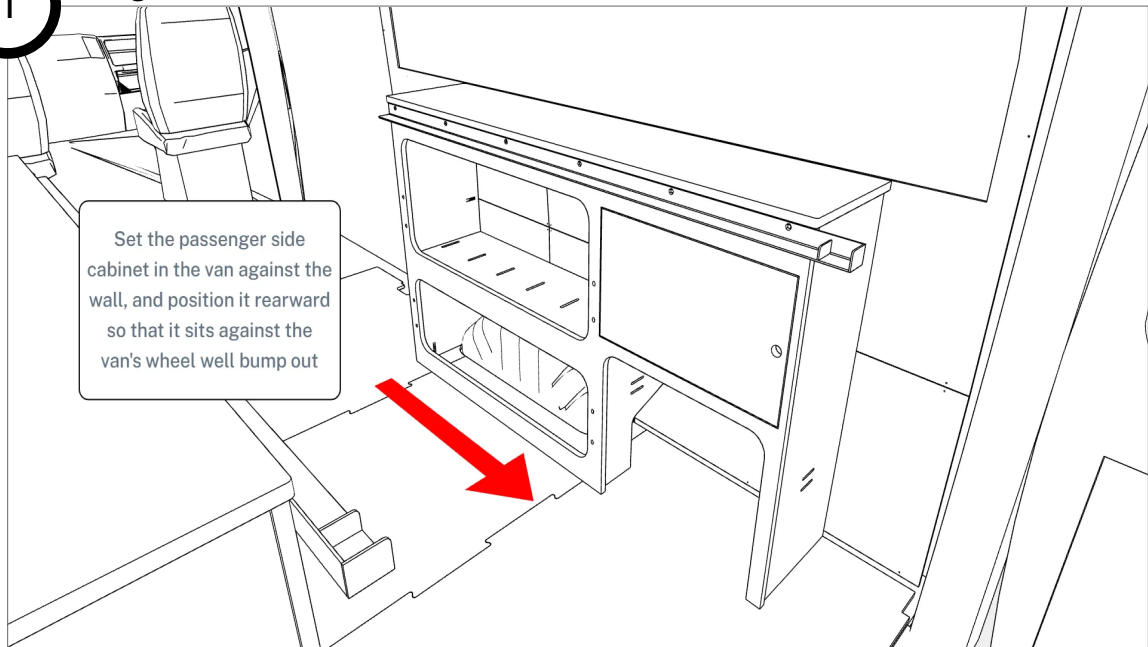


2

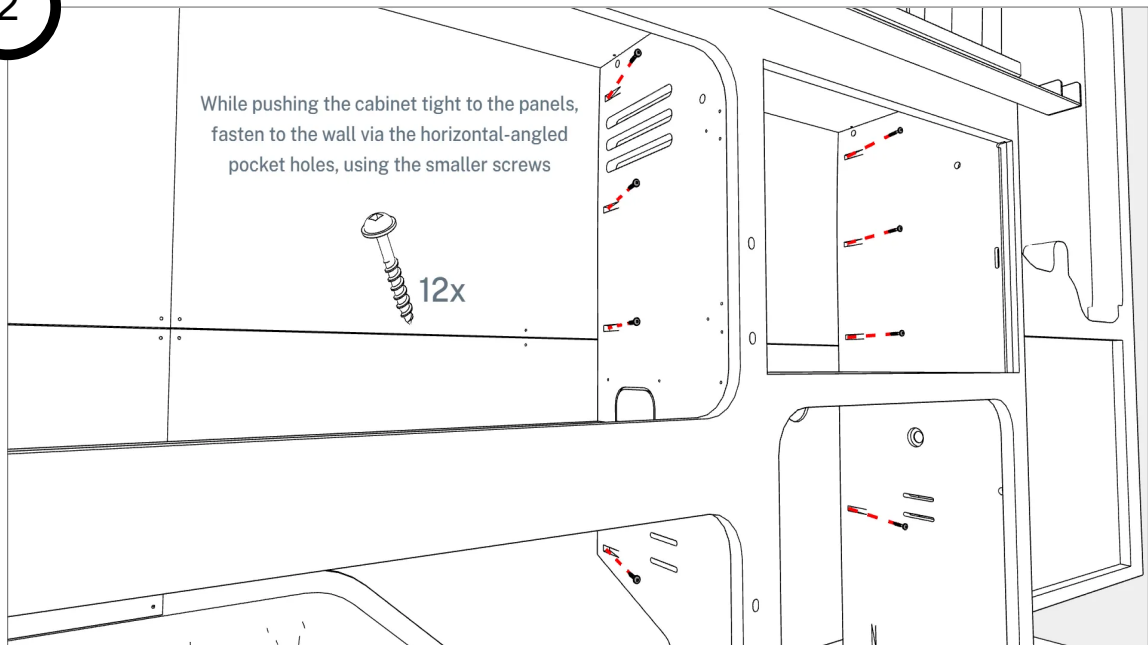


3

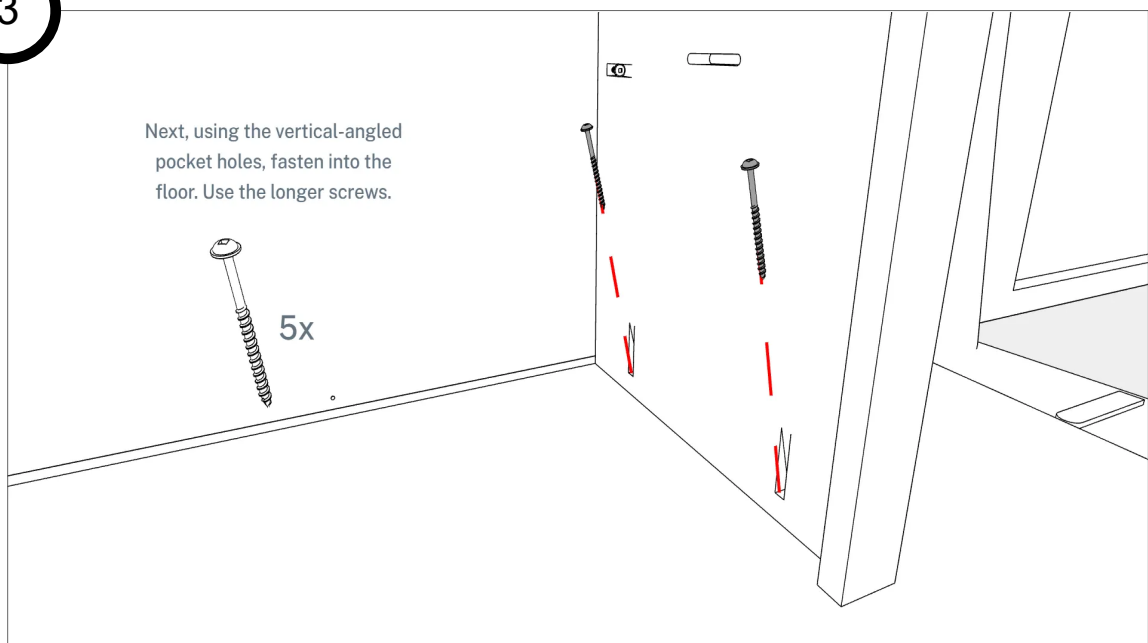

4

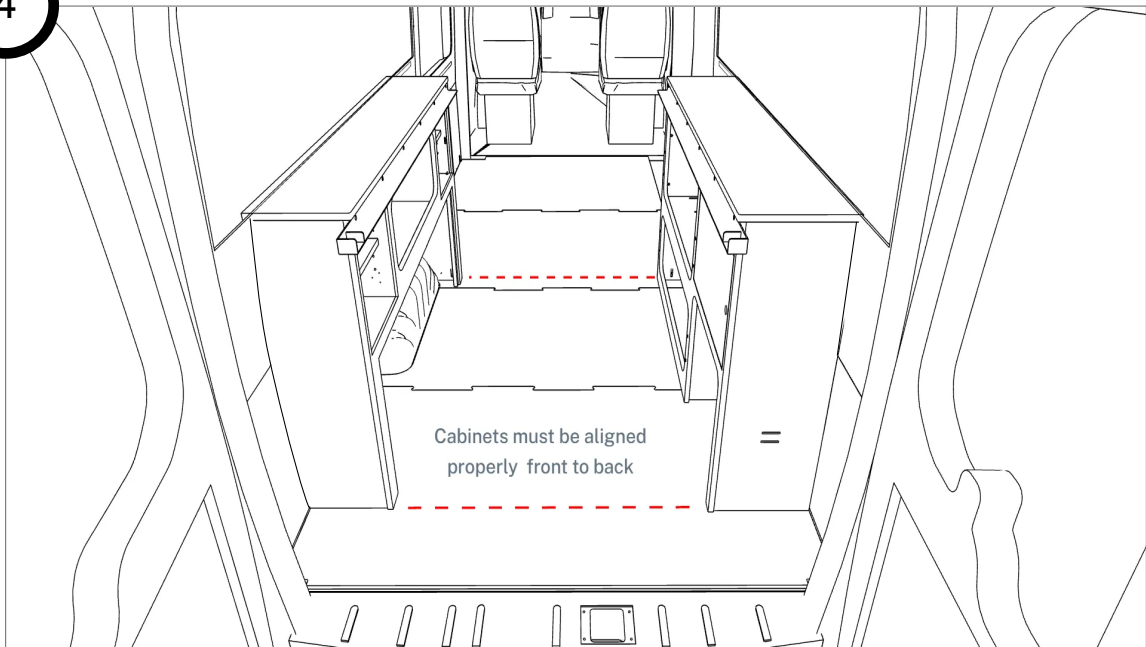


5

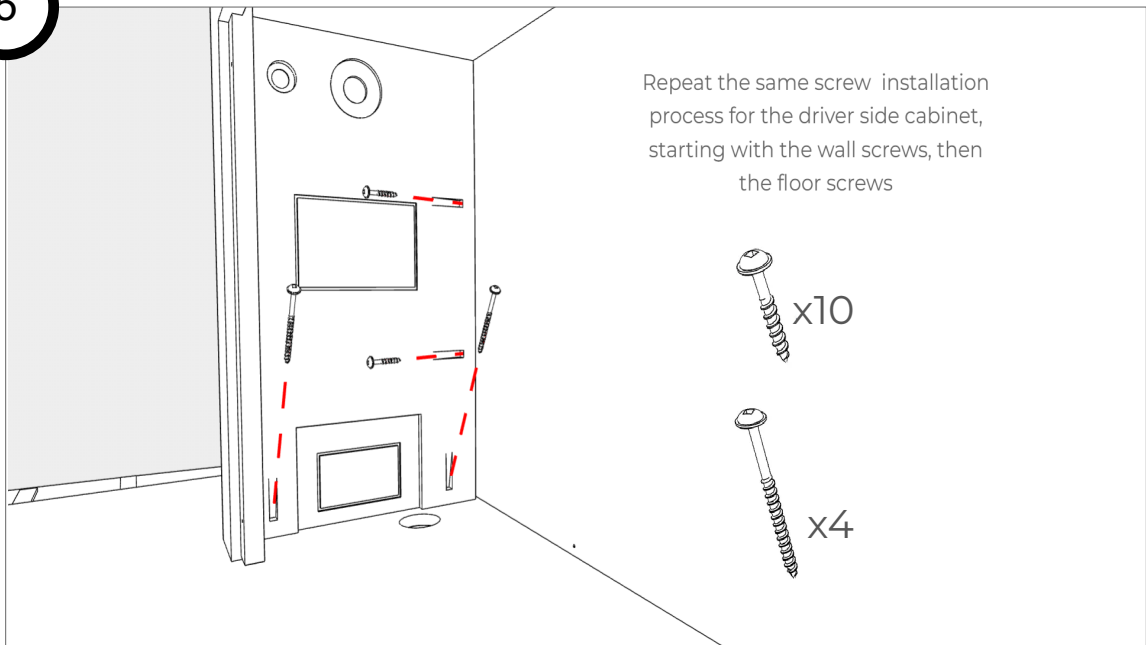

TIMBER

WWC & Bed Assembly Complete
Congratulations!

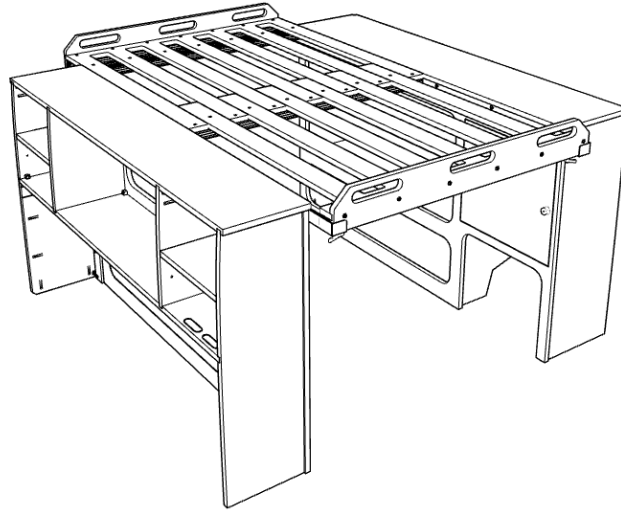

Love to see your finished wood cabinet in its new home! Share your photos on social media using the hashtag #TimberVanKits, and don't forget to tag us. Your creations inspire us, and we believe they will inspire others too.

Thank you once again for choosing Timber Van Kits. Your dedication and craftsmanship have brought our product to life, and we look forward to being a part of your future adventures!

[TIMBERVANKITS.COM](https://timbervankits.com) • 720-282-5075

Have a question or issues with your product? Feel free to call us or send a message via the [contact page](#) on our website. If you call us and we can't get to the phone please leave us a message and we'll get back to you as soon as we can.

 facebook.com/timbervankits

 instagram.com/timbervankits