


Remove and set aside the screws from all cab fasteners, These screws will be installed after installation of the cab fasteners.





2


Before assembling:
sand all holes, channels,
edges and faces of wood
panels to remove
imperfections and achieve
a smooth finish. This will
help the pieces fit together
cleanly. The more time
spent sanding, the better
the end result will be.





3

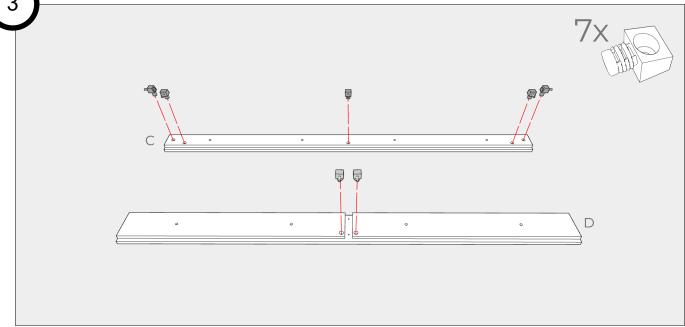


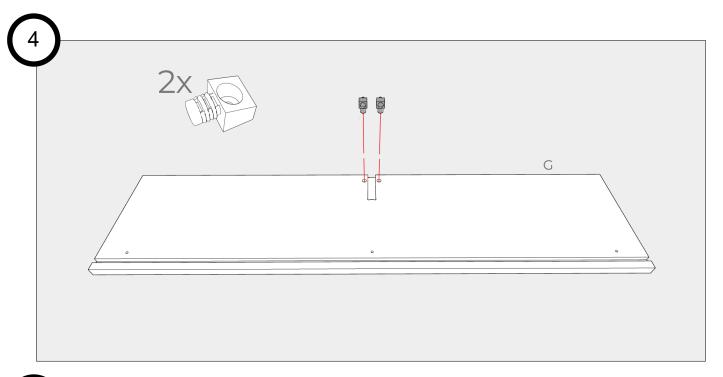


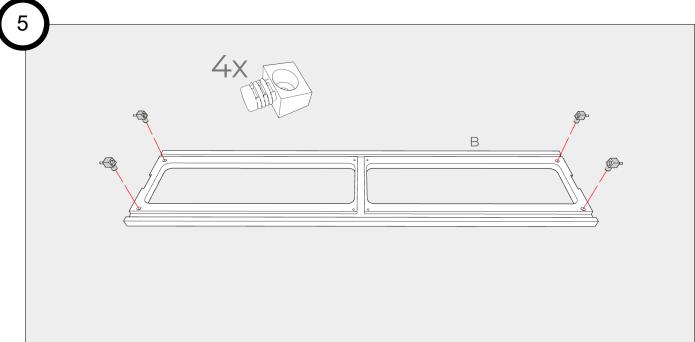


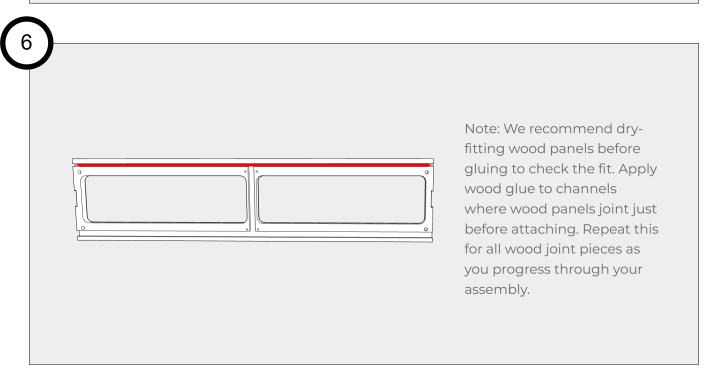


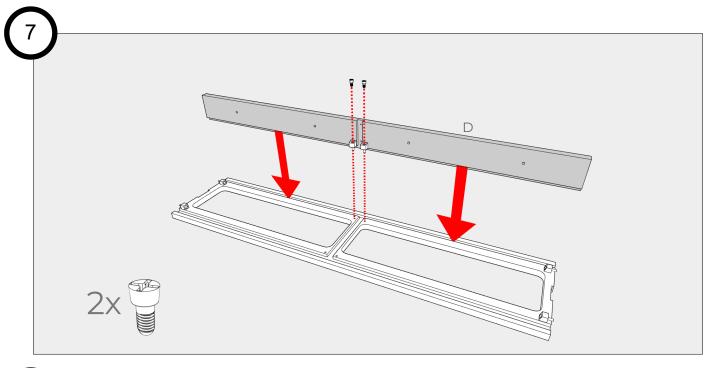


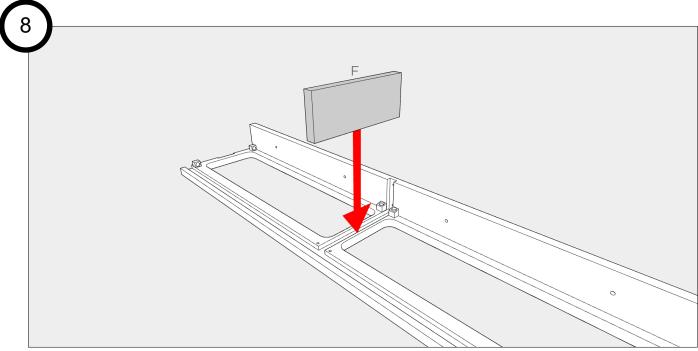


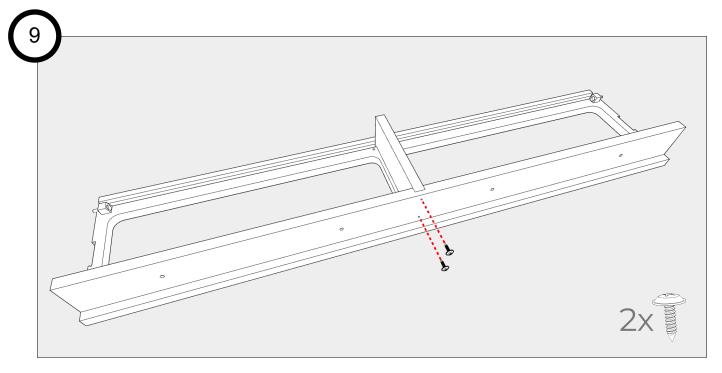


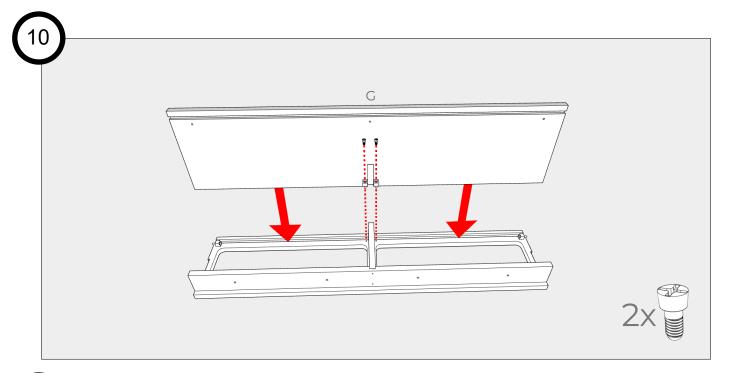


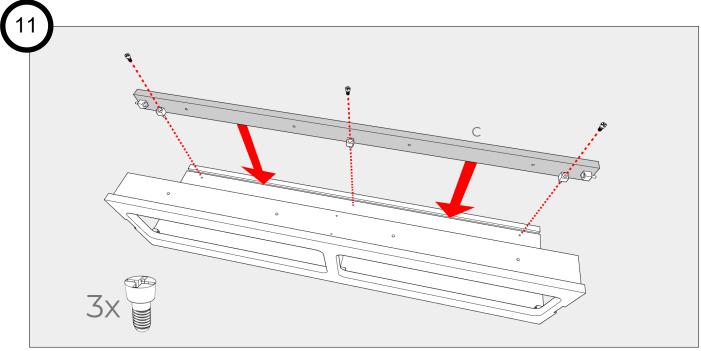

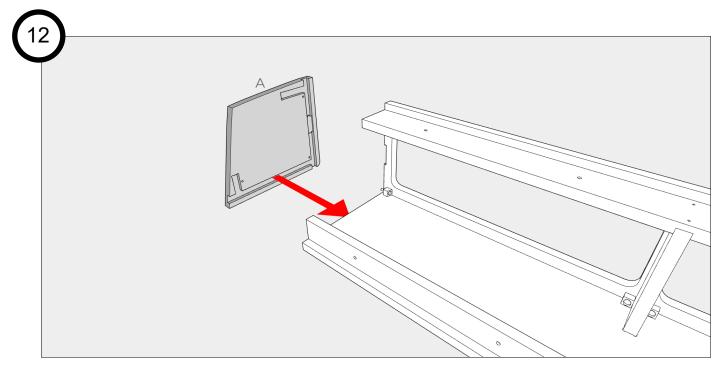

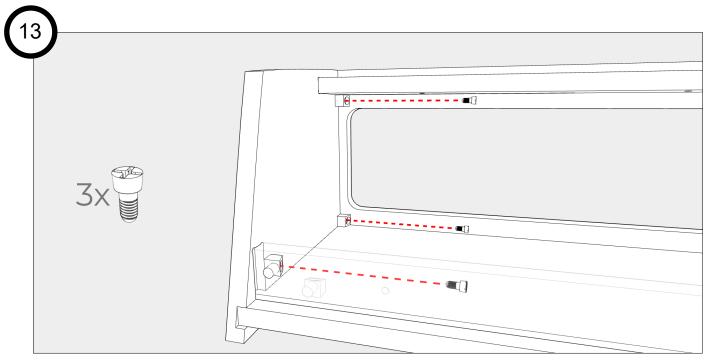


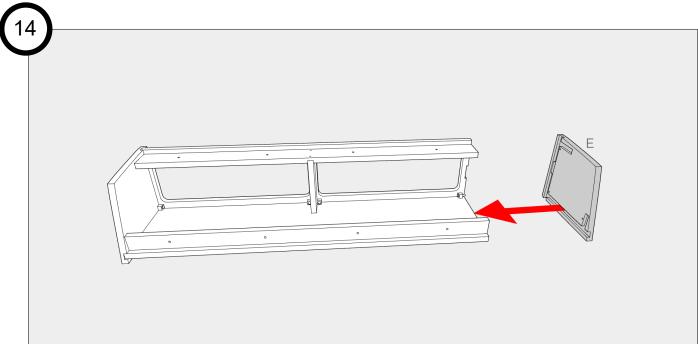

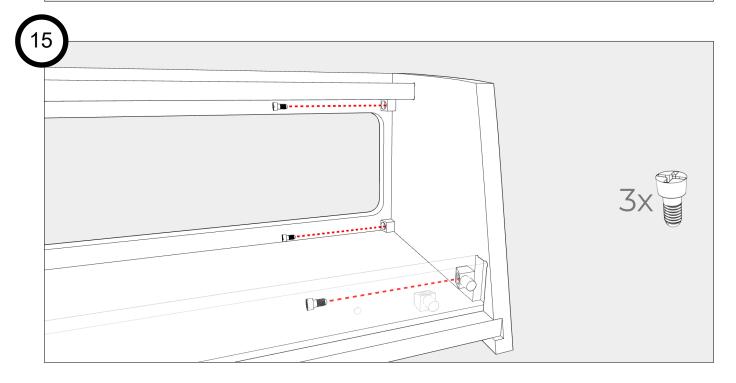

## **TIMBER**

## Overhead Cabinet Assembly Complete Congratulations!

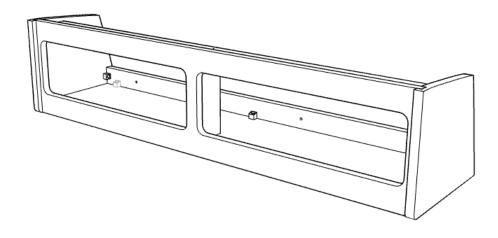

We'd love to see your finished wood cabinet in its new home! Share your photos on social media using the hashtag #TimberVanKits, and don't forget to tag us. Your creations inspire us, and we believe they will inspire others too.

Thank you once again for choosing Timber Van Kits. Your dedication and craftsmanship have brought our product to life, and we look forward to being a part of your future adventures!

## TIMBERVANKITS.COM · 720-282-5075

Have a question or issues with your product? Feel free to call us or send a message via the contact page on our website. If you call us and we can't get to the phone please leave us a message and we'll get back to you as soon as we can.



instagram.com/timbervankits